

Technical catalogue - Preliminary

# SACE FORMULA New low voltage moulded-case circuit-breakers up to 630A







# **Main characteristics** 2 **Circuit-breakers for power distribution** 3 Accessories Characteristic curves and 4 technical information 5 Wiring diagrams 6 **Overall dimensions** Glossary

# SACE FORMULA. Simplicity and Quality in a Single Product.



SACE FORMULA is the expression of all ABB SACE's long experience of several decades in all its effectiveness: SACE FORMULA was born basic, but is able to amaze with its extreme versatility of use.

The main strong points of the new moulded-case circuit-breakers are:

- just a few but essential versions of the circuit-breakers, easy to select and order;
- availability of circuit-breakers of all polarities, dedicated to the various applications;
- possibility of using the accessories most often requested;
- circuit-breaker depths further reduced;
- a new installation system making assembly of the circuit-breakers easier;
- suitable for use at 50°C without derating.





The new SACE FORMULA family consists of three new A1, A2 and A3 frames which reach up to 125A, 250A and 630A respectively.

The three frames are available in the fixed version, with front terminals.

The protection trip unit has fixed thermal and magnetic threshold values for putting the circuit-breaker into service more rapidly. This way selection becomes simple and precise. Whit a few sales codes which simplify selection and make ordering easier. Installation is simplified, and thanks to easy and rapid fixing operations and set-up, the circuit-breaker is ready for use immediately.

# SACE FORMULA. The Easy and Precise Choice.



How simple and functional can a range of moulded-case circuit-breakers be? It was answering this question, which would appear very elementary, that the idea for a new family of circuit-breakers was conceived at ABB SACE. The result is SACE FORMULA, the perfect synthesis between ABB SACE's recognized quality, reliability and all-round simplicity: with regards to installation, sizing and fitting with accessories. Reducing the dimensions without compromising on performance and reliability further helps installation, increasing the work space inside the switchboards. Compactness of dimensions is a great advantage, especially for OEMs, panel builders and installers.



# SACE FORMULA. Winners in All Applications.





Quality is great versatility. In addiction to proposing all three frames in the three-pole and four-pole version, for the first time ABB SACE now proposes single-pole and two-pole versions up to 250A, opening the door to the most varied application fields. Quality is compact overall dimensions. The SACE FORMULA A1 and A2 depth of just 60 mm is the lowest on the market up to 250A. Simplicity is this, too.



# Main characteristics

# Content

 
General information	<b>1</b> /2
Regulations and reference Standards	<b>1</b> /3
Identification of the SACE FORMULA circuit-breakers	<b>1</b> /4

# **Construction characteristics**

# General information




Double insulation



Installation positions



Positive operation

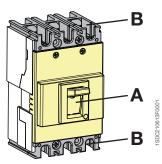

Protection degrees



Test pushbotton

The references in round brackets (Gue) in the technical catalogue refer to the Glossary in the final charter of the technical catalogue.

All the moulded-case circuit-breakers in the SACE FORMULA family are constructed in accordance with the following construction characteristics:

- double insulation<sup>(G1.4)</sup>;
- positive operation<sup>(G1.5)</sup>;
- isolation behaviour(G1.6);
- electromagnetic compatibility<sup>(G1.7)</sup>;
- tropicalization<sup>(G1.8)</sup>;
- power supply from the top towards the bottom or vice versa;
- versatility of the installation. It is possible to mount the circuit-breaker either in the horizontal, vertical, or lying down position without undergoing any derating of the rated characteristics;
- no nominal performance derating for use up to an altitude of 2000m. Above 2000m, the
  properties of the atmosphere (composition of the air, dielectric strength, cooling power and
  pressure) change, having an impact on the main parameters which define the circuit-breaker.
  The table below gives the changes to the main performance parameters;

Altitude		2000m		300	)0m	400	)0m	5000m	
		A1	A2-A3	A1	A2-A3	A1	A2-A3	A1	A2-A3
Rated service voltage, Ue	[V]	500	550	440	484	390	429	340	374
Rated uninterrupted current	%	100	100	98	98	95	95	90	90

- SACE FORMULA circuit-breakers can be used in ambient with a temperature between -25°C +70°C and stored in a room with atmospheric temperature between -40°C +70°C.
   SACE FORMULA circuit-breakers listed below are designed to hold 100% In at 50°C without tripping in normal condition:
- SACE A1 and A2, up to 250A (except A1 125);
- SACE A3 300-400A special version 50°C.

For detailed temperature performances of all SACE FORMULA breakers, please refer to paragraph "Temperature performances" in the Characteristic Curves and Technical Information Chapter;

• different protection degrees IP (International Protection) (G1.2);

	Circuit-breaker with front	Circuit-breaker without front <sup>(1)</sup>	Circuit-breaker with RHE RHD		Circuit-breaker with LTC	Circuit-breaker with FLD
А	IP 40	IP 20	IP 40	IP 40	IP 40	IP 40
В	IP 20	IP 20	IP 20	IP 40	IP 30	IP 20
(1) Duri	ng installation of the e	lectrical accessories	•••••••••••••••••••••••••••••••••••••••	•••••••••••••••••••••••••••••••••••••••	•	•••••••••••••••••••••••••••••••••••••••

• circuit-breaker weights;

Weights	A1 [Kg]	A2 [Kg]	A3 [Kg]
Circuit-breaker 1 pole	0.245	0.37	-
Circuit-breaker 2 poles	0.47	0.73	-
Circuit-breaker 3 poles	0.7	1.1	3.25
Circuit-breaker 4 poles	0.925	1.145	4.15

• all the SACE FORMULA circuit-breakers are fitted with a Test pushbutton which allows the release test to be done. This test must be carried out with the circuit-breaker closed.

# **Construction characteristics**

Regulations and reference Standards



Hologram

#### Conformity with Standards

- The SACE FORMULA circuit-breakers and their accessories are constructed in conformity with:
  - Standards (G.4.1):
  - -IEC 60947-2;
- Directives<sup>(G.4.2)</sup>:
  - -EC directive: "Low Voltage Directives" (LVD) no. 2006/95/CE (in replacement of 73/23/ CEE and subsequent amendments);
  - -EC directive: "Electromagnetic Compatibility Directive" (EMC) no. 89/336 EEC.

Certification of conformity with the product Standards is carried out in the ABB SACE test room (accredited by SINAL - certificate No. 062/1997-) in respect of the EN 45011 European Standard, by the Italian certification body ACAE (Association for Certification of Electrical Apparatus), member of the European LOVAG organisation (Low Voltage Agreement Group) and by the Swedish certification body SEMKO belonging to the international IECEE organisation.

The SACE FORMULA series has a hologram on the front, obtained using special anti-forgery techniques, a guarantee of the quality and genuineness of the circuit-breaker as an ABB SACE product.

#### **Company Quality System**

The ABB SACE Quality System conforms with the following Standards:

- ISO 9001 international Standard;
- EN ISO 9001 (equivalent) European Standards;
- UNI EN ISO 9001 (equivalent) Italian Standards.

The ABB SACE Quality System attained its first certification with the RINA certification body in 1990.

#### Environmental Management System, Social Responsibility and Ethics

Attention to protection of the environment is a priority commitment for ABB SACE. Confirmation of this is the realisation of an Environmental Management System certified by RINA (ABB SACE was the first industry in the electromechanical sector in Italy to obtain this recognition) in conformity with the International ISO14001 Standard. In 1999 the Environmental Management System was integrated with the Occupational Health and Safety Management System according to the OHSAS 18001 Standard and later, in 2005, with the SA 8000 (Social Accountability 8000) Standard, committing itself to respect of business ethics and working conditions.

The commitment to environmental protection becomes concrete through:


- selection of materials, processes and packaging which optimise the true environmental impact of the product;
- use of recyclable materials;
- voluntary respect of the RoHS directive<sup>(G4.3)</sup>.

# Construction characteristics


# Identification of the SACE FORMULA circuit-breakers

The characteristics of the circuit-breakers are given on the label on the front of the circuitbreaker, and on the side label.

#### Front label

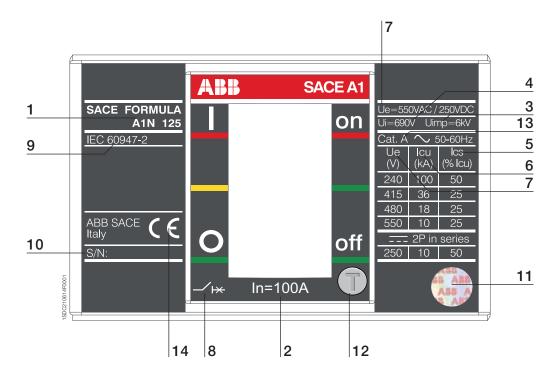

#### Side label

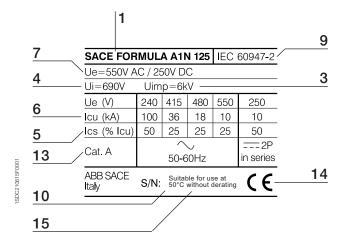

- 1. Name of the circuit-breaker and performance level;
- In: rated uninterrupted current\*;
   Uimp: rated impulse withstand voltage\*;
- Ui: insulation voltage\*;
- Ics: rated short-circuit service breaking capacity\*;
- Icu: rated ultimate short-circuit breaking capacity\*;
- 7. Ue: rated service voltage\*;
- 8. Symbol of isolation behaviour\*;
- 9. Reference Standard IEC 60947-2\*;10. Serial number;
- **11.** Anti-forgery;
- **12.** Test pushbutton;
- **13.** Category of use;
- 14. CE Marking;
- **15.** Utilization at 50°C (except for A1 125A).

\* in compliance with the IEC 60947-2 Standard

**1/**4



# **ABB** Circuit-breakers for power distribution

# Content

General characteristics	<b>2</b> /2
Thermomagnetic trip units	<b>2</b> /4
Ordering codes	<b>2</b> /5
Electronic trip units	<b>2</b> /9
Ordering codes	<b>2</b> /9

# **Circuit-breakers for power distribution**


# General characteristics


The SACE FORMULA circuit-breakers from 15A to 630A consist of the interruption part together with the trip unit and they can be installed:

- directly on the back plate of the cubicles;
- on a DIN rail (A1 and A2);
- back door (A1, A2 and A3, 2-3 4 poles).

They are characterised by:

- fixed version;
- polarity: 1 pole (A1 and A2), 2 poles (A1 and A2), 3 poles (A1, A2 and A3), 4 poles (A1, A2 and A3);
- maximum breaking capacity of 36kA for A1 and A2 and of 50kA for A3 at 415V AC;
- fixed thermomagnetic trip unit (TMF) for protection of networks in alternating and direct current (A1, A2, A3);
- ELT LI electronic trip unit with fixed thresholds for the protection of networks in alternating current (A3);
- only two depths: 60mm (A1, A2) and 103.5mm (A3);
- standard front terminals;
- the possibility of use at 50°C without derating up to 250A (exceptr for A1 125A);
- a special version for A3 300A-400A for use at 50°C.

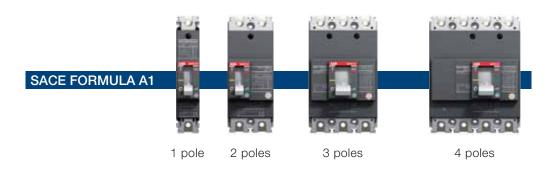

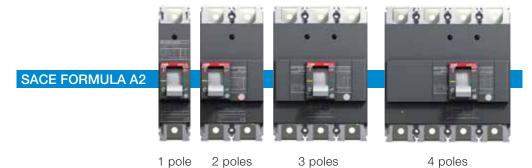



3 poles

**2/**2


						A1						A	2			A	13
Frame size (G2.1)		[A]				125						2	50			400/630	
Rated current, In (G2.2)		[A]		15125						125250					320630		
Poles		[Nr]		1, 2, 3, 4						1, 2, 3, 4					3, 4		
Rated service voltage, Ue	(G2.3) (AC) 50-60 Hz	[V]		550 (2p-3p-4p); 415 (1p)						550 (2	2p-3p-	4p); 41	5 (1p)	••••••	5	50	
	(DC)	[V]		••••••	••••••	3p-4p)	•••••	••••••	•••••		250 (2p-3p-4p); 125 (1p)				250		
Rated insulation voltage, U	(G2.4)	[V]		•••••	•••••	690		•••••	•••••			6	90	•••••	•••••	6	90
Rated impulse withstand v	oltage, Uimp (G2.5)	[kV]	6						••••••		6	••••••	•••••	(	6		
Versions				••••••	••••••	Fixed	••••••	••••••	••••••		••••••	Fix	ked	••••••	••••••	Fix	ked
Performance Level			Α	в	(	С		Ν		В	(	С		N		N	S
Poles		[Nr]	3/4	3/4	1	3/4	1	2	3/4	3/4	1	3/4	1	2	3/4	3/4	3/4
••••••••••••••••••••••••	uit breaking capacity, Icu (G2	÷			<u>.</u>			<u>.</u>			<u>.</u>			<u>.</u>			
Icu @ 240 V 50-60 Hz (AC)	• •••••••••••••••••••••••••••••••••••••	[kA]	10	25	18	30	25	50	100	25	18	50	25	50	85	85	100
Icu @ 380 V 50-60 Hz (AC)	•••••••••••••••••••••••••••••••••••••••	[kA]	10	18	2.5	25	5	36(5)	36(5)	18	2.5	25	5	36	36	36	50
Icu @ 415 V 50-60 Hz (AC)	•••••••••••••••••••••••••••••••••••••••	[kA]	10	18	2.5	25	5	36(5)	36(5)	18	2.5	25	5	36	36	36	50
Icu @ 440 V 50-60 Hz (AC)	•••••••••••••••••••••••••••••••••••••••	[kA]	8	15	-	20	-	25	25	15		20	-	25	25	36	50
Icu @ 480 V 50-60 Hz (AC)	•••••••••••••••••••••••••••••••••••••••	[kA]	7.5	10		15	-	18	18	15	_	18	_	18	25	25	35
Icu @ 500 V 50-60 Hz (AC)	•••••••••••••••••••••••••••••••••••••••	[kA]	5	5	-	8	-	10	10	5	-	8	-	10	10	20	25
Icu @ 550 V 50-60 Hz (AC)	•••••••••••••••••••••••••••••••••••••••	[kA]	5	5	-	8	-	10	10	5	-	8	-	10	10	20 15	20
		[kA]	5	- 5	- 5	-	- 10	10	- 10	- 5	- 5	-	- 10	- 10	-	10	20
	Icu @ 125 V (DC) 1 pole		- 5	- 5	5	- 10	10	- 10	- 10	- 18		- 25	- 10	- 10	- 36	- 36	50
Icu @ 250 V (DC) 2 poles in		<u>[</u> [kA]	5	5	-	10	-	10	10	10	-	20	-	10	30	30	50
•••••••••••••••••••••••••••••••••••••••	ce breaking capacity, Ics (G2.7		50%	50%	50%	50%	50%	50%	50%	50%	50%	50%	50%	50%	50%	50%	50%
Ics @ 240 V 50-60 Hz (AC)	•••••••••••••••••••••••••••••••••••••••	[kA]	÷	÷							÷	• • • • • • • • • • • • • • • • • • • •	÷		÷		
Ics @ 380 V 50-60 Hz (AC)	•••••••••••••••••••••••••••••••••••••••	[kA] [kA]	50%	50%	50%	50%	50%	50%	50%	÷	100%	• • • • • • • • • • • • • • • • • • • •	50%	<u>.</u>	50%	50%	50%
	Ics @ 415 V 50-60 Hz (AC)		÷	25%(1)	50%	25%	25%	25%	25%	÷	100%	• • • • • • • • • • • • • • • • • • • •	50%	50%	50%	50%	50%
Ics @ 440 V 50-60 Hz (AC)	•••••••••••••••••••••••••••••••••••••••	[kA]	+	25% <sup>(1)</sup>	-	25%	-	25%	25%	50%	-	50%	-	50%	50%	50%	50%
cs @ 480 V 50-60 Hz (AC)		[kA]	50%	50%	-	25% <sup>(2)</sup>	-	25%	25%	50%	-	50%	-		50%	50%	50%
cs @ 500 V 50-60 Hz (AC)		[kA]	50%	50%	-	25%(3)	-	25%	25%	50%	-	50%	-		50%	50%	50%
Ics @ 550 V 50-60 Hz (AC)	•••••••••••••••••••••••••••••••••••••••	[kA]	50%	50%	-	25%(3)	-	25%	25%	50%	-	50%	-	50%	50%	50%	50%
Ics @ 250 V (DC) 2 poles in		[kA]	50%	50%	50%	50%	50%	50%	50%	50%	50%	50%	50%	50%	50%	50%	50%
Rated short-circuit makir																	
Icm @ 240 V 50-60 Hz (AC	·'••••••••••••••••••••••••••••••••••••	[kA]	+	52.5	36	63	52.5	105	220	52.5	36	105	52.5	105	187	187	220
Icm @ 380 V 50-60 Hz (AC		[kA]	17	36	3.8	52.5	7.5	75.6	75.6	36	3.8	52.5	7.5		75.6	75.6	105
Icm @ 415 V 50-60 Hz (AC	.′•••••••••••••••••••••••••••••••••••••	[kA]	17	36	3.8	52.5	7.5	63	63	36	3.8	52.5	7.5	75.6	75.6	75.6	105
Icm @ 440 V 50-60 Hz (AC		[kA]	13.6	30	-	40	-	52.5	52.5	30	-	40	-	÷	52.5	75.6	105
Icm @ 480 V 50-60 Hz (AC		[kA]	+	17	-	30	-	36	17	30	-	36	-	36	52.5	52.5	73.5
Icm @ 500 V 50-60 Hz (AC	.′•••••••••••••••••••••••••••••••••••••	[kA]	7.5	7.5	-	13.6	-	17	17	7.5	-	13.6	-	17	17	40	52.5
Icm @ 550 V 50-60 Hz (AC	,	[kA]	7.5	7.5	-	13.6	-	17	17	7.5	-	13.6	-	17	17	30	40
Utilization category (IEC 60	)947-2) (62.9)			••••••		A		<b>.</b>	<b>.</b>	A				A			
Hold 100% In at 50°C		[A]		<b>.</b>	•••••	1510	•••••	<b>.</b>	••••••	125250				300-400 <sup>(4)</sup>			
Reference Standard				••••••	IEC	C 6094	7-2	••••••	••••••	IEC 60947-2					IEC 60	)947-	
Isolation behaviour				·····				<b>.</b>	<b>.</b>						••••••		
Fixing onto DIN rail		<u> </u>		•••••	DIN	EN 50	022	<b>.</b>	••••••	DIN EN 50022					••••••		-
Mechanical life (G2.10)	[No. opera	••••••	•	<b>.</b>	<b>.</b>	8500		<b>.</b>	••••••		••••••	••••••	000	••••••	••••••	÷	000
Electrical life @ 415 V (AC)	• •••••••••••••••••••••••••••••••••••••	******		••••••	••••••	1500	••••••	••••••	••••••		••••••	• • • • • • • • • • • • • • • • • • • •	000	••••••	••••••	÷	000
Total opening time	Shunt opening release (SOR)	÷	+	·····		15			<b>.</b>		••••••	••••••	5	<b>.</b>	••••••	******	5
	Undervoltage release (UVR)	[ms]	÷	•••••		15			••••••		••••••	••••••	5	••••••	•••••	$\leq$	25
Dimensions	1 pole	[mm]		•••••	••••••	4x60x	••••••	••••••	••••••		••••••	••••••	0x150	••••••	•••••		-
(Width x Depth x Height)	2 poles	[mm]	 	•••••	50.	.8x60x	130	••••••			••••••	70x6	0x150	••••••	••••••		-
	3 poles	[mm]			76.	2x60x	130					105x6	0x150			139 103 20	9.5x 3.5x 05
	4 poles	[mm]		•••••	101	.6x60×	130	•••••	•••••		•••••	140x6	0x150	••••••	•••••		36x 3.5x 05
·····		<b>F</b> 1 1		••••••	••••••	0.045	••••••	••••••	••••••		••••••			••••••	••••••	20	72
	1 pole	[kg]		·····		0.245	•••••		••••••			••••••	370	••••••	••••••		-
Weight	2 poles	[kg]		••••••	••••••	0.470	••••••	••••••	••••••			••••••	730	••••••	••••••		-
	3 poles	[kg]		••••••	••••••	0.700	•••••	••••••	••••••		••••••	••••••	100	••••••	••••••	3.25	
	4 poles	[kg]	<u>.</u>	••••••	•••••	0.925	•••••	••••••	••••••	<u>.</u>	••••••	1.4	450	••••••	••••••	4.15	
Trip Unit (G3.1)				<b>.</b>			•••••		••••••						••••••	-	•••••
Thermomagnetic TMF (G3.2)				••••••				••••••			<b>.</b>			••••••	••••••		to 500
Electronic ELT LI (G3.3)		:	÷							1						up (up	to 630

# **Circuit-breakers for power distribution**

Thermomagnetic trip unit

The thermomagnetic trip units TMF, available for A1, A2 and A3, with fixed thermal and magnetic threshold, are generally used in power distribution plants. They allow protection against overloads thanks to the thermal device and protection against short-circuit thanks to magnetic device:

- thermal protection (L): fixed threshold I1= 1x1In, with long inverse time trip curve;
- magnetic protection (I): fixed threshold I3= 10xIn, with instantaneous trip curve;
- neutral at 100% for four-pole circuit-breakers.

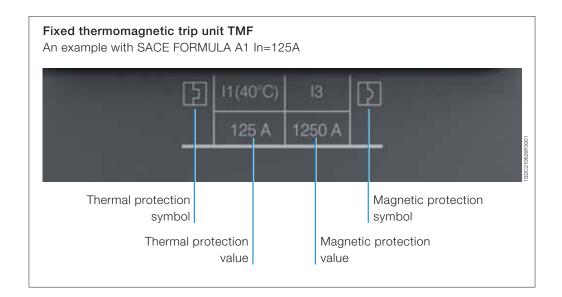

# SACE FORMULA A1 with trip unit TMF

CACE FORMULA AQ with this unit TME

1 1011																
L	In [A]	15	16	20	25	30	32	40	50	60	63	70	80	90	100	125
l1= 1xln	Neutral [A] - 100%	15	16	20	25	30	32	40	50	60	63	70	80	90	100	125
	I3 [A]	300	300	300	300	300	320	400	500	600	630	700	800	900	1000	1250
l3= 10xln	Neutral [A] - 100%	300	300	300	300	300	320	400	500	600	630	700	800	900	1000	1250

SAGE FORMOLA AZ WITH THE UNIT THE									
TMF									

L	L In [A]		150	160	175	200	225	250
l1= 1xln	Neutral [A] - 100%	125	150	160	175	200	225	250
	I3 [A]	1250	1500	1600	1750	2000	2250	2500
l3= 10xln	Neutral [A] - 100%	1250	1500	1600	1750	2000	2250	2500

### SACE FORMULA A3 with trip unit TMF

TMF				
L	In [A]	320	400	500
l1= 1xln	Neutral [A] - 100%	320	400	500
	I3 [A]	3200	4000	5000
13= 10xln	Neutral [A] - 100%	3200	4000	5000

	1SDA	AR1
In I3	<b>C</b> (18kA)	<b>N</b> (25kA)
15 300	066485	
16 300	068745	
20 300	066486	066686
25 300	066487	066687
30 300	066488	066688
32 320	068754	068755
40 400	066489	066689
50 500	066490	066690
60 600	066491	066691
63 630	068765	068766
70 700	066492	066692
80 800	066493	066693
90 900	066494	066694
00 1000	066495	066695
25 1250	066496 (1)	066696 <sup>(1)</sup>

### Ordering codes for circuit-breakers with thermomagnetic trip units

### A1 125A - Fixed (F) 2 poles - Front terminals (F) - Hold 100% In at 50°C

Thermomagnetic	trip unit	- TMF	lcu (415 V)	

		1SDAR1
In	13	<b>N</b> (36kA)
15	300	068789 <sup>(2)</sup>
16	300	068790
20	300	066497
25	300	066498
30	300	066499
32	320	068756
40	400	066500
50	500	066501
60	600	066502
63	630	068767
70	700	066503
80	800	066504
90	900	066505
100	1000	066506
125	1250	066507 (1)
1) Dera	ting for use at 50°C; <sup>(2)</sup> 30kA	





# **Circuit-breakers for power distribution**

Thermomagnetic trip unit

Ordering codes for circuit-breakers with thermomagnetic trip units

herr	momagne	etic trip unit - TMF	cu (415 V)		
1SDAR1					
In	13	<b>A</b> (10kA)	<b>B</b> (18kA)	<b>C</b> (25kA)	<b>N</b> (36kA)
15	300	066510	066697	066709	066721 (2
16	300	068746	068747	068748	068749
20	300	066511	066698	066710	066722
25	300	066512	066699	066711	066723
30	300	066513	066700	066712	066724
32	320	068757	068758	068759	068760
40	400	066514	066701	066713	066725
50	500	066515	066702	066714	066726
60	600	066516	066703	066715	066727
63	630	068768	068769	068770	068771
70	700	066517	066704	066716	066728
80	800	066518	066705	066717	066729
90	900	066519	066706	066718	066730
100	1000	066520	066707	066719	066731
125	1250	066521 (1)	066708 (1)	066720 (1)	066732 (1)

#### A1 125A - Fixed (F) 4 poles - Front terminals (F) - Hold 100% In at 50°C Thermomagnetic trip unit - TMF Icu (415 V)

			1SDA	R1	
In	13	<b>A</b> (10kA)	<b>B</b> (18kA)	<b>C</b> (25kA)	<b>N</b> (36kA)
15 3	300	066524	066733	066745	066757 (2)
16 3	300	068750	068751	068752	068753
20 3	300	066525	066734	066746	066758
25 3	300	066526	066735	066747	066759
30 3	300	066527	066736	066748	066760
32 3	320	068761	068762	068763	068764
40 4	400	066528	066737	066749	066761
50 5	500	066529	066738	066750	066762
60 6	500	066530	066739	066751	066763
63 6	630	068772	068773	068774	068775
70 7	700	066531	066740	066752	066764
80 8	300	066532	066741	066753	066765
90 9	900	066533	066742	066754	066766
100 10	000	066534	066743	066755	066767
125 12	250	066535 (1)	066744 (1)	066756 (1)	066768 (1)







A2 250A - Fixed (F)	1 pole - Front terminals (F)	- Hold 100% In at 5	0°C
Thermomagnetic tri	p unit - TMF Icu (240 V)		
		1SDAR1	
ln 13	<b>C</b> (18kA)		<b>N</b> (25

In	13	<b>C</b> (18kA)	<b>N</b> (25kA)
125	1250	066536	066769
150	1500	068776	068777
160	1600	066537	066770
175	1750	066538	066771
200	2000	066539	066772
225	2250	066540	066773
250	2500	066541	066774

#### A2 250A - Fixed (F) 2 poles - Front terminals (F) - Hold 100% In at 50°C

Therr	Thermomagnetic trip unit - TMF Icu (415 V)			
		1SDAR1		
In	13	<b>N</b> (36kA)		
125	1250	066542		
150	1500	068778		
160	1600	066543		
175	1750	066544		
200	2000			
225	2250			
200	2500	066547		

#### A2 250A - Fixed (F) 3 poles - Front terminals (F) - Hold 100% In at 50°C Thermomagnetic trip unit - TMF Icu (415 V)

	1SDAR1			
<b>B</b> (18kA)	<b>C</b> (25kA)	<b>N</b> (36kA)		
066548	066775	066781		
068779	068780	068781		
066549	066776	066782		
066550	066777	066783		
066551	066778	066784		
066552	066779	066785		
066553	066780	066786		
	B (18kA) 066548 068779 066549 066550 066551 066552	ISDAR1           B (18kA)         C (25kA)           066548         066775           068779         068780           066549         066776           066550         066777           066551         066778           066552         066779		

### A2 250A - Fixed (F) 4 poles - Front terminals (F) - Hold 100% In at 50°C

		1SDAR1	
In I3	<b>B</b> (18kA)	<b>C</b> (25kA)	<b>N</b> (36kA)
125 125	066554	066787	066793
150 150	00 068782	068783	068784
160 160	00 066555	066788	066794
175 175	066556	066789	066795
200 200	00 066557	066790	066796
225 225	066558	066791	066797
250 250	00 066559	066792	066798







# **Circuit-breakers for power distribution**

Thermomagnetic trip unit

A3 400A - Fixed (F) 3 poles - Front terminals (F) Thermomagnetic trip unit - TMF Icu (415 V)

500 5000

#### Ordering codes for circuit-breakers with thermomagnetic trip units

066564



		1SDAR1
In I3	<b>N</b> (36kA)	<b>S</b> (50kA)
320 3200	066560	066562
400 4000	066561	066563
3 630A - Fixed (F)	3 poles - Front terminals (F)	
	p unit - TMF Icu (415 V)	
		1SDAR1

066565



Thermomagnetic trip	o unit - TMF Icu (415 V)	
	1SDA	R1
In I3	<b>N</b> (36kA)	<b>S</b> (50kA)
320 3200	066568	066570
400 4000	066569	066571
A3 630A - Fixed (F) 4	4 poles - Front terminals (F)	
,	4 poles - Front terminals (F) o unit - TMF Icu (415 V)	
,		R1
,	o unit - TMF Icu (415 V)	<b>R1</b> <b>S</b> (50kA)

### Ordering codes A3 special version 50°C


A3 400A - Fixed (F) 3 poles - Front terminals (F) - Hold 100% In at 50°C					
Thermomagnetic trip unit - TMF Icu (415 V)					
	1SDAR1				
In I3	<b>N</b> (36kA)				
300 3000	068809				
400 4000	068810				

# Circuit-breakers for power distribution

Electronic trip unit

The ELT LI electronic trip unit, only available for A3, provides protection functions against overload L and short-circuit I:

- protection against overload (L): fixed threshold I1=630A, with long inverse time trip curve;
- protection against short-circuit (I): fixed threshold I3=6000A, with instantaneous time trip curve;
- neutral at 100% for four-pole circuit-breakers.

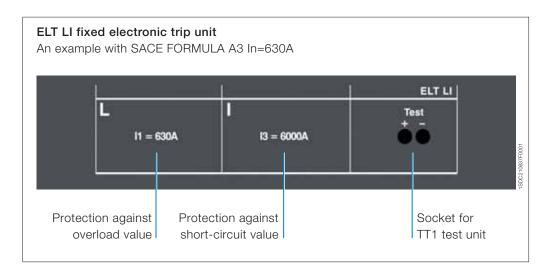

Protection function	Trip threshold	Trip curve	Excludability	Relation
Against overload with long inverse time delay trip according to IEC 60947-2 Standard	Fixed threshold I1=630A Tolerance: trip between 1.11.30xl1	t1= 12 s at 6xl1 Tolerance: ± 10% up to 6xln ± 20% above 6xln	no	t=k/l <sup>2</sup>
Against short-circuit with instantaneous trip with fixed threshold	Fixed threshold I3=6000A Tolerance: ± 10%	instantaneous	no	t=k

#### Ordering codes for circuit-breakers with electronic trip units



Electronic trip unit -	ELT LI Icu (415 V)		
		1SDAR1	
In I3	<b>N</b> (36kA)		<b>S</b> (50kA)
630 6000	066566		066567
A3 630A - Fixed (F) 4	l poles - Front terminals (F)	)	
Electronic trip unit -	ELT LI Icu (415 V)		
		1SDAR1	
In I3	<b>N</b> (36kA)		<b>S</b> (50kA)
630 6000	066574		066575


Trip test unit	1SDAR1
TT1 - Trip test unit	037121




# Content

Panorama of accessories	<b>3</b> /2
Mechanical accessories	
Connection terminals	<b>3</b> /4
Ordering codes	<b>3</b> /6
Terminal covers, phase separators and sealable screws	<b>3</b> /7
Ordering codes	<b>3</b> /7
Rotary handle operating mechanism	<b>3</b> /8
Ordering codes	<b>3</b> /8
Front for lever operating mechanism	<b>3</b> /9
Ordering codes	<b>3</b> /9
Locks	<b>3</b> /9
Ordering codes	<b>3</b> /10
Bracket for fixing onto DIN rail	<b>3</b> /11
Ordering codes	<b>3</b> /11
Electrical accessories	
Service releases	<b>3</b> /12
Ordering codes	<b>3</b> /13
Auxiliary contacts for electric signals	<b>3</b> /14
Ordering codes	<b>3</b> /14
FORMULA Link	<b>3</b> /16
Ordering codes	<b>3</b> /19


# Panorama of the accessories

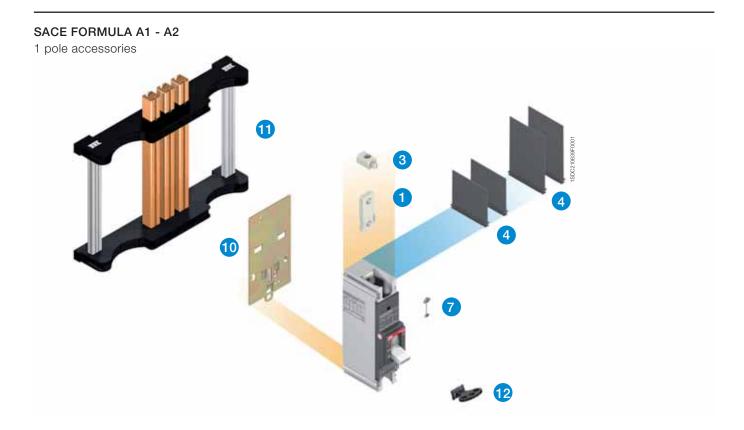

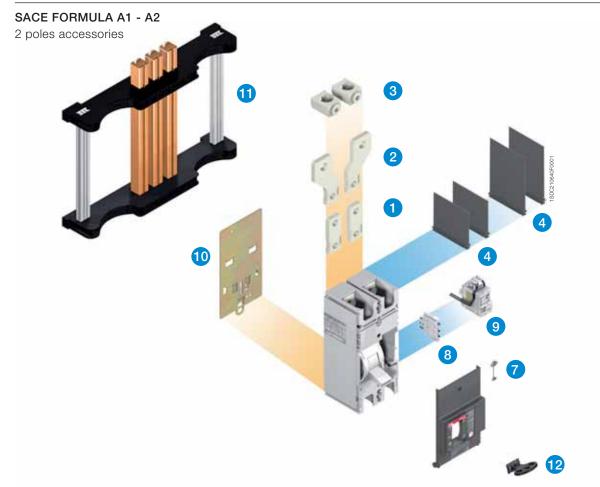

The assembly of all the SACE FORMULA accessories has to be provided by the Customer.

SACE FORMULA A1 - A2 - A3 3poles/4poles accessories

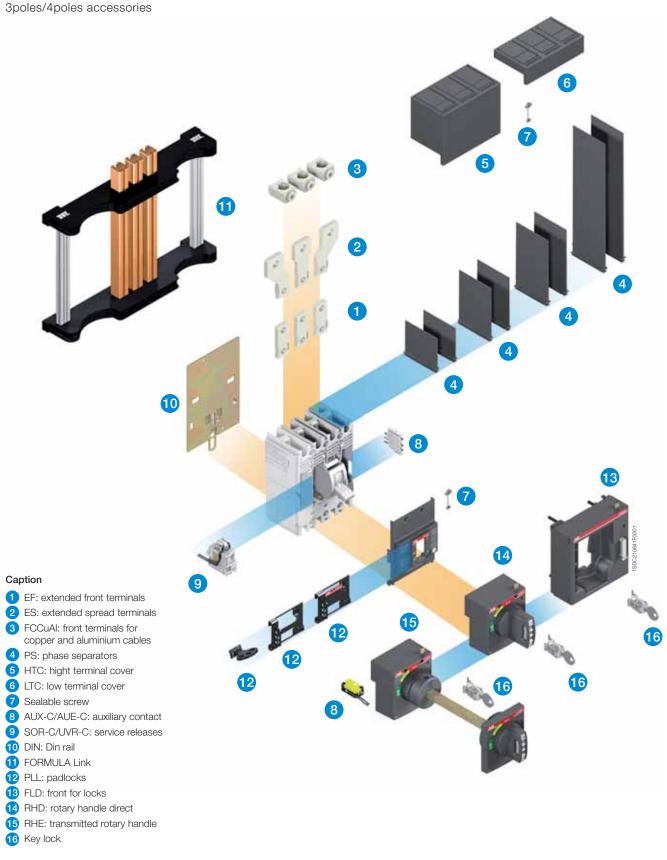

The assembly of all the SACE FORMULA accessories has to be provided by the Customer.

## Mechanical accessories

#### Connection terminals

The connection terminals allow the circuit-breaker to be connected to the plant in the most suitable way in relation to installation requirements.

The front terminals allow cables or busbars to be connected acting directly from the front of the circuit-breaker (cable lugs to be provided by the Customer).

Different types of terminals can be combined (one type for the line and a different one for the load side).

Standard version of circuit-breaker is supplied with front terminals (F). By ordering the special kits or half-kits, it is also possible to select among the following types:

- front extended terminals (EF);
- front extended spread terminals (ES);
- front terminals for Copper and Aluminium cables (FCCuAl).

#### Front terminals - F

		Bu		imensi AX	ons	li	ıble ug ım]	[		ing torques nsion] and [N	lm]	Te	ermina [m	l cove m]	ers		Sepa [m	rators Im]	
Туре	Poles	W	Н	D	ø	W	ø	Tern	ninal	Cable o	r busbar	2	7.5	50	60	50	80	100	200
A1	1234	15	6	5	6.5	15	6.5	-	-	M6	4	-	-	R	-	S	-	R	-
A2 (1)	1234	25	8	6	8.5	24	8.5	-	-	M8	8	-	-	-	R	-	S	R	-
A3	34	35	11	10	10.5	35	10.5	-	-	M10	28	R	-	-	R	-	-	R	R

(1) Insulation of the switchboard door mandatory



Terminal F



Terminal F with cable lug



Terminal F with busbar

 
Front E	xtended		als - EF par dimen MAX	isions	h	ıble ıg ım]	1		ing torques nsion] and [N	lm]	Te	ermina [m	ll cove im]	ers			rators nm]	
Туре	Poles	W	D	ø	W	ø	Terr	ninal	Cable o	r busbar	2	7.5	50	60	50	80	100	200
A1	1234	15	5	8.5	15	8.5	M6	3	M8	9	-	-	R	-	[2]	-	R	-
A2 (1)	1234	25	6	9	NA	NA	M8	8	M8	9	-	-	-	R	-	[2]	R	-
A3	34	30	7	11	30	11	M10	28	M10	18	-	-	-	R	-	-	S	R

(1) Insulation of the switchboard door mandatory

(2) In EF terminal kit the phase separators are not provided, but for a correct installation it is necessary use the phase separators already provided with the circuit-breakers base.



Terminal EF





Terminal EF with busbar

Ordering codes locks

# Mechanical accessories

PLL - Padlocks fixed in open and closed position



Circuit-breaker with fixed padlock in open position



Circuit-breaker with fixed padlock in open and closed position



Key lock for direct handle




Key lock for transmitted handle




Key lock for front for locks

Padlocks for lever operating mechanism of the cir	rcuit-breaker
	1SDAR1
	A1-A2
PLL - Padlocks removable in open position	066259
PLL - Padlocks fixed in open position	066171


	1SDAR1				
	A1-A2	A3			
RHL-D Lock in open position, different keys	066173	054939			
RHL-S Lock in open position, same keys type A	066174	054940			
RHL-S Lock in open position, same keys type B	066175	054941			
RHL-S Lock in open position, same keys type C	066176	054942			
RHL-S Lock in open position, same keys type D	066177	054943			
RHL-D Lock in open/closed position different keys	066178				

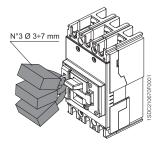

Fixed padlock in open/closed position

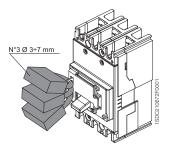


Fixed padlock in open position

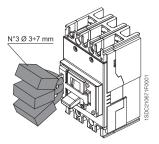

Fixed padlock in open/closed position

066172

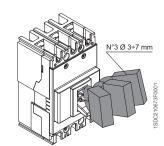

Removable padlock in open position







		Busb	ar dimen MAX	isions		ble ıg ım]	I		ning torques nsion] and [N	lm]	Т	ermina [m	ıl cove ım]	ers		Sepa [m	rators nm]	
Туре	Poles	W	D	ø	W	ø	Terr	ninal	Cable o	or busbar	2	7.5	50	60	50	80	100	200
A1	234	20	6	8.5	20	8.5	M6	3	M8	9	-	-	-	-	-	-	S	-
A2 (1)	234	30	4	10.5	NA	NA	M8	8	M10	18	-	-	-	-	-	-	S	-
A3	34	40	10	11	11	11	M10	28	M10	18	-	-	-	-	-	-	-	S

(1) Available for Ue≤480V, with Icu=50% e Ics=100%Icu. Insulation of the swithchboard door mandatory.





Terminal ES

Terminal ES with cable lug



Terminal ES with busbar

			Cal [mr		[H	-	-	orques n] and [Nm]	Length of Cable stripping	Te	rmina [m		ers	\$	•	rator: m]	3
Туре	Assembly	Poles	Rigid	Flexible	Term	inal	Cal	ole or busbar	[mm]	2	7.5	50	60	50	80	100	200
A1	Internal	1234	1x125	1x2.525	M6	3	-	1-4mm²: 1Nm 5-25mm²: 3Nm	16	-	S (1)	R	-	-	-	-	-
A1	Internal	1234	1x2550	1x2550	M6	3	-	3	16	-	S (1)	R	-	-	-	-	-
A2 (2)	Internal	1234	1x50150	1x70120	M8	5	-	15	20	-	S (1)	-	R	-	-	-	-
A2 (2)	Internal	1234	1x120185	-	M8	5	-	20	22	-	S (1)	-	R	-	-	-	-
A3	Internal	34	1x185300	-	M10	18	M16	43	23.5	R	-	-	R	-	-	R	R
A3	External	34	2x95240	-	M10	18	M22	31	30 <sup>1°cable</sup> /70 <sup>2°cable</sup>	-	-	-	S	-	-	-	-

(2) Insulation of the swithchboard door mandatory



Terminal FCCuAl



Terminal FCCuAl with cable



External terminal FCCuAl



External terminal FCCuAl with cable



NA = Not available W = Width H = Hole heigth D = Depth Ø = Diameter S = Standard R = On request

# Mechanical accessories

### Ordering codes connection terminals

Terminals						
			1SD/	AR1		
Front terminals - F	1 piece	2 pieces	3 pieces	4 pieces	6 pieces	8 pieces
A1	066200	066201	066202	066203	066204	066205
A2	066206	066207	066208	066209	066210	066211
A3			055012	055013	055010	055011
			1SD/	AR1		
Front Extended Terminals - EF	1 piece	2 pieces	3 pieces	4 pieces	6 pieces	8 pieces
A1	066212	066213	066214	066215	066216	066217
A2	066218	066219	066220	066221	066222	066223
A3			055036	055037	055034	055035
			1SD/	AR1		
Front Extended Spread Terminal - ES		2 pieces	3 pieces	4 pieces <sup>(1)</sup>	6 pieces	8 pieces
A1		066224	066225	066226	066227	066228
A2		066229	066230	066231	066232	066233
A3			055040	055041	055038	055039
			1SD/	AR1		
Front Terminals for copper aluminium cables - FCCuAl	1 piece	2 pieces	3 pieces	4 pieces	6 pieces	8 pieces
$\Delta 1.1 \times 1.25 \text{ mm}^2$	066234	066235	066236	066237	066238	066230

A1 1 x 125 mm <sup>2</sup>	066234	066235	066236	066237	066238	066239
A1 1 x 2550 mm <sup>2</sup>	066240	066241	066242	066243	066244	066245
A2 1 x 50150 mm <sup>2</sup>	066246	066247	066248	066249	066250	066251
A2 1 x 125185 mm <sup>2</sup>	066252	066253	066254	066255	066256	066257
A3 1 x 185300 mm²			055024	055025	055022	055023
A3 2 x 95240 mm <sup>2</sup>			055032	055033	055030	055031
(1) 4 poles circuit-breakers only.						



High terminal cover (HTC)



Low terminal cover (LTC)

#### Terminal covers, phase separators and sealable screws

The terminal both high (HTC) and low (LTC) covers are applied to the circuit-breaker to avoid accidental contacts with live parts and, in this way, to guarantee protection against direct contacts. The terminal covers are pre-punched for knock-out on the front to facilitate installation of busbars and/or cables, guaranteeing correct insulation.

 
The phase separator partitions (PS) allow the insulation characteristics between phases to be increased near the connections. They are mounted on the front, even with the circuit-breaker already installed, by inserting them into the corresponding slots. The phase separators are incompatible with both the high and the low terminal covers.

The lead sealing kit consists of screws which, when applied onto the terminal covers or onto the circuit-breaker front, prevent their removal, acting as a protection against direct contacts and tampering. The screws can be locked with a wire and sealed with lead.


The compulsory and optional phase separators and terminal covers needed for correct installation and insulation of the circuit-breaker are indicated in the "Connection terminals" section of the Accessories chapter and in the "Overall dimension" chapter, in correspondence with each usable terminal.



Sealable screw



 Sealable screw onto the circuit-breaker front



Sealable screw onto the terminal covers



Phase separators (PS)

Ordering codes terminal covers, phase separators and sealable screws

			1SDA	R1			
	A	.1	A	2	A3		
	3 poles	4 poles	3 poles	4 poles	3 poles	4 poles	
HTC 60mm			066186	066189	054960	054961	
HTC 50mm	066190	066185					
LTC 7.5mm	066181	066182	066183	066184			
LTC 2mm					054968	054969	
Sealable screws for terminal cover	066	673	066	673	051	504	
Sealable screws for front	068214		068	214		•••••	

#### Phase separators

				1SD/	AR1			
		A1		A2			A3	
	2 pieces	4 pieces	6 pieces	2 pieces	4 pieces	6 pieces	4 pieces	6 pieces
PS 50mm	066191	066194	066197					
PS 80mm				066192	066195	066198		
PS 100mm	066193	066196	066199	066193	066196	066199	054970	054971
PS 200mm							054972	054973

# Mechanical accessories



Direct handle (RHD)



Transmitted handle (RHE)

#### Rotary handle operating mechanism

Rotary handle operating mechanism is a control device which allows the circuit-breaker to be operated by means of a rotary handle, which facilitates circuit-breaker opening and closing thanks to its ergonomic handgrip.

There are two types of handle:

- direct (RHD): installed directly on the front of the circuit-breaker;
- transmitted (RHE): installed on the switchboard door, it acts on the circuit-breaker installed on the back of the switchboard by means of a transmission rod.

The rotary handles, in the direct and transmitted version, are available for the three-pole and four-pole A1, A2 and A3 circuit-breakers both in the standard version (grey) and in the emergency version (red on a yellow background) suitable for controlling machine tools.

Information/settings visible and accessible to the user:

- circuit-breaker nameplate;
  - indication of the 3 positions: open (OFF), closed (ON), tripped (TRIP);
  - access to the test pushbutton of rotary handle release (only RHD).

The rotary handle operating mechanisms can be ordered:

- by using the code of the version already configured (RHD and RHE);
- by composing the following three devices (only RHE):
  - rotary handle on door of the compartment: standard (RHE\_H) or emergency (RHE\_H\_ EM);
  - transmission rod of 500mm (RHE\_S). The minimum and maximum distances between the fixing surface and the door are 62.5mm and 479.5mm;
  - base for circuit-breaker (RHE\_B).

It is possible to accessorize the handles by means of a vast range of key locks and padlocks. Each rotary handle takes up to maximum 3 padlocks (7mm Ø stem). [See the "Locks" paragraph in the Accessories chapter].

The direct and transmitted rotary handle allows use of the early auxiliary contacts on closing so as to supply the undervoltage release with power early in relation to closing of the main circuitbreaker contacts [see the "Early auxiliary contacts" paragraph in the Accessories chapter].

#### Ordering codes rotary handle operating mechanism

	1SDAR1		
	A1-A2	A3	
RHD - Operating mechanism direct handle	066154	066155	
RHD EM - Operating mechanism emergency direct handle	066156	066157	
RHE - Operating mechanism transmitted handle	066158	066159	
RHE EM - Operating mechanism emergency transmitted handle	066160	066161	
RHE_S - Rod transmitted handle	066164	068952	
RHE_B - Base transmitted handle	066162	066163	
RHE_H - Transmitted handle	066165	066167	
RHE_H_EM - Emergency transmitted handle	066166	066168	

3/8

#### Front for lever operating mechanism



Front for locks (FLD)

Device which can be installed on the front of the circuit-breaker, which allows the circuitbreaker to be locked with keys and padlocks.

The front for the lever operating mechanism can only be installed on the A3 circuit-breaker in the three-pole or four-pole version. It is possible to lock the front for the lever operating mechanism by means of a vast range of key locks and padlocks. [See the "Locks" paragraph in the Accessories chapter]

#### Ordering codes front for lever operating mechanism

Front for operating mechanism	
	1SDAR1
	A3
FLD - Front for locks	066179



Fixed padlock in open position

(PLL)

Devices (with padlocks or keys) which prevent the circuit-breaker closing or opening operation. They can be applied:

Locks

directly onto the front of the circuit-breaker; •

- onto the direct/transmitted rotary handle operating mechanism; •
- onto the front for lever operating mechanisms.

All the locks of the circuit-breaker in the open position ensure isolation of the circuit according to the IEC 60947-2 Standard. The locks in closed position do not prevent release of the mechanism following a fault.

	1
10	ISDC210663F0001
2	15DQ2

Fixed padlock in open and closed position (PLL)



Removable padlock in open position (PLL)

Type of loc	ĸ	Circuit- breaker	Polarity	Optional/ Standard Supply	CB lock position	Type of Lock	Withdraw ability of Key
	PLL- Fixed padlock	A1-A2	3, 4	Optional	OPEN- CLOSED	padlocks-max 3 padlocks Ø stem 7mm (not supplied)	-
Circuit- breaker	PLL- Fixed padlock	A1-A2	3, 4	Optional	OPEN	padlocks-max 3 padlocks Ø stem 7mm (not supplied)	-
	PLL- Removable padlock	A1-A2	1,2,3,4	Optional	OPEN	padlocks-max 3 padlocks Ø stem 7mm (not supplied)	-
	Padlock in open position	A1-A2-A3	3,4	Standard	OPEN	padlocks-max 3 padlocks Ø stem 7mm (not supplied)	-
Rotary	Compartment door lock	A1-A2-A3	3,4	Standard	CLOSED	Door lock <sup>(1)</sup>	-
Handle Direct and	RHL-S Lock with key in open pos.	A1-A2-A3	3,4	Optional	OPEN	Same Ronis keys	OPEN
Transmitted	RHL-D Lock with key in open pos.	A1-A2-A3	3,4	Optional	OPEN	Different Ronis keys	OPEN
	RHL-D Lock with key in open and closed position	A1-A2	3,4	Optional	OPEN- CLOSED	Different Ronis keys	OPEN/ CLOSED
	Padlock in open position	A3	3,4	Standard	OPEN	padlocks-max 3 padlocks Ø stem 6mm (not supplied)	-
Front for Lever	Compartment door lock	A3	3,4	Standard	CLOSED	Door lock	-
Operating Mechanism	RHL-D Lock with key in open pos.	A3	3,4	Optional	OPEN	Different Ronis keys	OPEN
	RHL-S Lock with key in open pos.	AЗ	3,4	Optional	OPEN	Same Ronis keys	OPEN

ng



Bracket for fixing on DIN rail

The bracket, applied on the back of the circuit-breakers, allows installation on a standardised DIN EN 50022 rail so as to simplify mounting in standard switchboards.


The bracket for fixing on DIN rail can be used with all the circuit-breakers in the SACE FORMULA family, with the exception of A3:

• A1 in 1p, 2p, 3p, 4p version;


• A2 in 1p, 2p, 3p, 4p version.

#### Ordering codes bracket for fixing on DIN rail


Bracket for fixing on DIN rail	
	1SDAR1
	A1-A2
Bracket for 1p, 2p, 3p and 4p	066180

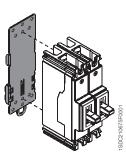

 
Bracket for DIN rail for 1p circuit-breaker



Bracket for DIN rail for 2p circuit-breaker

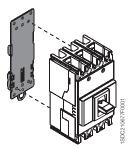

Bracket for DIN rail for 3p circuit-breaker

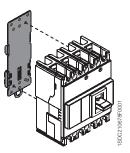

Bracket for DIN rail for 4p circuit-breaker

### **Electrical accessories**

#### Service releases



Cabled service release SOR-C and UVR-C

The cabled shunt opening release SOR-C allows circuit-breaker opening by means of a nonpermanent electrical control. Operation of the release is guaranteed for a voltage between 70% and 110% of the power supply rated voltage value Un, in both alternating and direct current. It is fitted with an integrated limit contact for cutting off the power supply. The SOR-C mechanical life is 10% of the corresponding circuit-breaker.

The cabled undervoltage release UVR-C ensures circuit-breaker opening for lack/lowering of the release power supply voltage. Opening is guaranteed when the voltage is between 70% and 35% of Un as specified in the Standard. After tripping, the circuit-breaker can be closed again starting from a voltage higher than 85% of Un. With the undervoltage release de-energised, it is impossible to close the circuit-breaker and/or the main contacts. The UVR-C mechanical life is 10% of the corresponding circuit-breaker.

The service releases SOR-C and UVR-C for A1, A2 and A3, which can be mounted as an alternative between each other, are only available in the cabled version (20 AWG cable section/0.5mm<sup>2</sup>), with free cables 1 m long. For A1 and A2, snap-on assembly is carried out in the special slot of the circuit-breaker without using any screws. In the following circuit-breakers:

- two-pole (A1, A2), the SOR-C or UVR-C can be mounted as an alternative in the right-hand slot;
- three-pole (A1 A2 A3), the SOR-C or UVR-C can be mounted as an alternative in the lefthand slot;
- four-pole (A1,A2,A3), the SOR-C or UVR-C can be housed as an alternative, in the slot of the third pole.

Absorbed power on inrush						
			R-C .3			
AC [VA]	DC [W]	AC [VA]	DC [W]			
	50		150			
5065	5065	130180	130180			
60	60	130180	130180			
50	50	120150	120150			
5060	5060	100150	100150			
55		130180				
55		150				
	A1 - AC [VA] 5065 60 50 50 5060 55	SOR-C A1 - A2           AC [VA]         DC [W]           50           5065           60           60           50           50           50           50           60           50           50           50           50           50           50           50           50           50	SOR-C A1 - A2         SOI A           AC [VA]         DC [W]         AC [VA]           50         5065         130180           60         60         130180           50         50         120150           5060         5060         100150           55         130180         130180			

### SOR-C – Electrical characteristics

#### 

	Absorbed power during normal operation						
	UVI A1 ·		UVI A	R-C 3			
Versions	AC [VA]	DC [W]	AC [VA]	DC [W]			
2430 VAC/DC	1.5	1.5	3	3			
48 VAC/DC	1	1	3	3			
60 VAC/DC	1	1	3	3			
110127 VAC - 110125 VDC	2	2	3	3			
220240 VAC - 220250 VDC	2.5	2.5	3	3			
380440 VAC	3		3				
480525 VAC*	4		3				

\* A3 up to 500 VAC

#### Ordering codes service releases


	1SDAR1		
Cabled version	A1-A2	A3	
SOR-C 12 VDC	066133	054869	
SOR-C 2430 VAC/DC	066134	054870	
SOR-C 4860 VAC/DC	066135	054871	
SOR-C 110127 VAC - 110125 VDC	066136	054872	
SOR-C 220240 VAC - 220250 VDC	066137	054873	
SOR-C 380440 VAC	066138	054874	
SOR-C 480525 VAC*	066141	054875	
40	•	•	

\* A3 up to 500 VAC


### Undervoltage release - UVR-C

	1SDAR1			
Cabled version	A1-A2	A3		
UVR-C 2430 VAC/DC	066143	054887		
UVR-C 48 VAC/DC	066144	054888		
UVR-C 60 VAC/DC	067114	054889		
UVR-C 110127 VAC - 110125 VDC	066145	054890		
UVR-C 220240 VAC - 220250 VDC	066146	054891		
UVR-C 380440 VAC	066147	054892		
UVR-C 480525 VAC*	066148	054893		


\* A3 up to 500 VAC

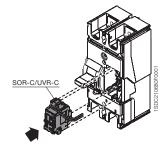

Two-pole circuit-breaker

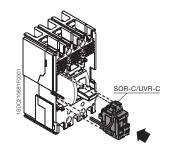

Three-pole circuit-breaker

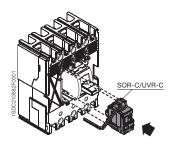

Four-pole circuit-breaker

# **Electrical accessories**



Cabled auxiliary contact

#### Auxiliary contacts for the electrical signals

The auxiliary contacts allow information about the state of the circuit-breaker to be taken outside. The signals available are as follows:


- open/closed: signalling the position of the circuit-breaker power contacts (Q);
- release trip: signalling circuit-breaker opening due to tripping of the thermomagnetic or electronic trip unit (due to overload or short-circuit), of the opening of undervoltage release SOR-C or UVR-C, or by activation of the test pushbutton (SY).

### Auxiliary contacts AUX-C Q, AUX-C SY

Installation of the auxiliary contacts for A1 and A2 (at 250 VAC/DC) snap-on in the special slot of the circuit-breaker without the of use any screws. All the auxiliary contacts are supplied in the cabled version (20 AWG cable section/0.5mm<sup>2</sup>), with loose cables 1 m long. The combinations of auxiliary contacts available, vary according to the circuit-breaker. In particular, in the following circuit-breakers:

- two-pole, the 1Q+1SY (for A1) and 2Q+1SY (for A2) combination is available;
- three-pole and four-pole, the 1Q+1SY and 2Q+1SY (for A1 and A2) and 1Q+1SY or 3Q+1SY (for A3) combination is available.

An AUX-C contact is also available as spare part and it can be used as Q or SY according to the slot of the circuit- breaker in which it is inseted.

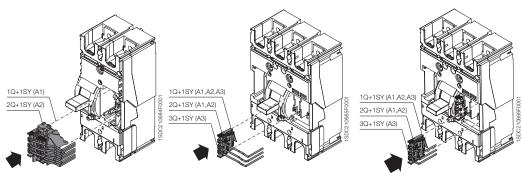

Two poles circuit-breaker

Three poles circuit-breaker

Four poles circuit-breaker

Category of use (G2.13)	Voltage	Current	
[IEC 60947-5-1]	[V]	[A]	
AC-12/AC-13/AC-14	125	6	
AC-15	125	5	
AC-12/AC-13/AC-14	250	6	
AC-15	250	4	
DC-12	110	0,5	
DC-14	110	0,05	
DC-12	250	0,3	
DC-14	250	0,03	

#### Ordering codes auxiliary contacts for the electrical signal

			1SD	AR1	
	1	41	1	A2	A3
	2 poles	3-4 poles	2 poles	3-4 poles	3-4 poles
Cabled version (numbered cables	5)				
AUX-C 1Q + 1SY 250 VAC/DC	066151	066149		066149	054910
AUX-C 2Q + 1SY 250 VAC/DC		066150	066152	066150	
AUX-C 3Q + 1SY 250 VAC/DC					054911
Cabled version (spare parts)					
AUX-C	066258	066258	066258	066258	



Early auxiliary contact

#### Early auxiliary contacts AUE-C


The cabled early auxiliary contacts (AUE-C) are normally open contacts, early in relation to closing, which allow the undervoltage release to be supplied in advance in relation to closing of the main contacts in conformity with the IEC 60204-1, VDE 0113 Standards.

It is possible to insert up to two early auxiliary contacts on closing inside the direct and transmitted rotary handle operating mechanism for circuit-breakers A1, A2, A3 in the three-pole and four-pole version. The contacts, supplied in the cabled version, with cables 1 m long (20 AWG cable section/0.5mm<sup>2</sup>), must be ordered in combination with an undervoltage release.

AUE -C - Electrical characteristics				
Voltage [V]	Current [	A]		
voltage [v]	AC	DC		
125 DC	-	0.5		
250 AC/DC	12	0.3		
400 AC	3	-		

#### Ordering codes early auxiliary contacts


# Early auxiliary contacts – AUE-C 1SDA...R1 A1-A2 A3 AUE-C 066153 054925

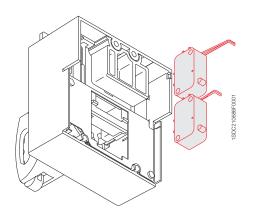

## Accessories FORMULA Link

FORMULA Link is a component of a power distribution system which divides the main power supply over different users. The FORMULA Link is characterised on the supply side by a main circuit-breaker which protects the whole distribution system, and on the load side by smaller sized circuit-breakers, dedicated to the individual users. All the copper components are tin plated. FORMULA Link has been realized in accordance with IEC 60439 Standard.

#### Looses components

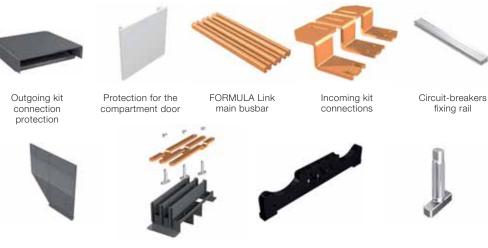


Phase separators

Outgoing kit connections

Busbar holder

Hammer head screw

#### FORMULA Link Systems

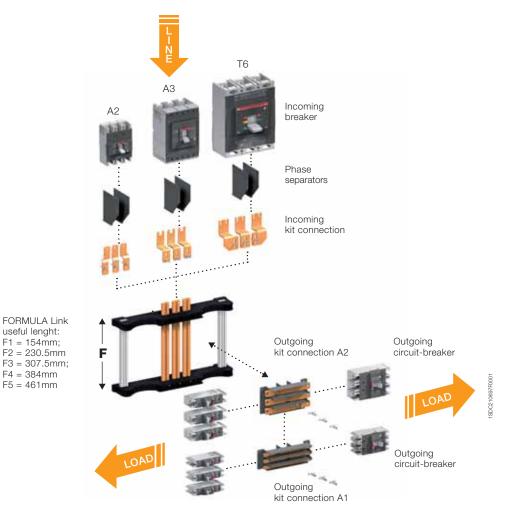

Three different frames of FORMULA Links are available according to the incoming current of the system:

- 250A FORMULA Link, usable with SACE FORMULA A2 circuit-breaker as incoming breaker;
- 400A FORMULA Link, usable with SACE FORMULA A3 circuit-breaker as incoming breaker;
- 630/800A FORMULA Link, usable with SACE Tmax T6 circuit breaker up 800A as incoming breaker.

FORMULA Link - Mechanical characte	ristics															
FORMULA Link frame	[A]	-		250					400				(	630/80	0	
Length		F1	F2	F3	F4	F5	F1	F2	F3	F4	F5	F1	F2	F3	F4	F5
	1p	12	18	24	30	36	12	18	24	30	36	12	18	24	30	36
Number of outgoing circuit-breaker (SACE FORMULA A1)	2p	6	8	12	14	18	6	8	12	14	18	6	8	12	14	18
	Зр	4	6	8	10	12	4	6	8	10	12	4	6	8	10	12

#### FORMULA Link - Electrical characteristics

FORMULA Link frame	[A]	250	400	630/800		
Incoming Breaker		A2	A3	T6		
Outgoing Breaker		A1	A1-A2	A1-A2		
Rated Operational Voltage 50/60 Hz	[V]	550 AC	550 AC	550 AC		
Rated Insulation Voltage	[V]	690 AC	690 AC	690 AC		
Rated Short Time Withstand Current (1s)	[kA]	30	40	40		



Incoming kit connections for SACE FORMULA A2



Incoming kit connections for SACE FORMULA A3



Incoming kit connections for SACE Tmax T6

To connect the main circuit-breaker to the FORMULA Link, it is necessary to use the special incoming kit connections.

The connection kits change in relation to the incoming breaker choosen. They are available:

- for SACE FORMULA A2 circuit-breaker;
- for SACE FORMULA A3 circuit-breaker;
- for SACE Tmax T6 circuit-breaker;

It's possible to connect the cables directly to the FORMULA Link using the dedicated incoming kit connection for lugs (lugs not supplied).

Either A1 or A2 SACE FORMULA circuit-breakers in the single-pole, two-pole and three-pole version can be used for protection of the individual users. The outgoing circuit-breakers are connected onto the main FORMULA Link with connection kits composed of copper connections and thermoplastic bases which assure the alignment and insulation between the phases. Two outgoing kit connections are available:

- kit for SACE FORMULA A1 circuit-breakers;
- kit for SACE FORMULA A2 circuit-breakers.

Having six connection terminals, each kit allows connection of two three-pole or of six single-pole circuit-breakers.

## **Accessories FORMULA Link**



Each FORMULA Link frame is available in five different useful length for the assembling of the outgoing kit connections:

- F1: 154mm; •
- F2: 230.5mm;
- F3: 307.5mm;
- F4: 384mm; •
- F5: 461mm. •

The length of the FORMULA Link is connected to the number and type of circuit-breakers (A1 or A2, in single-pole, two-pole or three-pole versions) that have to be installed.

In the table below all the possible combinations of three-pole outgoing circuit-breakers are shown. Starting from the number of outgoing ways required, it is possible to obtain the number of connection kit and the length of the FORMULA Link needed.

Outgoir	ng Ways	Number of	Number of	Frame	
Number A1 3p	Number A2 3p	A1 Outgoing kit connections	A2 Outgoing kit connections	length	
4	0	2	0	F1	
0	2	0	1	[154 mm]	
6	0	3	0		
2	2	1	1	F2 [230.5 mm]	
0	4	0	2	[20010 1111]	
8	0	4	0		
4	2	2	1	F3 [307.5 mm]	
2	4	1	2		
10	0	5	0		
6	2	3	1	F4	
4	4	2	2	[384 mm]	
0	6	0	3		
12	0	6	0		
8	2	4	1		
6	4	3	2	F5 [461 mm]	
2	6	1	3	[101 mm]	
0	8	0	4		

#### Ordering code for FORMULA Link

During the ordering stage, it is necessary to specify the codes of the following components which are already preassembled:

- incoming kit connections according to the incoming current;
- **outgoing kit connections** according to the type and number of outgoing circuit-breakers (the code of the outgoing kit connection includes the base made of thermoplastic material, copper connections and hammer screws for fixing and six outgoing kit connection protections);
- FORMULA Link frame according to the length needed and the incoming current (the code includes: 3 main busbars, 2 busbars holder supports, 2 circuit-breakers fixing rails, screws, all ready to be assembled).

Incoming	kit	connections	

	1SDAR1
Incoming kit connections A2	066822
Incoming kit connections A3	066823
Incoming kit connections T6	066824
Incoming kit connections FORMULA Link 630/800 for lugs 630/800A	068744
Incoming kit connections FORMULA Link 250 for lugs 250A	068839
Incoming kit connections FORMULA Link 400 for lugs 400A	068840

Outgoing kit connections	
	1SDAR1
Outgoing kit connections A1	066841
Outgoing kit connections A2	066842

#### FORMULA Link frame (ready to be assembled)

	1SDAR1				
	F1	F2	F3	F4	F5
FORMULA Link 250A for A1	066825	066827	066828	066829	066830
FORMULA Link 400A for A1-A2	066831	066832	066833	066834	066835
FORMULA Link 630/800A for A1-A2	066836	066837	066838	066839	066840

Spare parts	1054 51
	1SDAR1
Aluminium fixing bar L=1.2m	066847
Busbar holder	066843
Busbar 250A L=1.2m	066844
Busbar 400A L=1.2m	066845
Busbar 630/800A L=1.2m	066846
Hammer Head Screws (15 pieces)	066848
Phase separators kit (2 pieces)	067538
Protection for compartment door (2 pieces) L=930mm	067539
Kit protecion A1 (15 pieces)	068740
Kit protecion A2 (15 pieces)	068741

## Accessories FORMULA Link



#### Examples of order

EXAMPLE 1

#### Composition to be made

- Incoming breaker: A3 400A;
- Outgoing ways: 4 A1 3p.

#### Ordering code:

- 1SDA066823R1 (Quantity 1) Incoming kit connections A3 400A;
- 1SDA066841R1 (Quantity 2) Outgoing kit connections A1: each kit to be used for 2 SACE FORMULA A1 3 poles;
- 1SDA066831R1 (Quantity 1) Frame 400A, with a useful length F1=154 mm.

Step 1: Selection of the incoming kit connections code.

Since as incoming breaker there is a 400A SACE FORMULA circuit-breaker, it is necessary to order the proper kit of terminal useful to connect the FORMULA Link and the incoming breaker.

Incoming kit connection					
	1SDAR1				
Incoming kit connection A2	066822				
Incoming kit connection A3	066823				
Incoming kit connection T6	066824				
Incoming kit connections FORMULA Link 630/800 for lugs 630/800A	068744				
Incoming kit connections FORMULA Link 250 for lugs 250A	068839				
Incoming kit connections FORMULA Link 400 for lugs 400A	068840				

**Step 2:** Definiction of the number of the necessary outgoing kit connection, according to the number of outgoing ways and defining length of the frame. To connect 4 SACE FORMULA A1 3 poles circuit-breakers as outgoing ways, it is necessary to order two "outgoing kit connections A1" and the frame 400A with useful length "F1".

-	ng Ways	Number of A1 Outgoing	Number of A2 Outgoing	Frame	
Number A1 3p	Number A2 3p	kit connections	kit connections	length	
4	0	2	0	F1	
0	2	0	1	[154 mm]	
6	0	3	0	50	
2	2	1	1	F2 [230.5 mm]	
0	4	0	2	[230.5 mm]	
8	0	4	0	F3 [307.5 mm]	
4	2	2	1		
2	4	1	2		
10	0	5	0		
6	2	3	1	F4	
4	4	2	2	[384 mm]	
0	6	0	3		
12	0	6	0		
8	2	4	1		
6	4	3	2	F5 [461 mm]	
2	6	1	3		
0	8	0	4		

#### Outgoing kit connections

	1SDAR1
Outgoing kit connections A1	066841
Outgoing kit connections A2	066842

#### FORMULA Link frame

	1SDAR1							
	F1	F2	F3	F4	F5			
FORMULA Link ensemble 250A for A1	066825	066827	066828	066829	066830			
FORMULA Link ensemble 400A for A1-A2	066831	066832	066833	066834	066835			
FORMULA Link ensemble 630/800A for A1-A2	066836	066837	066838	066839	066840			



#### Examples of order

EXAMPLE 2

#### Composition to be made

- Incoming breaker: Tmax T6 630A;
- Outgoing ways: 4 A1 3p + 2 A2 3p.

#### Ordering code:

- 1SDA066824R1 (Quantity 1) Incoming kit connections Tmax T6 630A;
- 1SDA066841R1 (Quantity 2) Outgoing kit connections A1: each kit to be used for 2 SACE FORMULA A1 3 poles;
- 1SDA066842R1 (Quantity 1) Outgoing kit connections A2: each kit to be used for 2 SACE FORMULA A2 3 poles;
- 1SDA066831R1 (Quantity 1) Frame 630A, with a useful length F3=307.5 mm.

Step 1: Selection of the incoming kit connections code.

Since as incoming breaker there is a 630A Tmax T6 circuit-breaker, it is necessary to order the proper kit of terminal useful to connect the FORMULA Link and the incoming breaker.

Incoming kit connection						
	1SDAR1					
Incoming kit connection A2	066822					
Incoming kit connection A3	066823					
Incoming kit connection T6	066824					
Incoming kit connections FORMULA Link 630/800 for lugs 630/800A	068744					
Incoming kit connections FORMULA Link 250 for lugs 250A	068839					
Incoming kit connections FORMULA Link 400 for lugs 400A	068840					

**Step 2:** Definiction of the number of the necessary outgoing kit connection, according to the number of outgoing ways and defining length of the frame. To connect 4 SACE FORMULA A2 3 poles circuit-breakers as outgoing ways, it is necessary to order two "outgoing kit connections A1" and the frame 630A with useful length "F3".

Outgoir	ng Ways	Number of A1 Outgoing	Number of A2 Outgoing	Frame		
Number A1 3p	Number A2 3p	kit connections	kit connections	length		
4	0	2	0	F1		
0	2	0	1	[154 mm]		
6	0	3	0	50		
2	2	1	1	F2		
0	4	0	2	[230.5 mm]		
8	0	4	0	50		
4	2	2	1	F3 [307.5 mm]		
2	4	1	2			
10	0	5	0			
6	2	3	1	F4		
4	4	2	2	[384 mm]		
0	6	0	3			
12	0	6	0			
8	2	4	1	55		
6	4	3	2	F5 [461 mm]		
2	6	1	3			
0	8	0	4			

#### Outgoing kit connections

	1SDAR1
Outgoing kit connections A1	066841
Outgoing kit connections A2	066842

#### FORMULA Link frame

	1SDAR1							
	F1	F2	F3	F4	F5			
FORMULA Link structure 250A for A1	066825	066827	066828	066829	066830			
FORMULA Link structure 400A for A1-A2	066831	066832	066833	066834	066835			
FORMULA Link structure 630/800A for A1-A2	066836	066837	066838	066839	066840			



## **Characteristic curves and technical information**

### Content


Examples of curve readings	<b>4</b> /2
Temperature performance	<b>4</b> /3
Trip curves for power distribution Trip curves with thermomagnetic and electronic trip units	<b>4</b> /5
Specific let-through energy curves	
230V	<b>4</b> /5
415V - 440V	<b>4</b> /6
500V - 550V	<b>4</b> /7
Limitations curves	
230V	
415V - 440V	
500V - 550V	/10
Technical Information	
Dissipated powers4	/13

 
## **Examples of curve reading**

#### Example 1 – A2 250 Trip curves for power distribution (thermomagnetic trip unit)

Let us consider an A2 250In = 200A circuit-breaker. It can be noted that, on the basis of the conditions under which the overload occurs, i.e. with the circuit-breaker with thermal running or not, the time trip protection varies considerably. For example for overload current 2xl1, the trip time is between 65.2s and 200s for cold trip and between 9.9s and 65.2s for hot trip.

For fault current values higher than 2000A the circuit-breaker trips instantaneously with the magnetic protection I3.

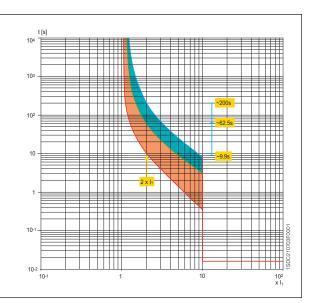




The following figure gives an example of reading the graph of the specific let-through energy curve of the A1 125 In=125A circuit-breaker at a voltage of 400V/415V.

The prospective symmetrical short-circuit current is indicated on the abscissas, whereas the value of the specific let-through energy expressed in  $A^2$  s is shown on the ordinates.


In correspondence with a short-circuit current of 20kA, the circuit-breaker lets through a value of l<sup>2</sup> t equal to  $0.70 \times 10^{6} \text{ sA}^{2}$  s.

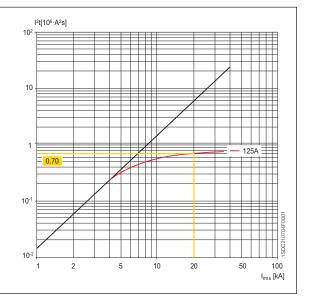

#### Example 3 – A1 125 Limitation curves

The following figure gives the trend of the limiting curve of the A2 125 In = 125A circuit-breaker.

The r.m.s. value of the prospective symmetrical short-circuit current is given on the diagram abscissas, whereas the peak value of the short-circuit current is indicated on the ordinates. The limiting effect can be assessed by comparing, at the same value of symmetrical short-circuit current, the peak value corresponding to the prospective short-circuit current (curve A) with the peak value limited (curve B). The A1 125 circuit-breaker with thermomagnetic trip unit In = 125A at a voltage of 400V/415V, for a fault current of 20kA limits the prospective short-circuit peak value of the prospective short-circuit current of 25kA.

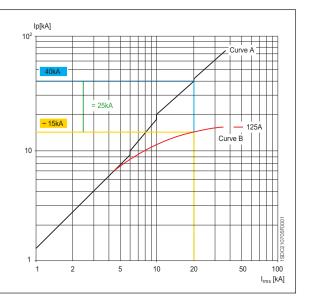

4/2

## **Temperature performances**

All the SACE FORMULA circuit-breakers can be used under the following environmental conditions:

• -25 °C + 70 °C: range of temperature where the circuit-breaker is installed;

• -40 °C +70 °C: range of temperature where the circuit-breaker is stored.

The SACE FORMULA circuit breaker has been designed to hold 100% In at 50°C without tripping in normal condition (except for A1 125A).

To determinate tripping time using time/current curves, use I t°C values indicated in the tables below.

In [A]	10°C	20°C	30°C	40°C	50°C	60°C	70°C
5	6.5	6.1	5.8	5.4	5	4.8	4.5
10	12.9	12.2	11.5	10.8	10	9.6	9.0
15	19.4	18.4	17.3	16.2	15	14.4	13.5
16	20.7	19.6	18.5	17.3	16	15.3	14.4
20	24.6	23.5	22.4	21.2	20	19.2	18.0
25	29.2	28.2	27.2	25.9	25	24.0	22.5
30	36.8	35.3	33.6	31.8	30	28.8	27.0
32	39.3	37.6	35.9	33.9	32	30.7	28.8
40	46.7	45.2	43.5	41.5	40	38.3	36.0
50	58.3	56.5	54.3	51.9	50	47.9	45.0
60	70.0	67.8	65.2	62.2	60	57.5	54.0
63	73.5	71.2	68.5	65.4	63	60.4	56.7
70	81.7	79.1	76.1	72.6	70	67.1	63.0
80	91.0	88.5	85.6	82.1	80	76.7	72.0
90	102.4	99.6	96.3	92.4	90	86.3	81.0
100	116.7	113.0	108.7	103.7	100	95.9	90.0
125	146.6	139.8	132.6	125.0	116.9	108.3	98.8

In [A]	10°C	20°C	30°C	40°C	50°C	60°C	70°C
125	161	153	144	135	125	114	102
150	184	176	168	159	150	138	126
160	196	188	179	169	160	148	135
175	215	206	196	185	175	160	144
200	246	235	224	212	200	183	165
225	290	276	260	243	225	205	184
250	323	306	289	270	250	228	204

SACE FORMULA A3 circuit-breaker with termomagnetic trip unit TMF (special version 50°C)									
In [A]	10°C	20°C	30°C	40°C	50°C	60°C	70°C		
300	393	372	350	326	300	272	241		
400	516	490	462	432	400	365	327		

SACE FORM	SACE FORMULA A3 circuit-breaker with termomagnetic trip unit TMF										
In [A]	10°C	20°C	30°C	40°C	50°C	60°C	70°C				
320	368	350	335	320	305	285	263				
400	465	442	420	400	380	355	325				
500	620	580	540	500	450	400	345				

The circuit-breaker fitted with electronic trip units do not undergo any variations in performance as the temperature varies, but in the case of temperatures exceeding  $+40^{\circ}$ C, the used rated current must be reduced to protect the copper parts of the circuit-breaker.


SACE FORMULA A3 circuit-breakers with electronic trip unit ELT LI									
In [A]	35°C	40°C	45°C	50°C	55°C	60°C	65°C	70°C	
630	630	630	630	580	555	529	502	478	

## **Temperature performances**

Using a circuit breaker A1 125A with In=70A, to define the tripping time for an overcurrent I=200A you have to calculate the multiplier of I1.

Reference Temperature 50°C (hot trip)
I=200A
I 50°C = 70A
I/I 50°C = 200A/70A = 2.86

2.86 is the multiplier of 11 thank to which is possible to define the tripping time at 50°C using the time/current curve.

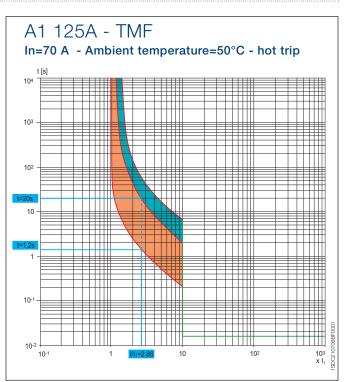


#### Reference Temperature 40°C (hot trip)

I=200A I 40°C = 72.6A


I/I 40°C = 200A/72.6A = 2.75

2.75 is the multiplier of 11 thank to which is possible to define the tripping time at 40°C using the time/current curve.

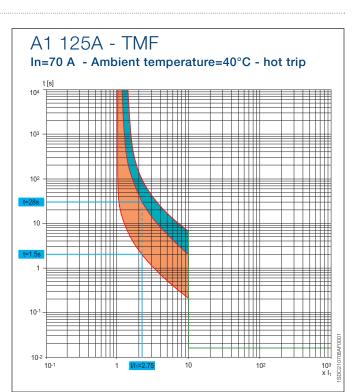


## **Trip curves**


Trip curves with thermomagnetic and electronic trip units

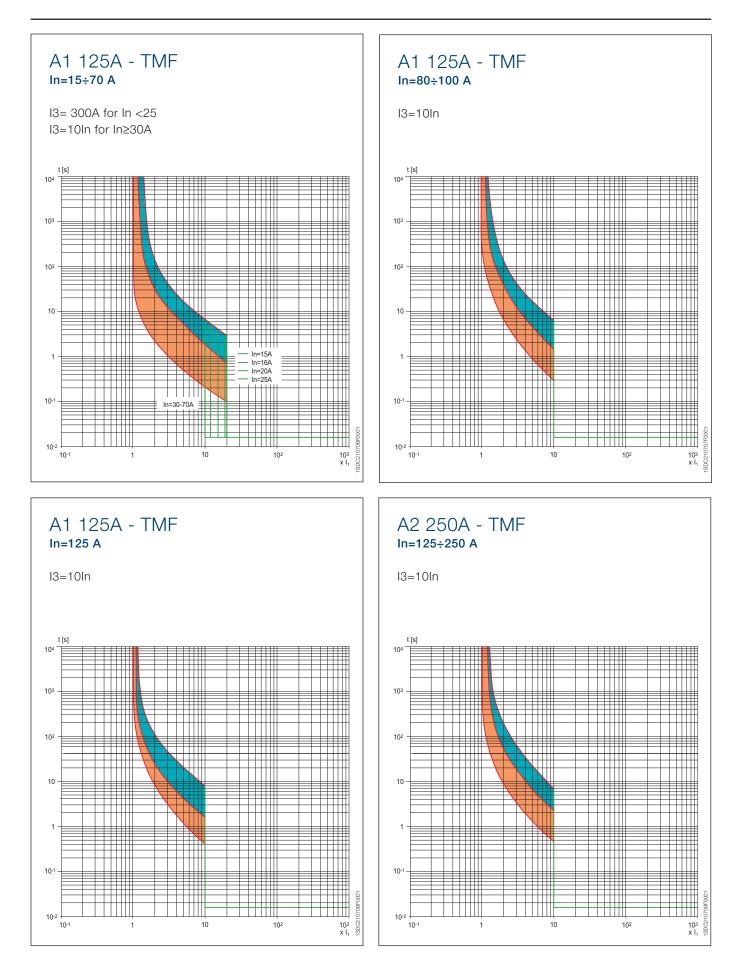

## **Trip curves**


Trip curves with thermomagnetic and electronic trip units

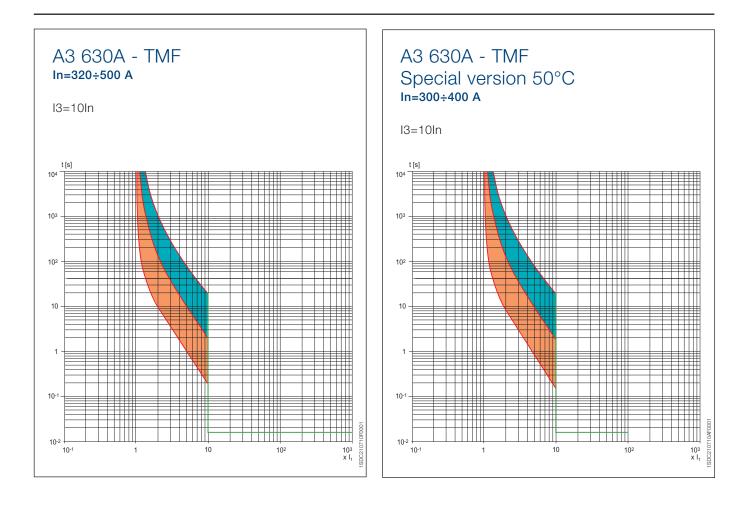

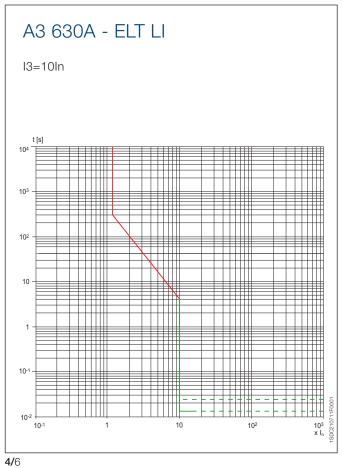



1SDC210032D0202


## Specific let-through energy curves

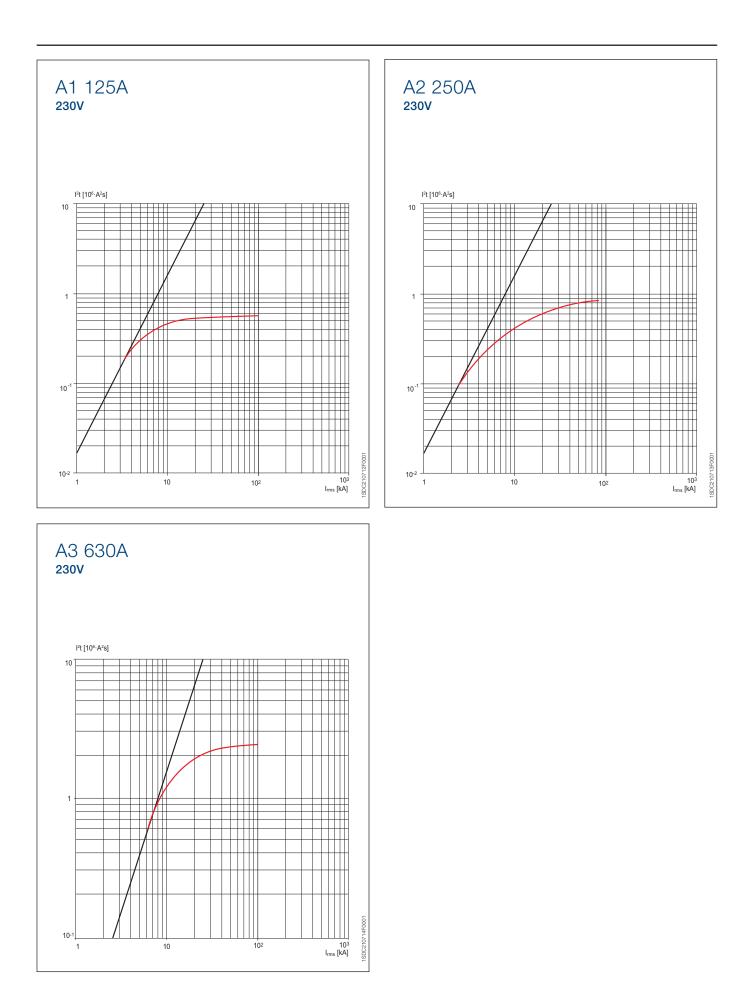


## Specific let-through energy curves

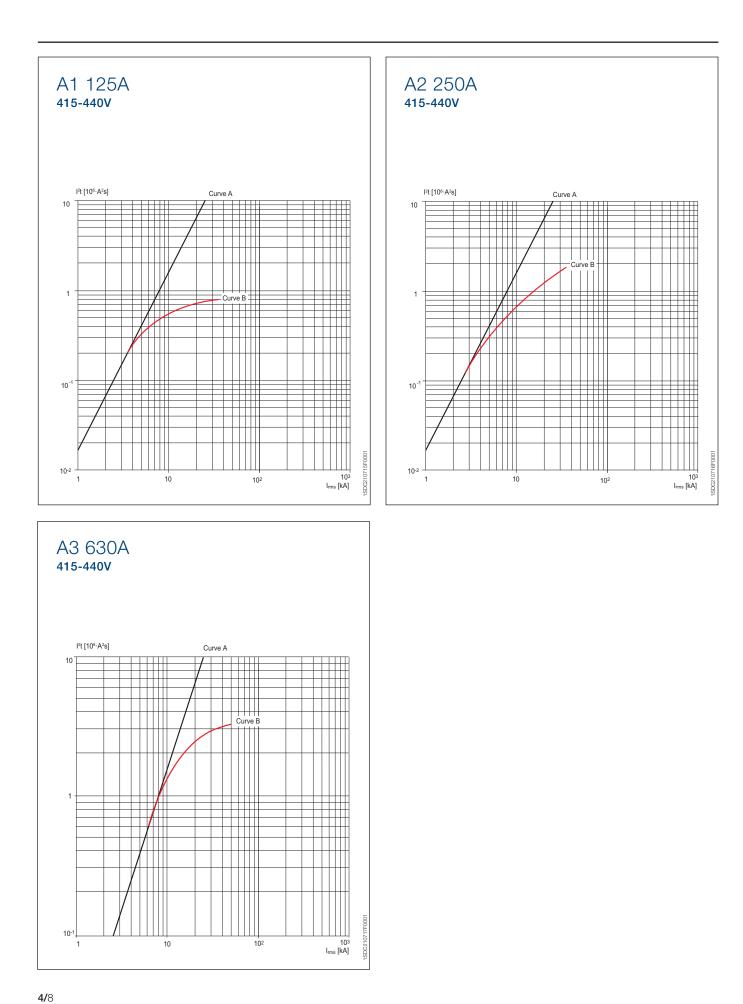


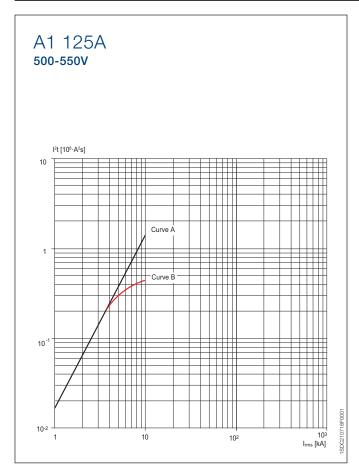


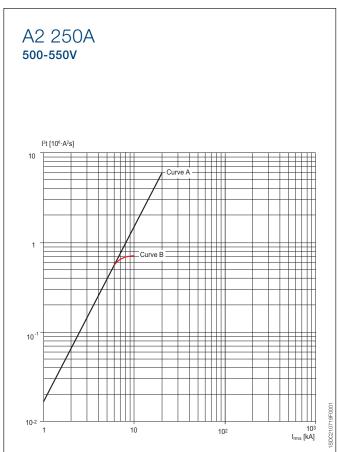


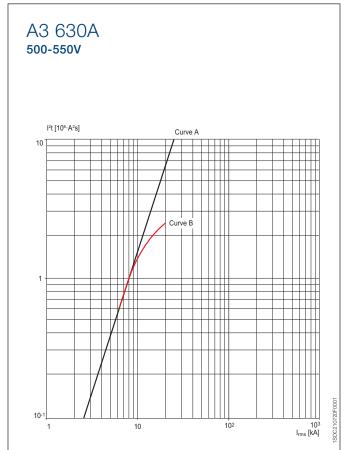



## **Limitation Curves**

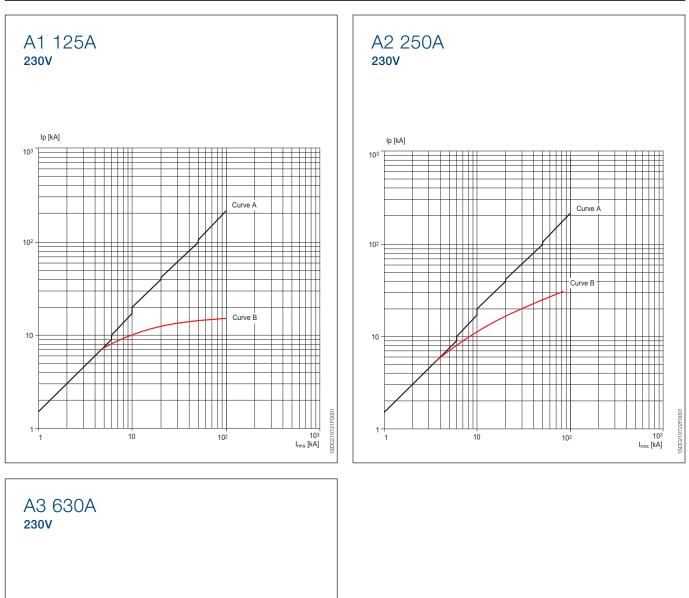

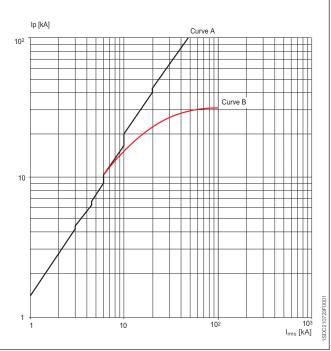


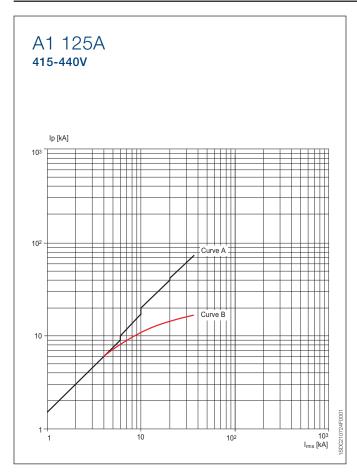

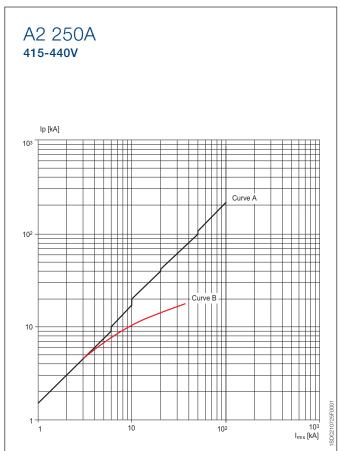

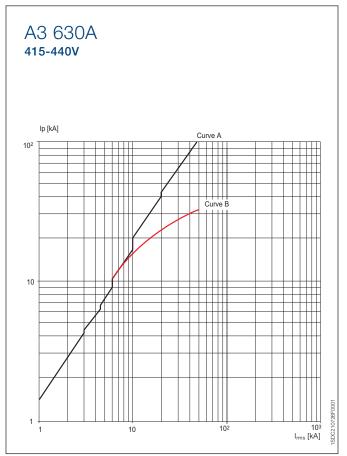

## **Limitation Curves**

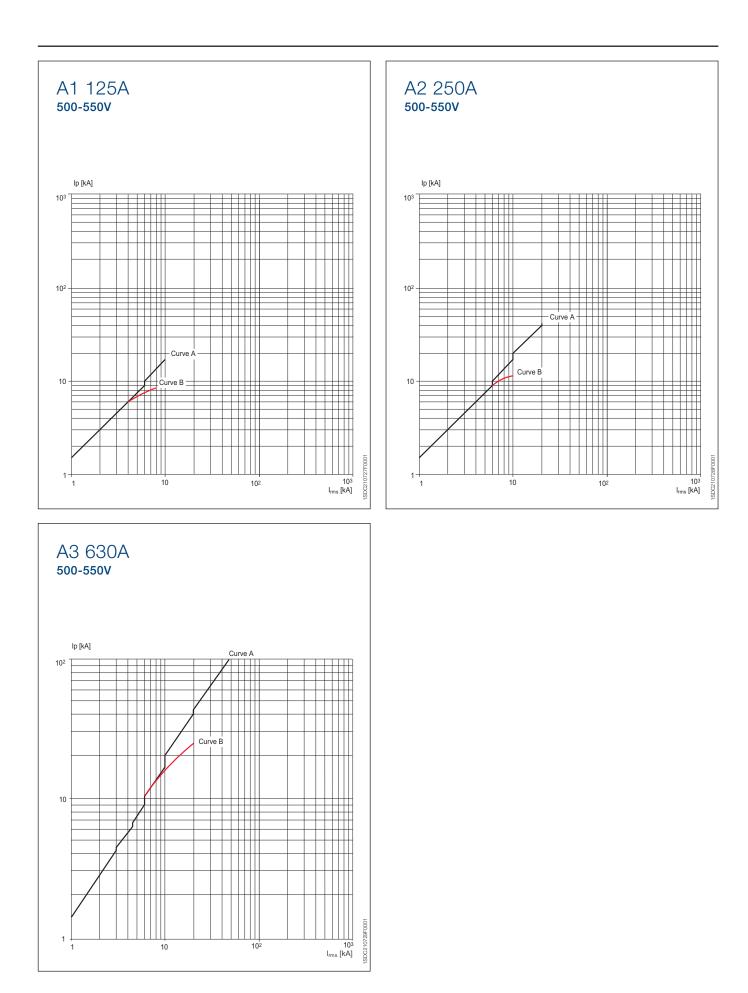

## **Technical information**

## **Dissipated powers**

For each circuit-breaker, the table gives the dissipated power values for a single pole circuit-breaker  $^{\rm (G2.12)}$  .

The maximum total dissipated power of a two-pole, three-pole or four-pole circuit-breaker used at 50/60Hz is equal to the dissipated power for the single pole multiplied by the number of poles.

Power [W/pole]	In [A]	A1	A2	A3
TMF	15	2.5	-	-
	16	2.8	-	-
	20	3	-	-
	25	3	-	-
	30	4	-	-
	32	4	-	-
	40	4.5	-	-
	50	5.5	-	-
	60	6	-	-
	63	6	-	-
	70	8	-	-
	80	9	-	-
	90	7	-	-
	100	8	-	-
	125	11	7	-
	150	-	8	-
	160	-	9	-
	175	-	10	-
	200	-	12	-
	225	-	14	-
	250	-	16	-
	320	-	-	13.6
	400	-	-	19.5
	500	-	-	28.8
ELT LI	630	-	-	41



## Wiring diagrams

### Content

Information for reading and graphic symbols	<b>5</b> /2
Wiring diagrams of the circuit-breakers	<b>5</b> /3
Electrical accessories	<b>5</b> /4

## Information for reading and graphic symbols

#### State of operation represented

- The diagram is shown under the following conditions:
- circuit-breaker open;
- circuits without voltage;
- trip units not tripped.

#### Incompatibility

#### A1 A2

Accessory circuits cannot be supplied with single-pole circuit-breakers.

The applications indicated in figures 1-2-6, which are supplied as an alternative, can be supplied with two-pole circuit-breakers.

All the applications indicated in the figures can be supplied with three-pole and four-pole circuit-breakers. Figures 1-2-3-4 are provided as an alternative. Figures 5-6 are provided as an alternative.

#### A3

The circuits indicated in the following figures cannot be supplied at the same time on the same circuit-breaker:

 
- 1-2-3-4
- 5-6

 
#### Graphic Symbols (IEC 60617 and CEI 3-14...3-26 Standards)

 
	Thermal effect	¢	Terminal		Change-over break before make contact
Ş	Electromagnetic effect		Plug and socket (male and female)	×	Circuit-breaker with automatic release
	Mechanical connection (link)		Resistor (general symbol)		Operating device (general symbol)
E	E Operated by pushing		Current transformer	/>>>>	Instantaneous overcurrent or rate-of-rise relay
J	Operated by turning		Make contact	/> \	Overcurrent relay with inverse long time-lag characteristic
Connection of conductors		7	Break contact		


## Wiring diagrams of the circuit-breakers

#### Operating status A1 A2







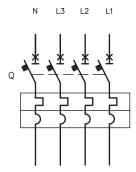

Single-pole circuit-breaker with thermomagnetic trip unit

Two-pole circuit-breaker with thermomagnetic trip unit


Three-pole circuit-breaker with thermomagnetic trip unit

L3 L2 L1

Ν

Four-pole circuit-breaker with thermomagnetic trip unit

#### **Operating status A3**

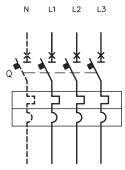

Three-pole/four-pole circuit-breaker with thermomagnetic trip unit


Three-pole/four-pole circuit-breaker with electronic trip unit

Caption		
Q	=	Main circuit-breaker
K51	=	Electronic trip unit ELT LI, with the following protection functions:
		<ul> <li>L overload protection with inverse long time-delay trip</li> </ul>
		- I short-circuit protection with instantaneous time-delay trip
TI/L1	=	Current transformer placed on phase L1
TI/L2	=	Current transformer placed on phase L2
TI/L3	=	Current transformer placed on phase L3
TI/N	=	Current transformer placed on the neutral
XO	=	Connector for the YO1 trip coil
YO1	=	Trip coil of the electronic trip unit



## **Electrical accessories**

#### Shunt opening and undervoltage releases A1 A2

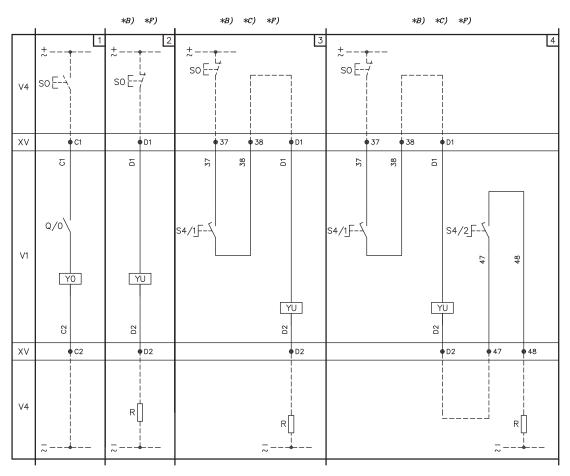

#### Figure:


- 1) Shunt opening release (SOR-C o YO)
- 2) Undervoltage release (UVR-C o YU)
- 3) Instantaneous undervoltage release with an early contact in series (AUE-C+UVR-C)
- 4) Instantaneous undervoltage release with two early contacts in series (AUE-C+UVR-C)

#### Notes

- B) The undervoltage release is supplied for power supply branched on the supply side of the circuit-breaker or from an independent source: circuit-breaker closing is only allowed with the release energised (the lock on closing is made mechanically).
- C) The S4/1 and S4/2 contacts shown in figures 3-4 open the circuit with circuit-breaker open and close it when a manual closing command is given by means of the rotary handle in accordance with the Standards regarding machine tools (closing does not take place in any case if the undervoltage release is not supplied).
- F) Additional external undervoltage resistor supplied at 250V DC or 380/440V AC.

Q/0	=	Circuit-breaker auxiliary contacts
R	=	Resistor (see note F)
S4/1-2	=	Early auxiliary contacts activated by the rotary handle of the circuit-breaker (see note C)
SO	=	Pushbutton or contact for opening the circuit-breaker
V1	=	Circuit-breaker applications
V4	=	Indicative apparatus and connections for control and signalling, outside
		the circuit-breaker
XV	=	Terminal boards of the applications
YO	=	Shunt opening release (SOR-C)
YU	=	Undervoltage release (UVR-C) (see notes B and C)

#### Shunt opening and undervoltage releases A3

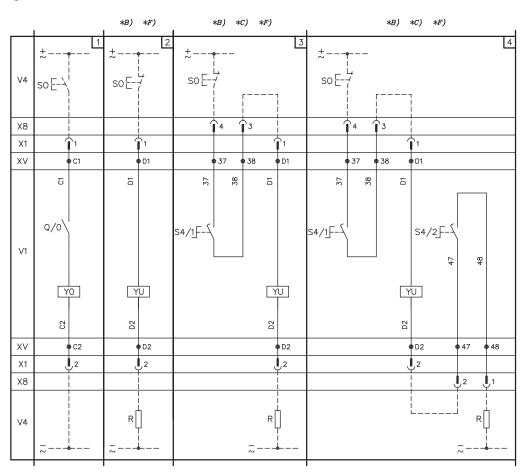

#### Figure:

- 1) Shunt opening release (SOR-C o YO)
- 2) Undervoltage release (UVR-C o YU)
- 3) Instantaneous undervoltage release with an early contact in series (AUE-C+UVR-C)
- 4) Instantaneous undervoltage release with two early contacts in series (AUE-C+UVR-C)


#### Notes

- B) The undervoltage release is supplied for power supply branched on the supply side of the circuit-breaker or from an independent source: circuit-breaker closing is only allowed with the release energised (the lock on closing is made mechanically).
- C) The S4/1 and S4/2 contacts shown in figures 3-4 open the circuit with circuit-breaker open and close it when a manual closing command is given by means of the rotary handle in accordance with the Standards regarding machine tools (closing does not take place in any case if the undervoltage release is not supplied).
- F) Additional external undervoltage resistor supplied at 250V DC or 380/440V AC.

Q/0	=	Circuit-breaker auxiliary contacts
R	=	Resistor (see note F)
S4/1-2	=	Early auxiliary contacts activated by the rotary handle of the circuit-breaker (see note C)
SO	=	Pushbutton or contact for opening the circuit-breaker
V1	=	Circuit-breaker applications
V4	=	Indicative apparatus and connections for control and signalling, outside
		the circuit-breaker
XV	=	Terminal boards of the applications
YO	=	Shunt opening release (SOR-C)
YU	=	Undervoltage release (UVR-C) (see notes B and C)
X1, X8	=	Connectors for the circuit-breaker auxiliary circuits

## **Electrical accessories**

Auxiliary contacts A1 A2

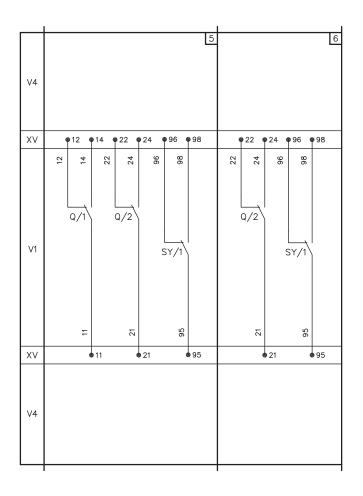

#### Figure:

- 5) Two changeover contacts for electrical signalling of circuit-breaker open/closed and one changeover contact for signalling circuit-breaker in tripped position due to thermomagnetic trip unit or SOR-C or UVR-C intervention (2Q+1SY)
- 6) One changeover contact for electrical signalling of circuit-breaker open/closed and one changeover contact for signalling circuit-breaker in tripped position due to thermomagnetic trip unit or SOR-C or UVR-C intervention (1Q+1SY)

Q/1, 2	=	Circuit-breaker auxiliary contacts
SY	=	Contact for electrical signalling circuit-breaker open due to trip of the thermomagnetic trip
		unit YO (SOR-C), YU (UVR-C) (tripped position)
V1	=	Circuit-breaker applications
V4	=	Indicative apparatus and connections for control and signalling, outside the circuit-breaker
XV	=	Terminal boards of the applications

#### Auxiliary contacts A3

		5 6
V4		
X7		<b>1</b> 5 <b>1</b> 6 <b>1</b> 3 <b>1</b> 4
X2	<b>1</b> 9 <b>1</b> 5 <b>1</b> 6 <b>1</b> 12 <b>1</b> 1 <b>1</b> 10 <b>1</b> 4	8
XV	•12 •14 •22 •24 •32 •34 •9	6 • 98 • 12 • 14 • 96 • 98
V1	11 12 14 12 14 14 14 14 14 14 14 14 14 14	95 1- 25 24 25 25 25 25 25 25 25 25 25 25
xv	•11 •21 •31	• 95 • 11 • 95
X2		<b>U</b> 7
X7		
V4		

#### Figure:

- 5) Three changeover contacts for electrical signalling of circuit-breaker open/closed and one changeover contact for signalling circuit-breaker in tripped position due to thermomagnetic trip unit or SOR-C or UVR-C intervention (3Q+1SY)
- One changeover contact for electrical signalling of circuit-breaker open/closed and one changeover contact for signalling circuit-breaker in tripped position due to thermomagnetic trip unit or SOR-C or UVR-C intervention (1Q+1SY)

Q/1, 2, 3	=	Circuit-breaker auxiliary contacts
SY	=	Contact for electrical signalling circuit-breaker open due to trip of the thermomagnetic trip
		unit YO (SOR-C), YU (UVR-C) (tripped position)
V1	=	Circuit-breaker applications
V4	=	Indicative apparatus and connections for control and signalling, outside the circuit-breaker
XV	=	Terminal boards of the applications
X2, X7	=	Connectors for the circuit-breaker auxiliary circuits



## **ABB** Overall dimensions


### Content

FORMULA A1	
Circuit-breaker and terminals	<b>6</b> /2
Accessories	<b>6</b> /8
FORMULA A2	
Circuit-breaker and terminals	<b>6</b> /9
Accessories	<b>6</b> /15
FORMULA A3	
Circuit-breaker and terminals	<b>6</b> /16
Accessories	<b>6</b> /20
FORMULA Link	
FORMULA Link 250A	<b>6</b> /22
FORMULA Link 400A	<b>6</b> /23
FORMULA Link 630A	<b>6</b> /24
FORMULA Link 800A	<b>6</b> /25
Distances to be respected	<b>6</b> /26

## **Overall dimensions**

A1 - Circuit-breaker and terminals


Fixing onto the back plate

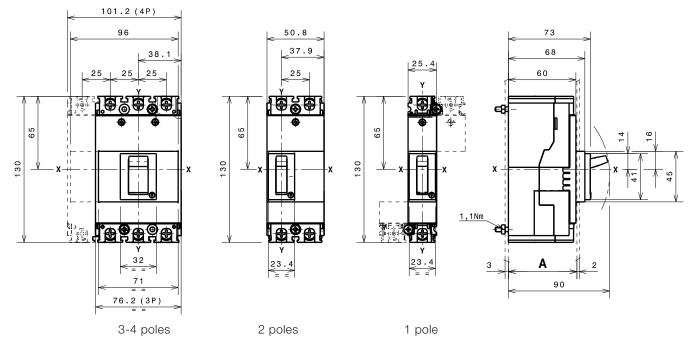

Distance between compartment door and back of switchboard		A [mm]
	I-II-III-IV poles	69
Without flange	I-II-III-IV poles	61

The circuit-breaker installed at:


- A=69 mm has the face around the operating lever extending from the compartment door;
- A=61 mm has the face around the operating lever and steel with construction characteristics extending from the compartment door.

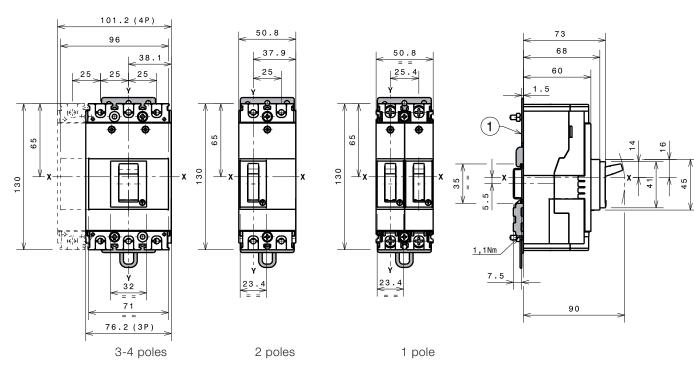


Caption ① Fixing bracket

#### Fixing onto DIN 50022 rail

Drilling templates for support sheet

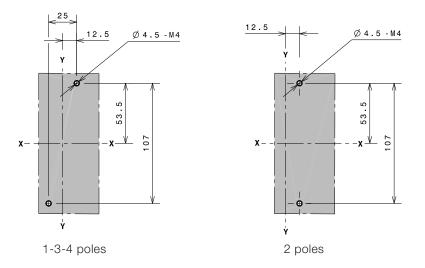


Drilling templates for compartment door

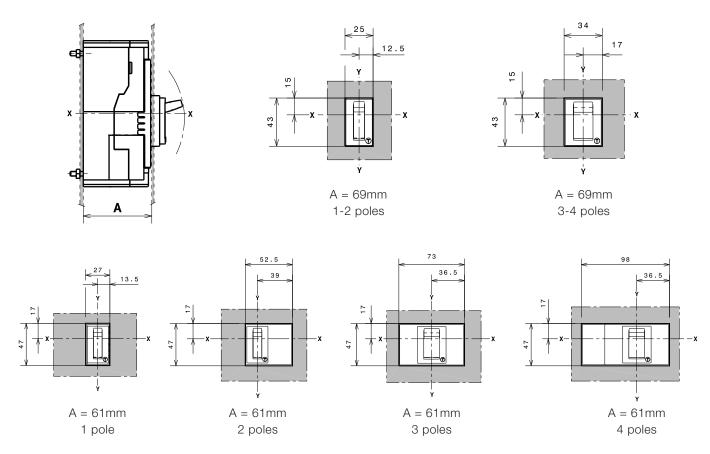

## **Overall dimensions**

A1 - Circuit-breaker and terminals

#### F Terminals

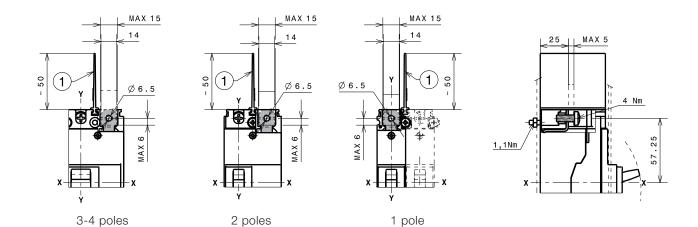


Caption

(1) 50mm insulating barriers between the terminals (compulsory) supplied


degree of protection (on request)

③ Front extended terminals

#### **EF** Terminals

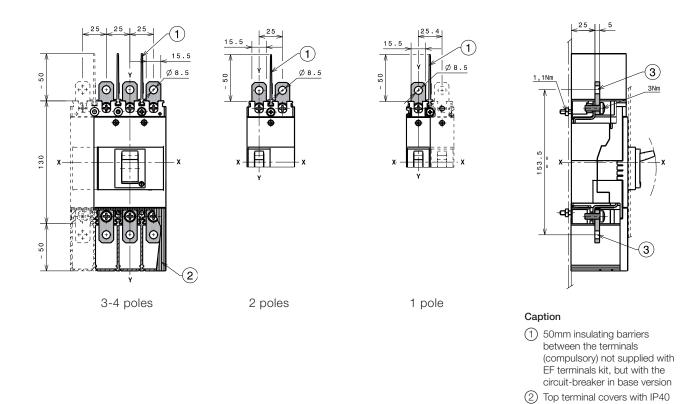

#### **ES** Terminals

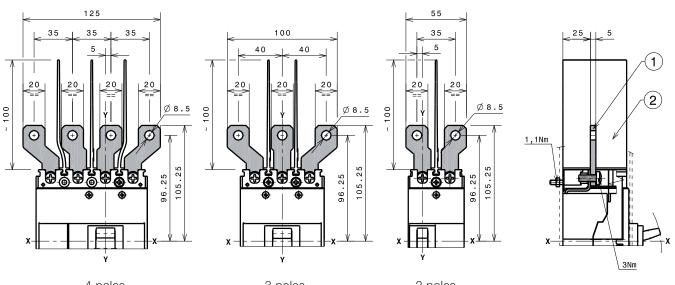

4 poles

3 poles

2 poles

#### Caption


1 Front extended spread terminals


(2) 100mm insulating barriers between the terminals (compulsory) supplied


## **Overall dimensions**

A1 - Circuit-breaker and terminals


#### FCCuAl 1x25...50mm<sup>2</sup> Terminals

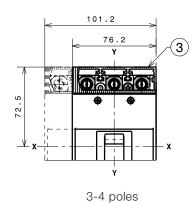

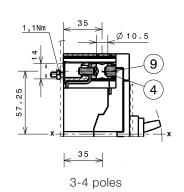


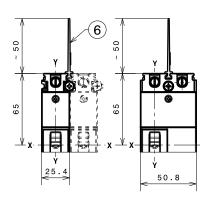




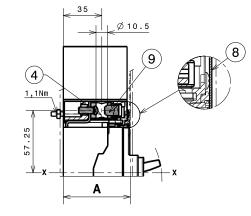

1-2 poles

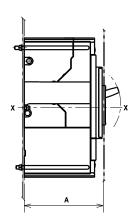

1-2 poles

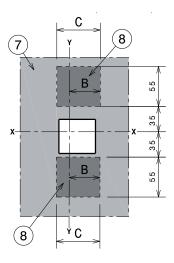


1-2 poles

	A [mm]	B [mm]	C [mm]	
Without flange	69	33	66	1 POLE
	69	58	91	2 POLES
	61*	33	66	1 POLE
	61*	58	91	2 POLES
* Distance only possible with insu	ulation plate	max 1 mm th	nick	


- Bottom terminal covers with IP40 degree of protection (compulsory)
- (4) FCCuAl 50mm<sup>2</sup> terminals
- 6 50mm insulating barriers between the terminals (compulsory) not supplied with FCCuAl terminals kit, but with the circuit-breaker in base version
- Compartment door drilling template and fixing insulation (provided by customer)
- (8) Compulsory internal 1 pole -2 pole insulation plates (provided by customer)

<b>6/</b> 6		
-------------	--	--


FCCuAl 1x1...25mm<sup>2</sup> Terminals

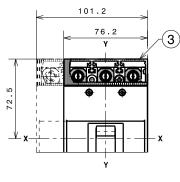


3-4 poles

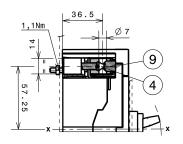


3-4 poles

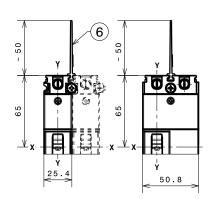


1-2 poles

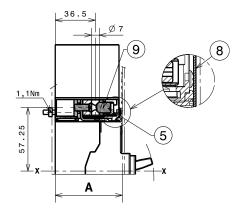

1-2 poles

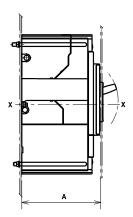



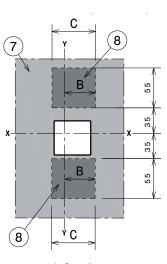


1-2 poles

	A [mm]	B [mm]	C [mm]			
Without flange	69	33	66	1 POLE		
	69	58	91	2 POLES		
	61*	33	66	1 POLE		
	61*	58	91	2 POLES		
* Distance only possible with insulation plate max 1 mm thick						


- (3) Bottom terminal covers with IP40 degree of protection (compulsory)
- (5) FCCuAl 25mm<sup>2</sup> terminals
- 6 50mm insulating barriers between the terminals (compulsory) not supplied with FCCuAl terminals kit, but with the circuit-breaker in base version
- Compartment door drilling template and fixing insulation (provided by customer)
- (8) Compulsory internal 1 pole -2 pole insulation plates (provided by customer)

A1 - Accessories

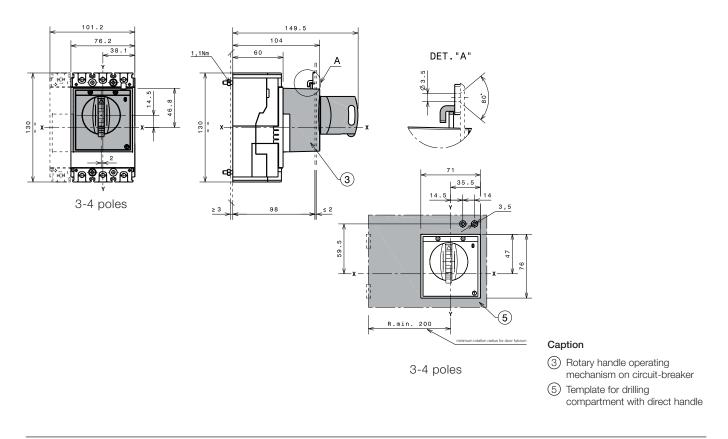

Rotary handle operating mechanism on circuit-breaker and compartment door drilling template (RHD)

Rotary handle operating mechanism on compartment door and compartment door drilling template (RHE)

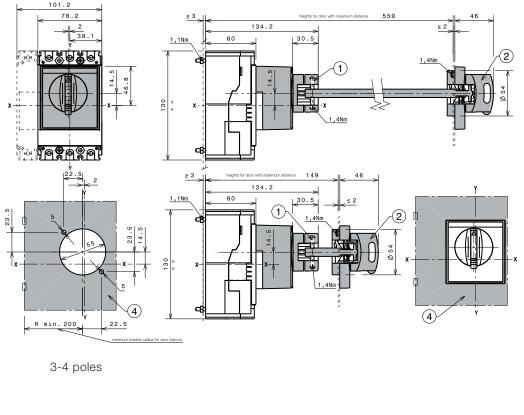


#### Caption

- 1 Transmission group
- (2) Transmitted rotary handle operating mechanism

(4) Template for drilling compartment with transmitted rotary handle

A2 - Circuit-breaker and terminals

#### Fixing on the back plate

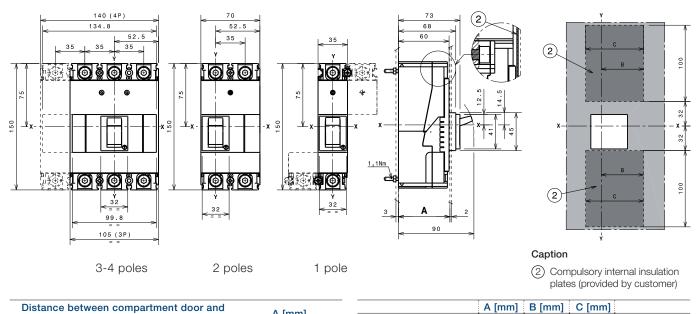


	stance between compartment door and back of switchboard		
Without flange	I-II-III-IV poles	69	
	I-II-III-IV poles	61	

The circuit-breaker installed at: - A=69 mm has the face around the operating lever extending from the compartment door;

A=61 mm has the face around the operating lever and steel with construction characteristics extending from the compartment door.

#### Fixing onto DIN 50022 rail

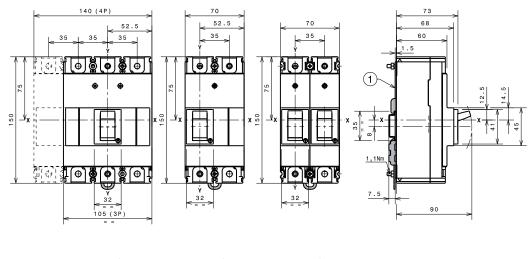

3-4 poles

2 poles

1 pole

Caption (1) Fixing bracket 1 POLE

2 POLES

3 POLES

4 POLES

1 POLE

2 POLES

3 POLES

4 POLES

61

61

61

61

69

69

69

69

Without flange

42.5

77.5

77.5

77.5

42.5

77.5

77.5

77.5

85

120

155

190

85


120

155


190

A2 - Circuit-breaker and terminals


### Drilling templates for support sheet

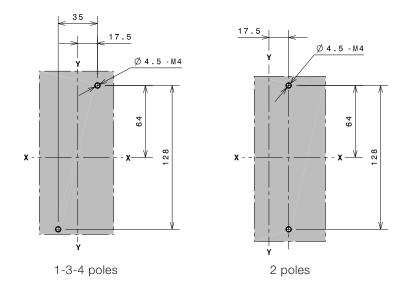


Compartment door drilling templates

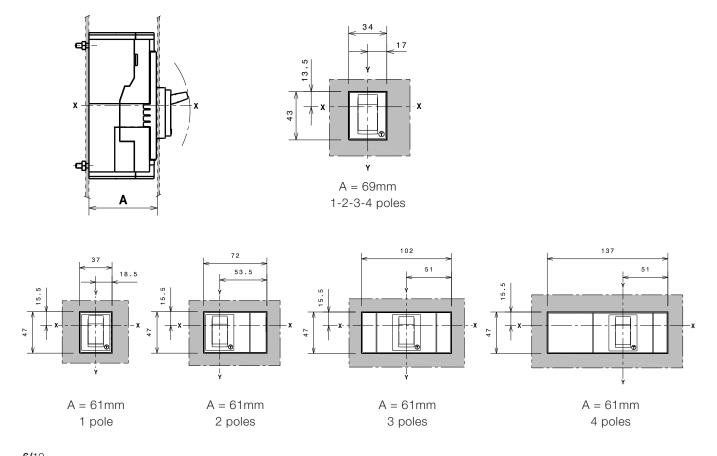


#### F Terminals

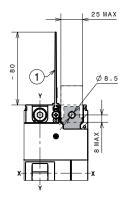

2-3-4 poles

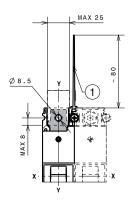


1 poles

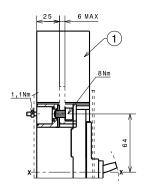

#### Caption

(1) 80mm insulating barriers between the terminals (compulsory) supplied


**EF** Terminals

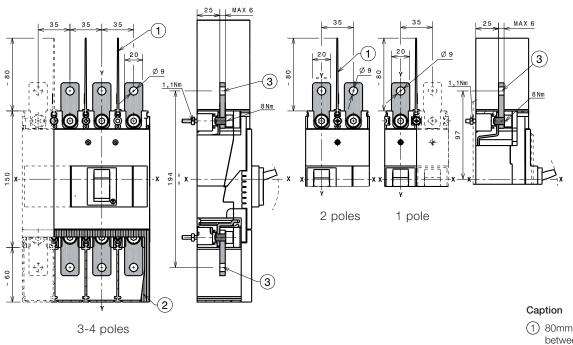

- 80mm insulating barriers between the terminals (compulsory) not supplied with EF terminals kit, but with the circuit-breaker in base version
- (2) Top terminal covers with IP40 degree of protection (on request)
- ③ Front extended terminals

A2 - Circuit-breaker and terminals

#### **ES** Terminals

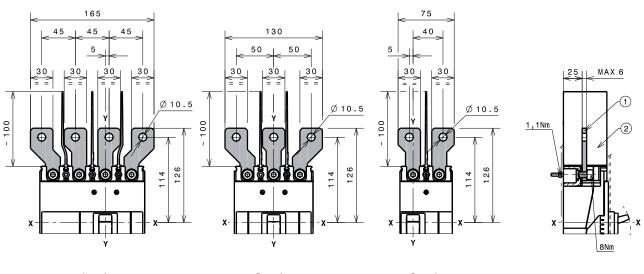


4 poles

3 poles


2 poles

- Front extended spread terminals
- (2) 100mm insulating barriers between the terminals (compulsory) supplied


FCCuAl 1x120...185mm<sup>2</sup> Terminals

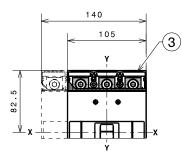



3-4 poles

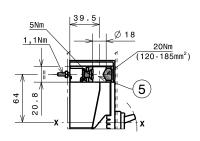



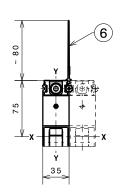

 


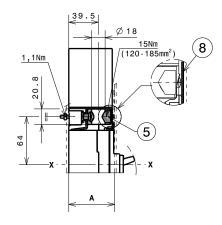


1-2 poles

1-2 poles

1-2 poles

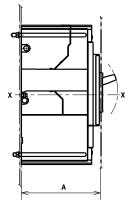

1-2 poles

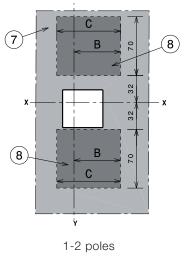

	A [mm]	B [mm]	C [mm]	
Without flange	69	42.5	85	1 POLE
	69	77.5	120	2 POLES
	61	42.5	85	1 POLE
	61	77.5	120	2 POLES

	480V	415V	380V	230V
lcu	12kA	18kA	18kA	42kA


Ics 12kA 18kA 18kA 42kA The FCCuAl 185mm<sup>2</sup> terminals can be


used up to 480V, with Icu 50% and Ics 100%

- (3) Bottom terminal covers with IP40 degree of protection (compulsory)
- 5 Terminals FCCuAl 185mm<sup>2</sup>
- (6) 80mm insulating barriers between the terminals (compulsory) not supplied with FCCuAI terminals kit, but with the circuit-breaker in base version
- Compartment door drilling template and fixing insulation (provided by customer)
   1 pole - 2 poles
- Compulsory internal insulation plates (provided by customer) max 1mm thick

A2 - Circuit-breaker and terminals


FCCuAl 1x50...150mm<sup>2</sup> Terminals

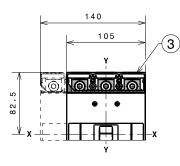


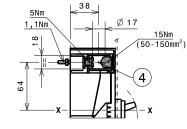


3-4 poles

3-4 poles

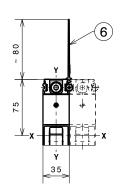

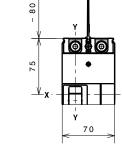

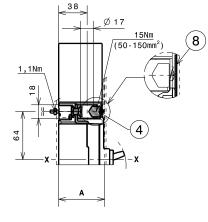


1-2 poles


1-2 poles

٠X

1-2 poles

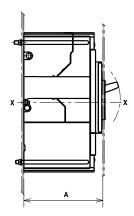

1-2 poles

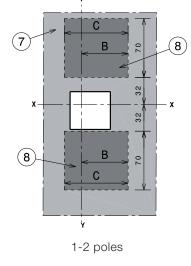


	A [mm]	B [mm]	C [mm]	
Without flange	69	42.5	85	1 POLE
	69	77.5	120	2 POLES
	61	42.5	85	1 POLE
	61	77.5	120	2 POLES

	480V	415V	380V	230V
lcu	12kA	18kA	18kA	42kA
lcs	12kA	18kA	18kA	42kA
				••••••

The FCCuAl 150mm² terminals can be used up to 480V, with Icu 50% and Ics 100%  $\,$ 

- (3) Bottom terminal covers with IP40 degree of protection (compulsory)
- (4) Terminals FCCuAl 150mm<sup>2</sup>
- (6) 80mm insulating barriers between the terminals (compulsory) not supplied with FCCuAI terminals kit, but with the circuit-breaker in base version
- Compartment door drilling template and fixing insulation (provided by customer)
   1 pole - 2 poles
- (8) Compulsory internal insulation plates (provided by customer) max 1mm thick

A2 - Accessories

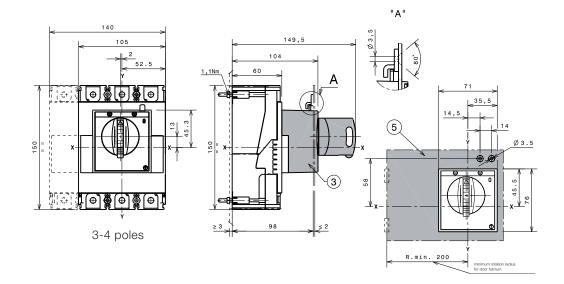


Rotary handle operating mechanism on compartment door and compartment door drilling template (RHD)

#### Caption

- (3) Rotary handle operating
- mechanism on circuit-breaker
- (5) Template for compartment drilling with direct handle


Rotary handle operating mechanism on circuit-breaker and compartment door drilling template (RHE)

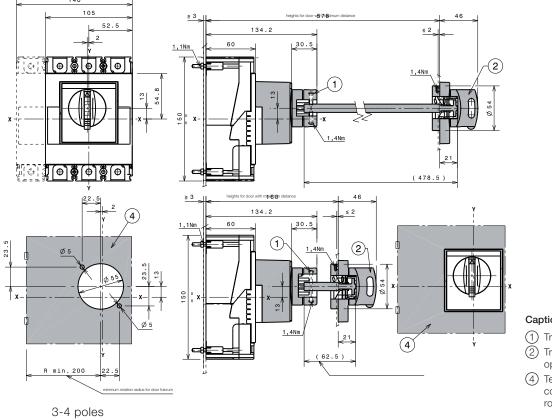


- (1) Transmission group
- Transmitted rotary handle operating mechanism
- (4) Template for drilling compartment with transmitted rotary handle

A3 - Circuit-breaker and terminals

Fixing onto back plate

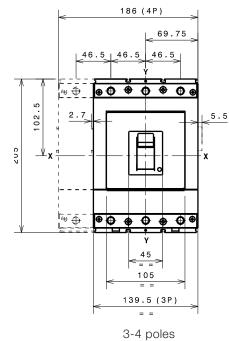

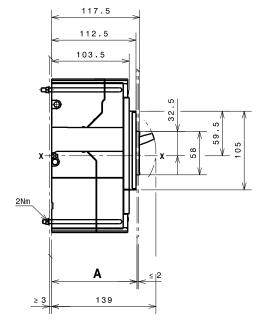


\_\_\_\_\_

Distance between co back of sw	A [mm]	
Without flange	I-II-III-IV poles	105
	I-II-III-IV poles	114


The circuit-breaker installed at:

- A=69 mm has the face around the operating lever extending from the compartment door;
- A=61 mm has the face around the operating lever and steel with construction characteristics extending from the compartment door.


Support sheet drilling templates

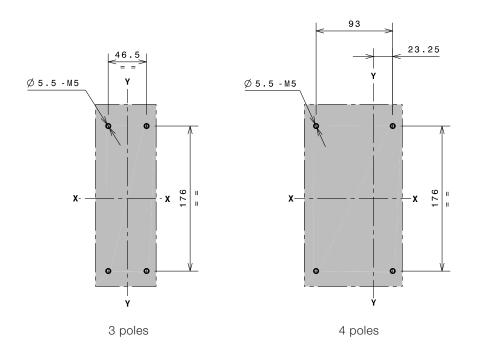


#### Compartment door drilling templates (without flange)

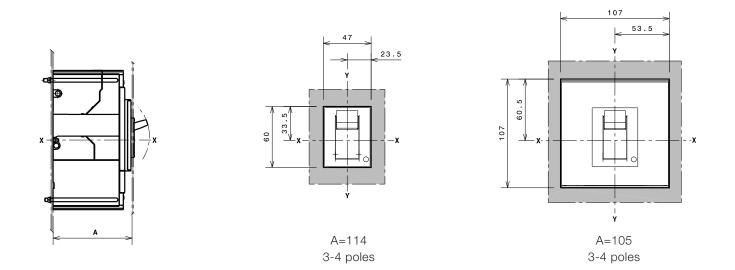

F Terminals

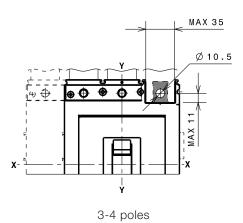

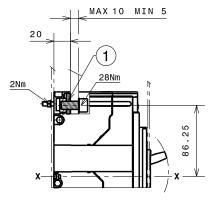


Caption


(1) Front terminals for busbar connection

A3 - Circuit-breaker and terminals

#### **EF** Terminals

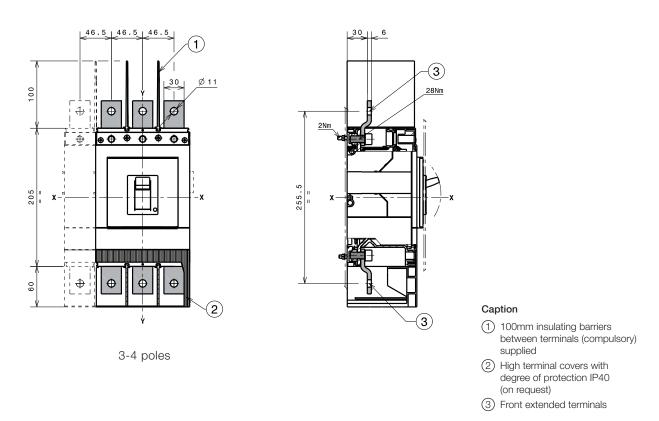

#### ES Terminals

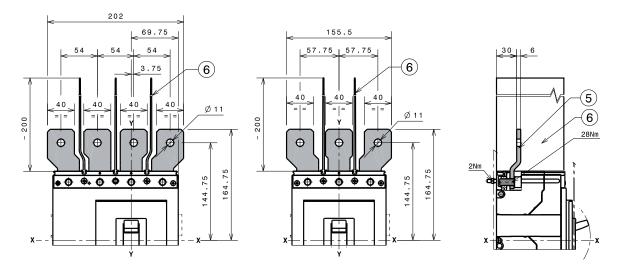


4 poles


3 poles

- (5) Front extended spread terminals
- 6 Insulating barriers between terminals (compulsory) supplied

FCCuAl 1x185...300mm<sup>2</sup> Terminals

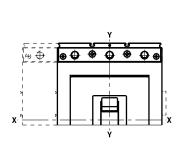




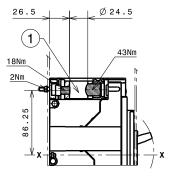




(1) Front terminals for busbar connection 300mm<sup>2</sup> CuAl

FCCuAl 2x95...240mm<sup>2</sup> Terminals

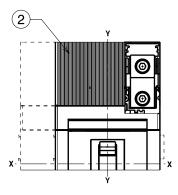




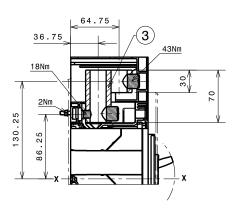

#### Caption

(1) 60mm high terminal covers (compulsory) supplied

A3 - Accessories

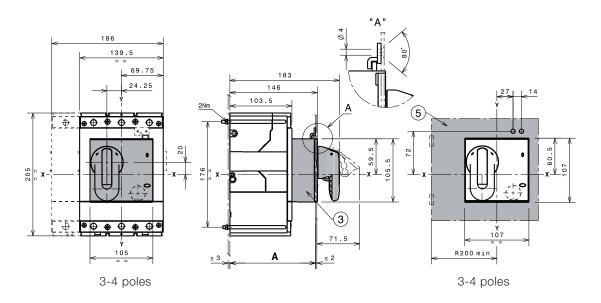


Rotary handle operating mechanism on circuit-breaker + Compartment door drilling template (RHD)

Caption


(3) Rotary handle operating mechanism on circuit-breaker

(5) Template for drilling compartment with direct handle


Rotary handle operating mechanism on compartment door + Compartment door drilling template (RHE)

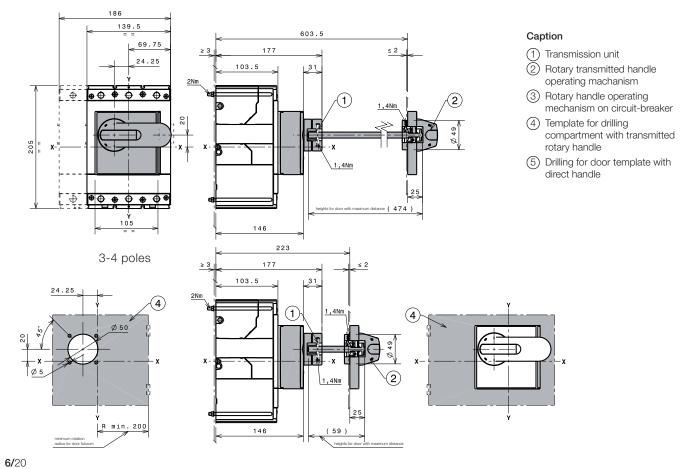



### Front for lock operating mechanism (FLD)

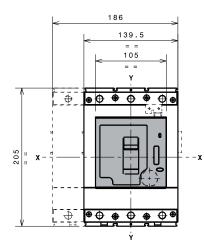

3-4 poles

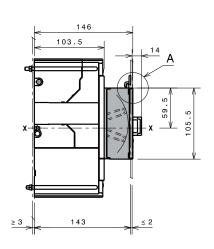


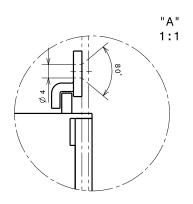

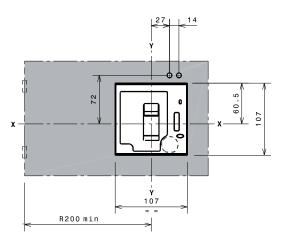

FORMULA Link 250A

FORMULA Link A1 250A

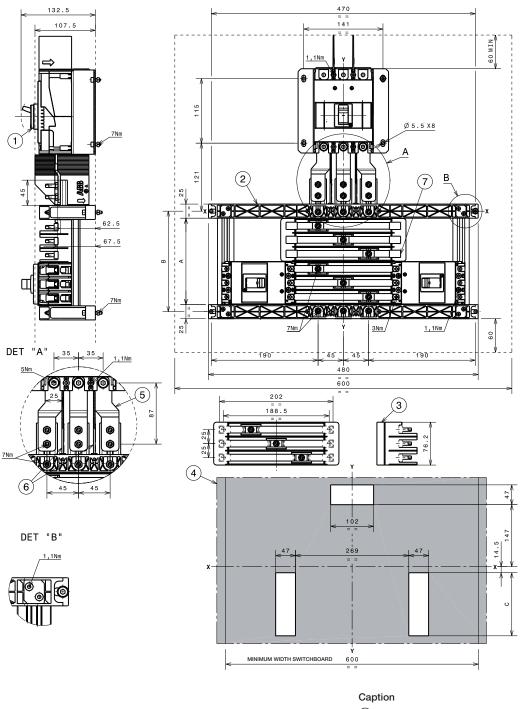


1	Main SACE FORMULA A2 250
	circuit-breaker

- 2 Busbar holder for SACE FORMULA A1
- (3) Outgoing kit connection for SACE FORMULA A1
- (4) Compartment door drilling\*
- (5) Incoming kit connection
- (6) Phase separators (compulsory) supplied
- Stopper cover busbar (compulsory without insert circuit-breaker)

\* considering all the outgoing circuit-breakers installed


	B [mm]	C [mm]
154	179	150
230.5	255.5	226.5
307.5	332.5	303
384	409	380
461	486	456.5
-	230.5 307.5 384	230.5         255.5           307.5         332.5           384         409

FORMULA Link 400A

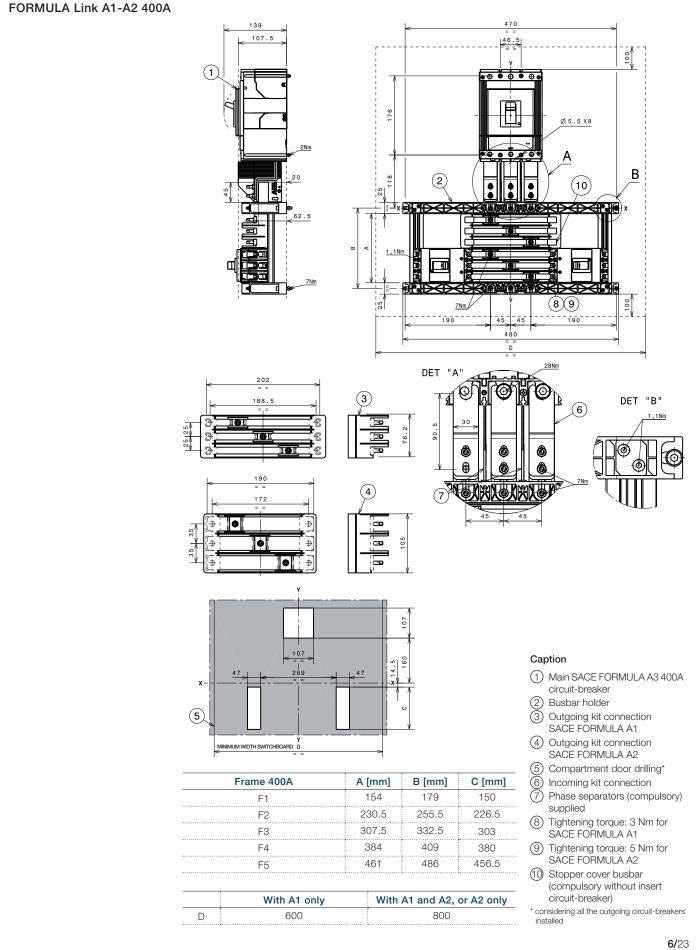


FORMULA Link 630A

FORMULA Link A1-A2 630A

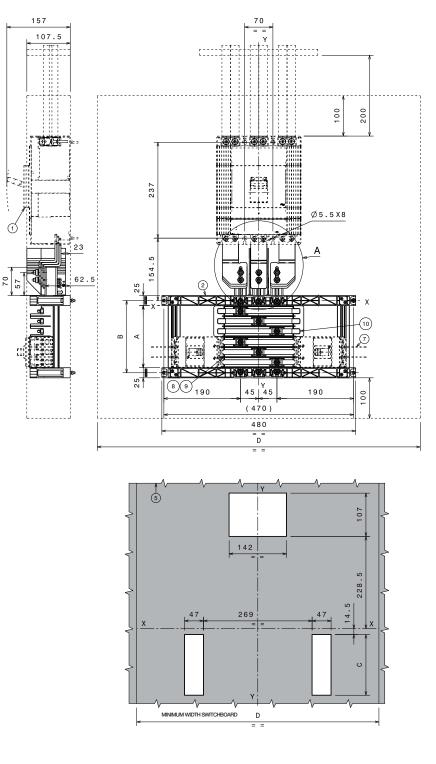

	Frame 630A	A [mm]	B [mm]	C [mm]
	F1	154	179	150
	F2	230.5	255.5	226.5
	F3	307.5	332.5	303
F4		384	409	380
	F5	461	486	456.5
	With A1 only	With	A1 and A2,	or A2 only
D	600		800	

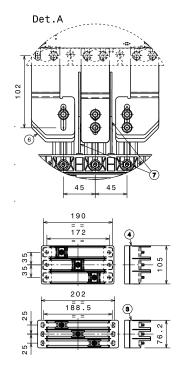




- (2) Busbar holder
- (3) Outgoing kit connection SACE FORMULA A1
- (4) Outgoing kit connection
- SACE FORMULA A2
- 5 Compartment door drilling\*
- 6 Incoming kit connection7 Phase separators (compulsory)
- supplied
- (8) Tightening torque: 3 Nm for SACE FORMULA A1
- (9) Tightening torque: 5 Nm for SACE FORMULA A2
- Stopper cover busbar (compulsory without insert circuit-breaker)

\* considering all the outgoing circuit-breakers installed


FORMULA Link 800A

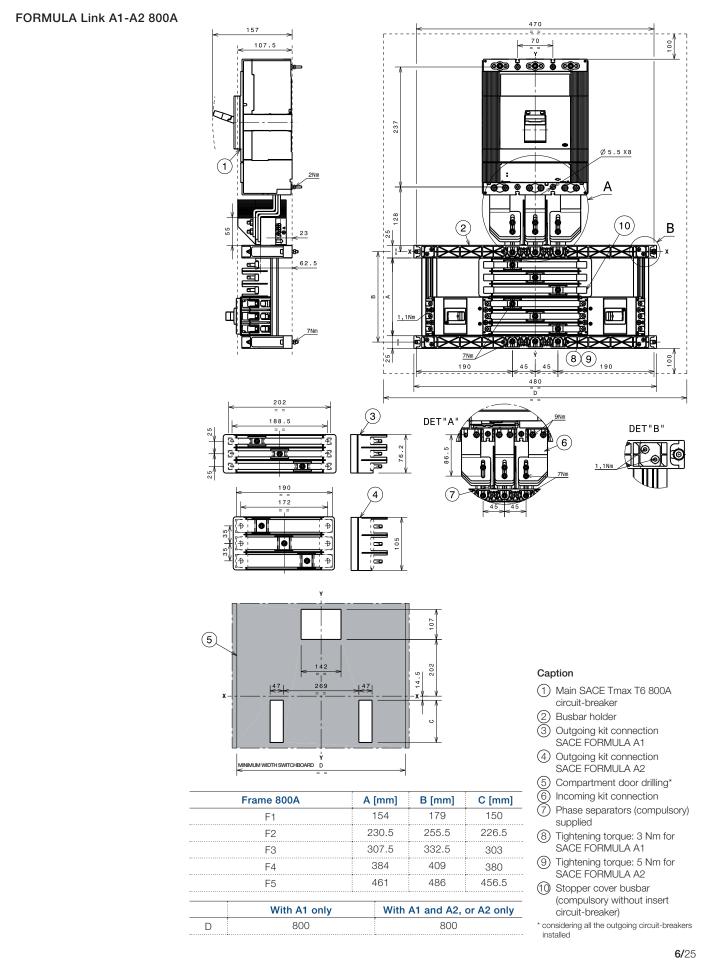

Distances to be respected


#### Insulation distances to be respected for installation in cubicles


	Α	В	С
	[mm]	[mm]	[mm]
A1	45	20	35
A2	60	25	60
A3*	30*	25	25

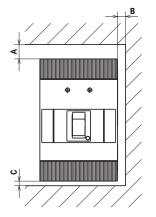

# Minimum centre distance between two circuit-breakers side by side


	Circuit-breaker width [mm]			(	Centre distance I [mm]			
	1 pole	2 poles	3 poles	4 poles	1 pole	2 poles	3 poles	4 poles
A1	25.4	50.8	76.2	101.2	25.4*	50.8*	76.2*	101.2*
A2	36	70	105	140	36*	70*	105*	140*
A3	-	-	140	184	-	-	140**	184**
** Wit	* For 440V≤Ue≤550V I 3p=180mm and I 4p=224mm     ** With separator to be requested apart and to be inserted between two     circuit-breakers side by side.							

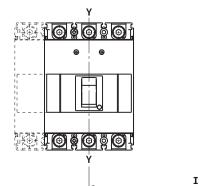


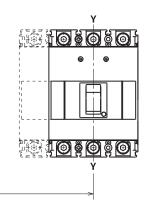

#### Minimum centre distance between two stacked circuitbreakers

 	H [mm]
A1	80
A2	140
A3	160

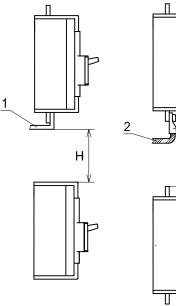



#### Caption

(1) Connection not insulated

(2) Insulated cable(3) Cable terminal

3

Н

6/26 1SDC210032D0202



### Content

G1 - Circuit-breaker	<b>7</b> /2
G2 - Performance Parameters	<b>7</b> /4
G3 - Releases and Protections	<b>7</b> /6
G4 - Regulations and Standards	<b>7</b> /7

### Glossary

### G1 - Circuit-breaker

#### G1.1 Circuit-breaker

A mechanical switching device, capable of making, carrying and breaking currents under normal circuit conditions and also making, carrying for a specified time and breaking currents under specified abnormal circuit conditions such as short-circuit.

#### G1.2 Protection degree (IP)

The IP protection degree indicates the level of protection for apparatus against contact with live parts and penetration of liquids and solid foreign bodies.

#### G1.3 Rate of contact wear

Percentage of contacts wear, indicatively gives the state of durability of the circuitbreaker contacts.

#### G1.4 Double insulation

A double insulation between the live power parts and the front parts of the apparatus where the operator works during normal plant service is present in all the circuit-breakers, so as to eliminate the risk of contacts with live parts. The seat of each electrical accessory is completely segregated from the power circuit. In particular, the operating unit is completely insulated in relation to the voltage circuits. Furthermore, both between the internal live parts and in the area of the connection terminals, the circuit-breaker has redundant insulation. In fact, the distances between the connection terminals are greater than those required by the IEC Standards and conform to what is prescribed by the American UL 489 Standard.

#### G1.5 Positive operation

The operating lever always indicates the actual position of the mobile circuit-breaker contacts:

- red line (I): Closed position;
- green line (O): Open position;
- yellow-green line: Trip Position, open due to release trip or test pushbotton.

The indications are precise and reliable, in conformity with what is prescribed by the IEC 60073 and IEC 60417-2 Standards.

Tripping of the releases automatically opens the mobile contacts and makes the lever move into the Trip position: to reclose the circuit-breaker it must be reset, by pushing the operating lever from the trip position to the Open position.

The operating mechanism of the circuit-breaker has free trip, independent of the pressure on the lever and of the speed of the operation.

From this position it is possible to close the circuit-breaker.

#### G1.6 Isolation behaviour

Characteristic of a mechanical operating device which, in the open and trip position, carries out a disconnection function and guarantees an insulation distance (distance between fixed and mobile contacts) sufficient to guarantee safety.

#### G1.7 Electromagnetic compatibility

In conformity with the IEC 60947-2 Standards (Annex B + Annex F, European Directive No. 89/336) relative to electromagnetic compatibility EMC, the circuitbreakers used with electronic trip units and residual current releases are guaranteed to function in the presence of disturbances caused by:

- electromagnetic apparatus;
- atmospheric disturbances which flow through power networks;
- interferences from radio waves;
- discharges of electrical type.

Furthermore, the circuit-breakers does not generate disturbances to other electronic apparatus near the place of installation.

#### G1.8 Tropicalization

All the circuit-breakers can be used in the most severe environmental conditions defined by the following standards:

- IEC 60721-2-1 (climograph 8);
- IEC 60068-2-30;
- IEC 60068-2-2;
- IEC 60068-2-52.

Tropicalization is guaranteed by:

- synthetic resin insulating boxes reinforced with fibreglass;
- anti-corrosion treatment of the main metallic parts;
- galvanisation Fe/Zn (UNI ISO 2081), protected by a conversion layer without hexavalent chromium (in conformity with the ROHS) with the same corrosion resistance guaranteed by ISO 4520 class 2c;
- application of anti-condensation protection for electronic overcurrent releases and relative accessories.

### Glossary

### G2 - Performance Parameters

#### G2.1 Frame size

A term designating a group of circuit-breakers, the external physical dimensions of which are common to a range of current ratings (considering the same number of poles). Frame size is expressed in amperes corresponding to the highest current rating of the group.

#### G2.2 Rated current (In)

For the circuit-breakers the rated current represent the current which the circuit-breaker can carry in uninterrupted duty.

#### G2.3 Rated service voltage (Ue)

The a rated service voltage of an equipment is the voltage value which, together with the rated service current, determines the use of the equipment and which the applicable tests and the utilization category refer to.

#### G2.4 Rated insulation voltage (Ui)

The rated insulation voltage of an equipment is the value of voltage to which dielectric tests and the surface creepage distances are referred. In no case the maximum value of the rated operating voltage shall exceed that of the rated insulation voltage.

#### G2.5 Rated impulse withstand voltage (Uimp)

The peak value of an impulse voltage of prescribed form and polarity which the equipment is capable of withstanding without failure under specified test conditions and to which the clearance values are referred.

#### G2.6 Rated ultimate short-circuit breaking capacity (Icu)

The rated ultimate short-circuit breaking capacity of a circuit-breaker is the maximum short-circuit current value which the circuit-breaker can break twice (in accordance with the cycle O - t - CO), at the corresponding rated operational voltage. After the indicated sequence the circuit-breaker is not required to carry its rated current.

#### G2.7 Rated service short-circuit breaking capacity (lcs)

The rated service short-circuit breaking capacity of a circuit-breaker is the maximum short-circuit current value which the circuit-breaker can break three times in accordance with a sequence of opening, pause and closing operations (O - t - CO - t - CO) at a defined rated service voltage (Ue) and at a defined power factor. After the indicated sequence the circuit-breaker is required to carry its rated current.

#### G2.8 Rated short-circuit making capacity (Icm):

The rated short-circuit making capacity of an equipment is the value, stated by the manufacturer, at the rated service voltage, at rated frequency, and at a specified power factor for alternating current or time constant direct current. It is expressed as the maximum peak value of the prospective current under specified conditions.

#### G2.9 Utilization category of circuit-breakers

The utilization category of a circuit-breaker must be established according to whether or not it is specifically intended for selectivity by means of an intentional time delay, with respect to other circuit-breaker in series on the load side, under short-circuit conditions. Two category of use can be specified:

Category A - Circuit-breakers not specifically intended for selectivity under short-circuit conditions with respect to other short-circuit protective devices in series on the load side, i.e. without a short-time withstand current rating.

Category B - Circuit-breakers specifically intended for selectivity under short-circuit conditions with respect to other protection devices in series on the load side, i.e. with intentional time delay (which can be adjustable) applicable under short-circuit conditions. These circuit-breakers have specified short-time withstand current rating (lcw). A circuit-breaker is classified in category B if its lcw value is higher than:

- between 12xIn and 5kA, whichever is the greatest, for In≤2500A;
- 30 kA, for In>2500A.

#### G2.10 Mechanical life

The mechanical durability (or mechanical life) of an apparatus is expressed by the number of no-load operating cycles (each operating cycle consists of one closing and opening operation) which can be carried out by the apparatus before it becomes necessary to service or replace any of its mechanical parts (however, normal maintenance is permitted).

#### G2.11 Electrical life

Electrical durability (or electrical life) of an apparatus is expressed by the number of on-load operating cycles and the resistance of the contacts to electrical wear under the conditions specified in the relevant Product Standard.

#### G2.12 Dissipated power

Is the energy loss caused by the Joule effect due to the electrical resistance of the circuit-breaker poles. The energy lost is dissipated in the form of heat.

#### G2.13 Utilization categories of the auxiliary contacts

The utilization categories given in the table are considered standardised. [CEI EN 60947-5-1]

Kind of current	Category	Typical application
	AC-12	Control of restistive loads and solid state loads with isolation by optocouplers
Altornating ourrant	AC-13	Control of solid state loads with transformer isolation
Alternating current	AC-14	Control of small electromagnetic loads (≤72VA)
	AC-15	Control of electromagnetic loads (>72VA)
	DC-12	Control of restistive loads and solid state loads with isolation by optocouplers
Direct current	DC-13	Control of electromagnets
	DC-14	Control of small electromagnetic loads having economy resis- tors in circuit

### Glossary

### **G3 - Releases and Protections**

#### G3.1 Trip unit

Device, mechanically connected to a mechanical operating mechanism, which release the latching parts and allows the opening or closing of the operating device.

#### G3.2 Thermomagnetic trip unit

Thermomagnetic trip units use a bimetal and an electromagnet to detect overloads and short-circuits. They are suitable for protection of both alternating and direct current networks.

#### G3.3 Electronic trip unit

Trip units connected to current transformers (three or four according to the number of conductors to be protected) positioned inside the circuit-breaker, which carry out the double function of supplying the power supply needed for correct operation of the release (self-supply) and of detecting the value of the current which flows through the live conductors. However, they are only compatible with alternating current networks. The signal coming from the transformers and from the Rogowsky coils is appropriately processed by the electronics (microprocessor) which compares it with the set thresholds. When the signal exceeds the thresholds, the trip of the circuit-breaker is operated through an opening solenoid which acts directly on the circuit-breaker operating mechanism unit.

In the case of an auxiliary power supply in addition to self-supply, the voltage must have a value of 24V DC  $\pm$  20%.

#### G3.4 Thermal Protection L

Protection against overloads with long inverse time delay trip.

#### G3.5 Magnetic Protection I

Protection against short-circuit with instantaneous trip.

### Glossary

### G4 - Regulations and Standards

#### G4.1 Standards

Technical specification approved by a recognised organisation with the task of defining the state-of-the-art characteristics (dimensional, environmental, safety, etc.) of a product or service.


#### G4.2 Directive

Ensemble of rules which define the essential requirements regarding safety which the products must comply with in order to guarantee user safety.


#### G4.3 RoHS Directive

European Directive 2002/95/EC of 27 January 2003 (Dlgs 25 July 2005 no. 151) which aims at eliminating or reducing the use of hazardous substances in electrical and electronic apparatus.


It imposes manufacturers and companies to adapt to the relative prescriptions drawing up a manufacturer's declaration, without third party certification.

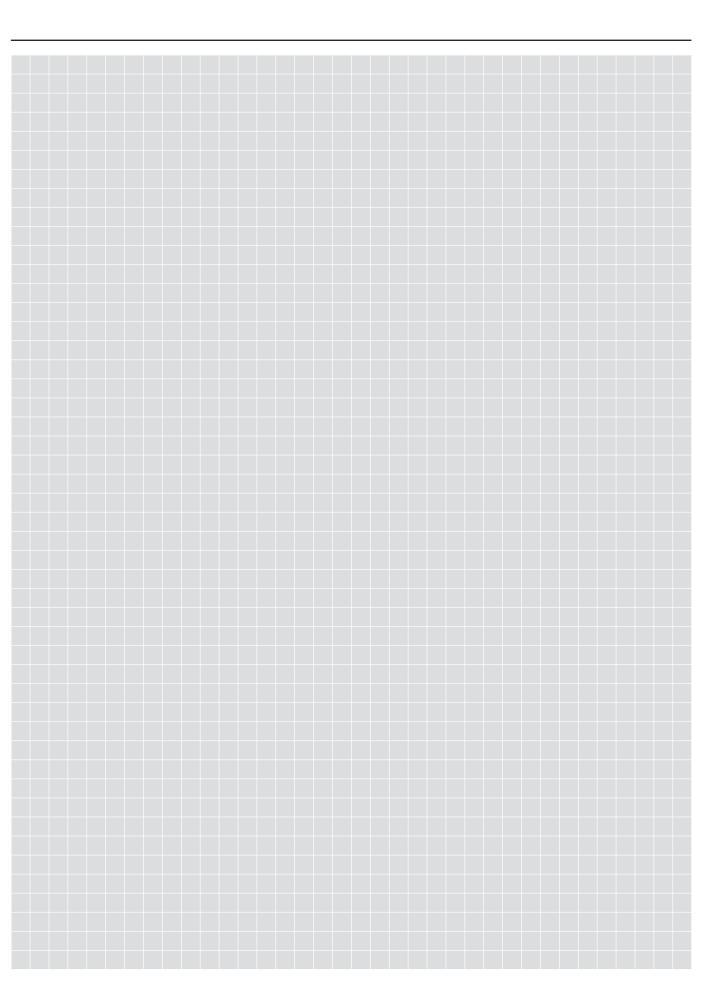

Notes

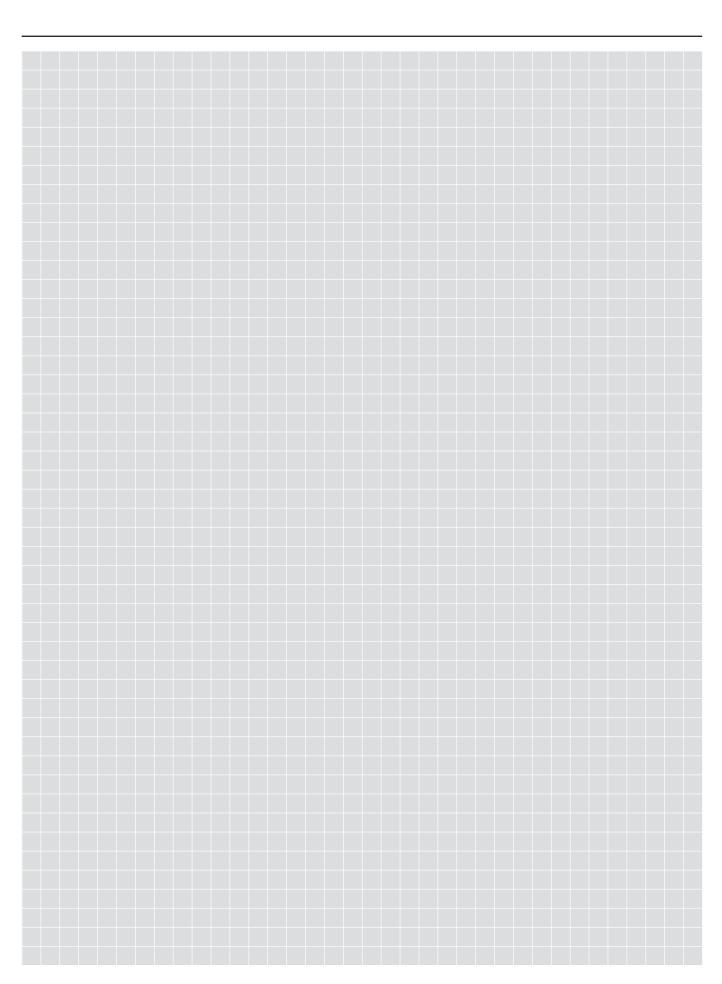

Notes

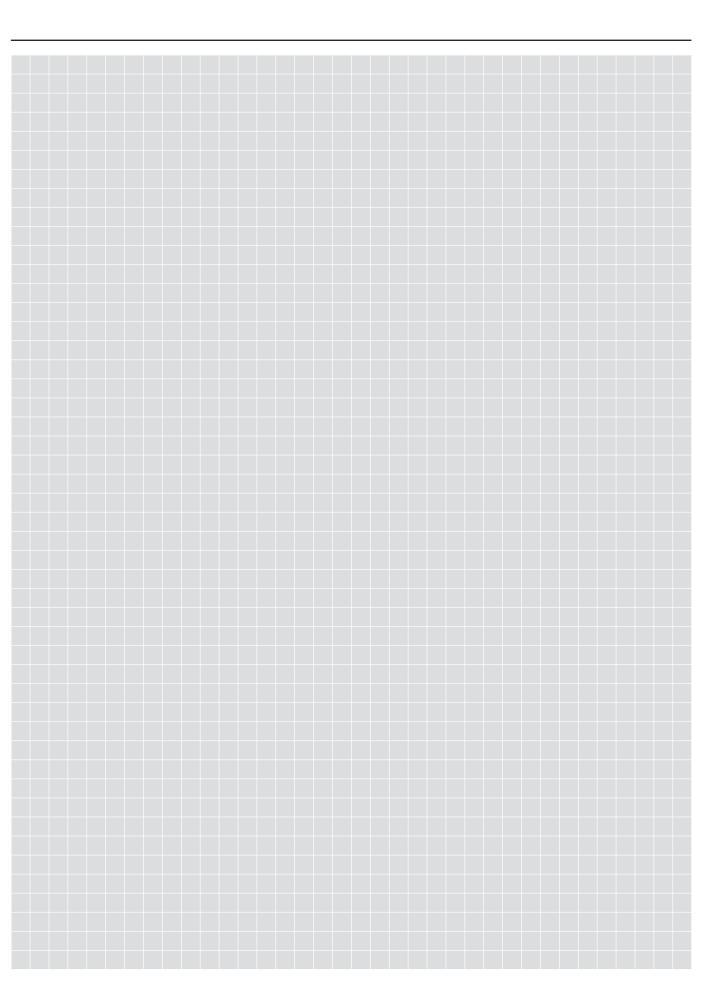

Notes

# Contact us

ABB SACE A division of ABB S.p.A. L.V. Breakers Via Baioni, 35 24123 Bergamo Phone: +39 035 395.111 Fax: +39 035 395.306-433

www.abb.com

The data and illustrations are not binding. We reserve the right to modify the contents of this document on the basis of technical development of the products, without prior notice.

Copyright 2010 ABB. All rights reserved.



