
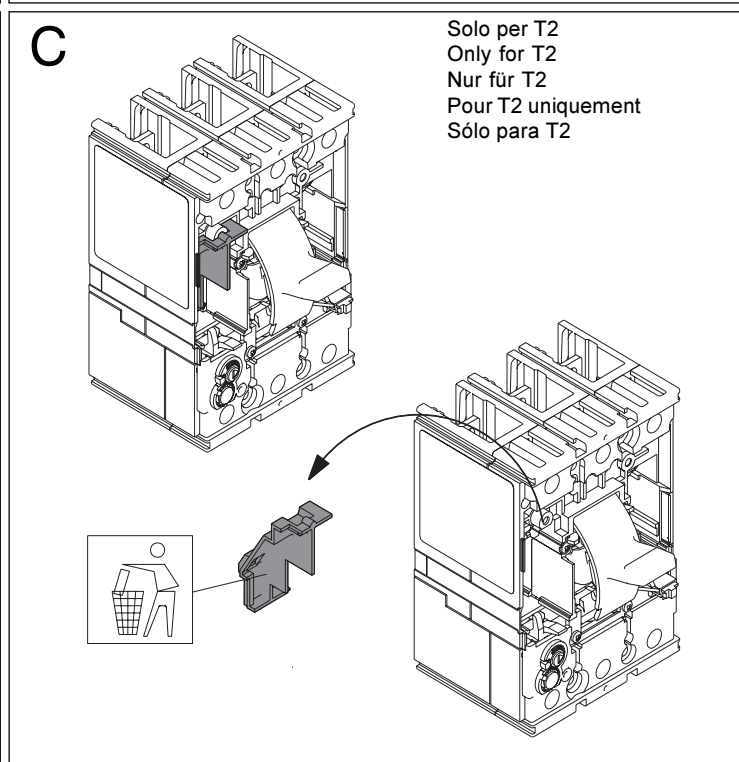
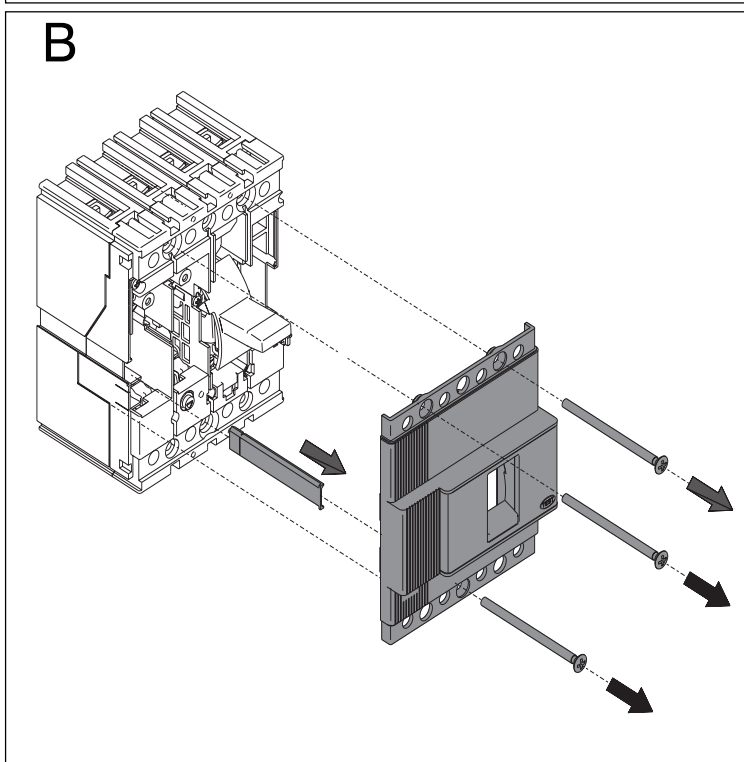
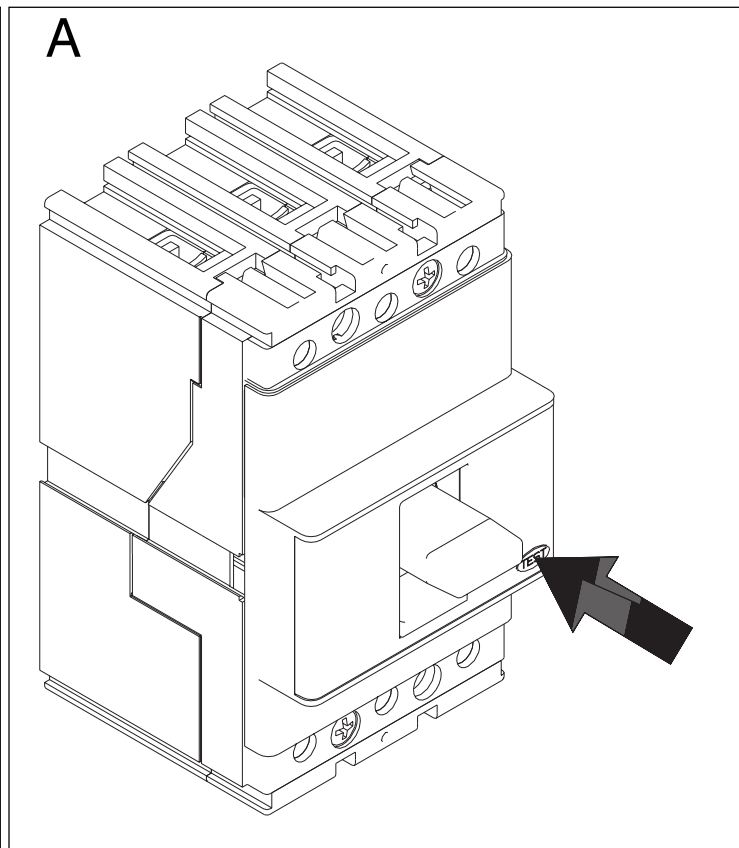



Tmax

DOC. N.° RH0011.601 L0497


SOR - Sganciatore di apertura T1-T2-T3.
SOR - Shunt opening release T1-T2-T3.
SOR - Arbeitsstromauslöser T1-T2-T3.
SOR - Déclencheur d'ouverture à émission T1-T2-T3
SOR - Relé de apertura T1-T2-T3

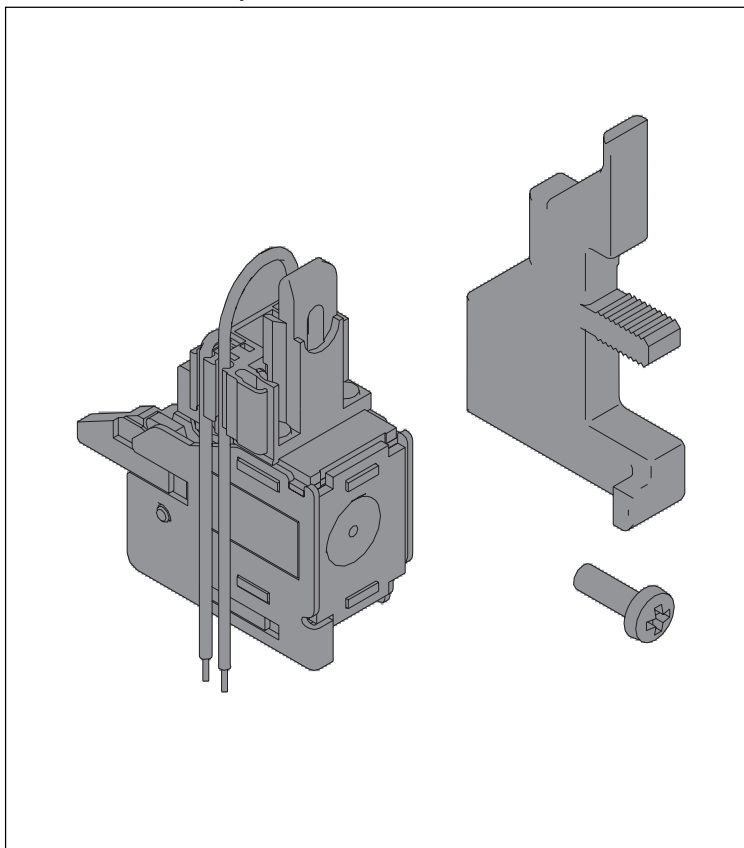


D

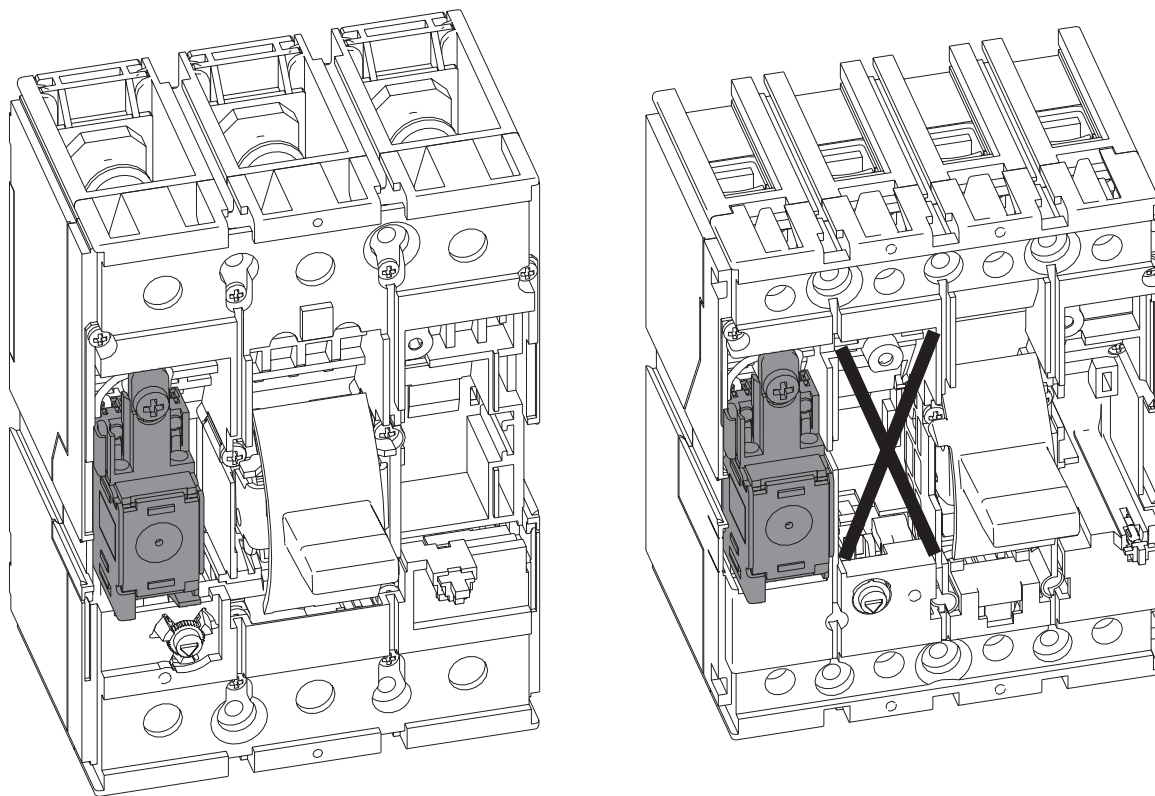

E

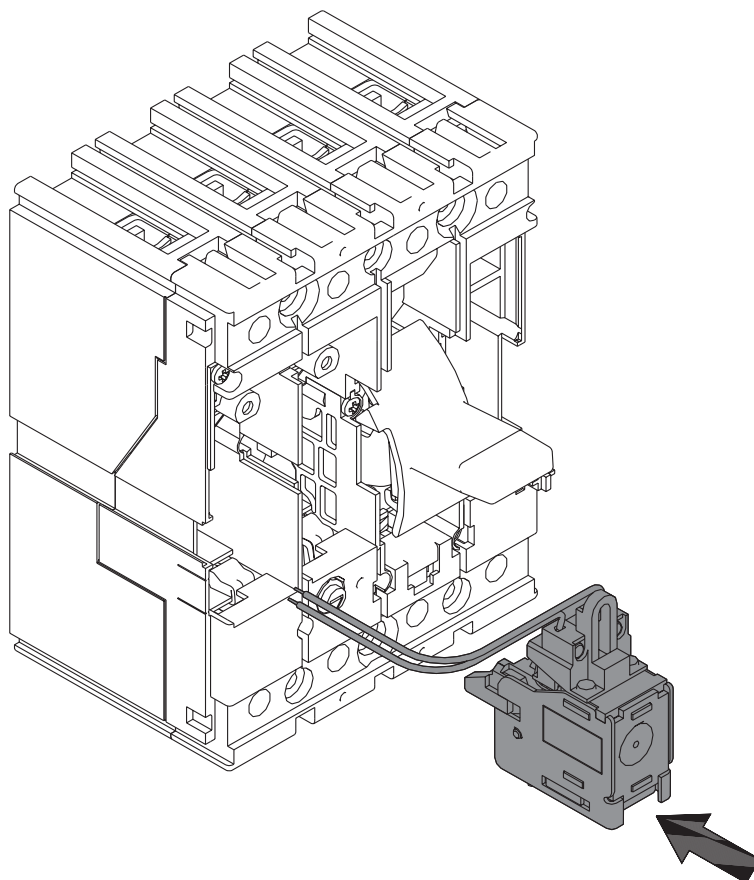


F

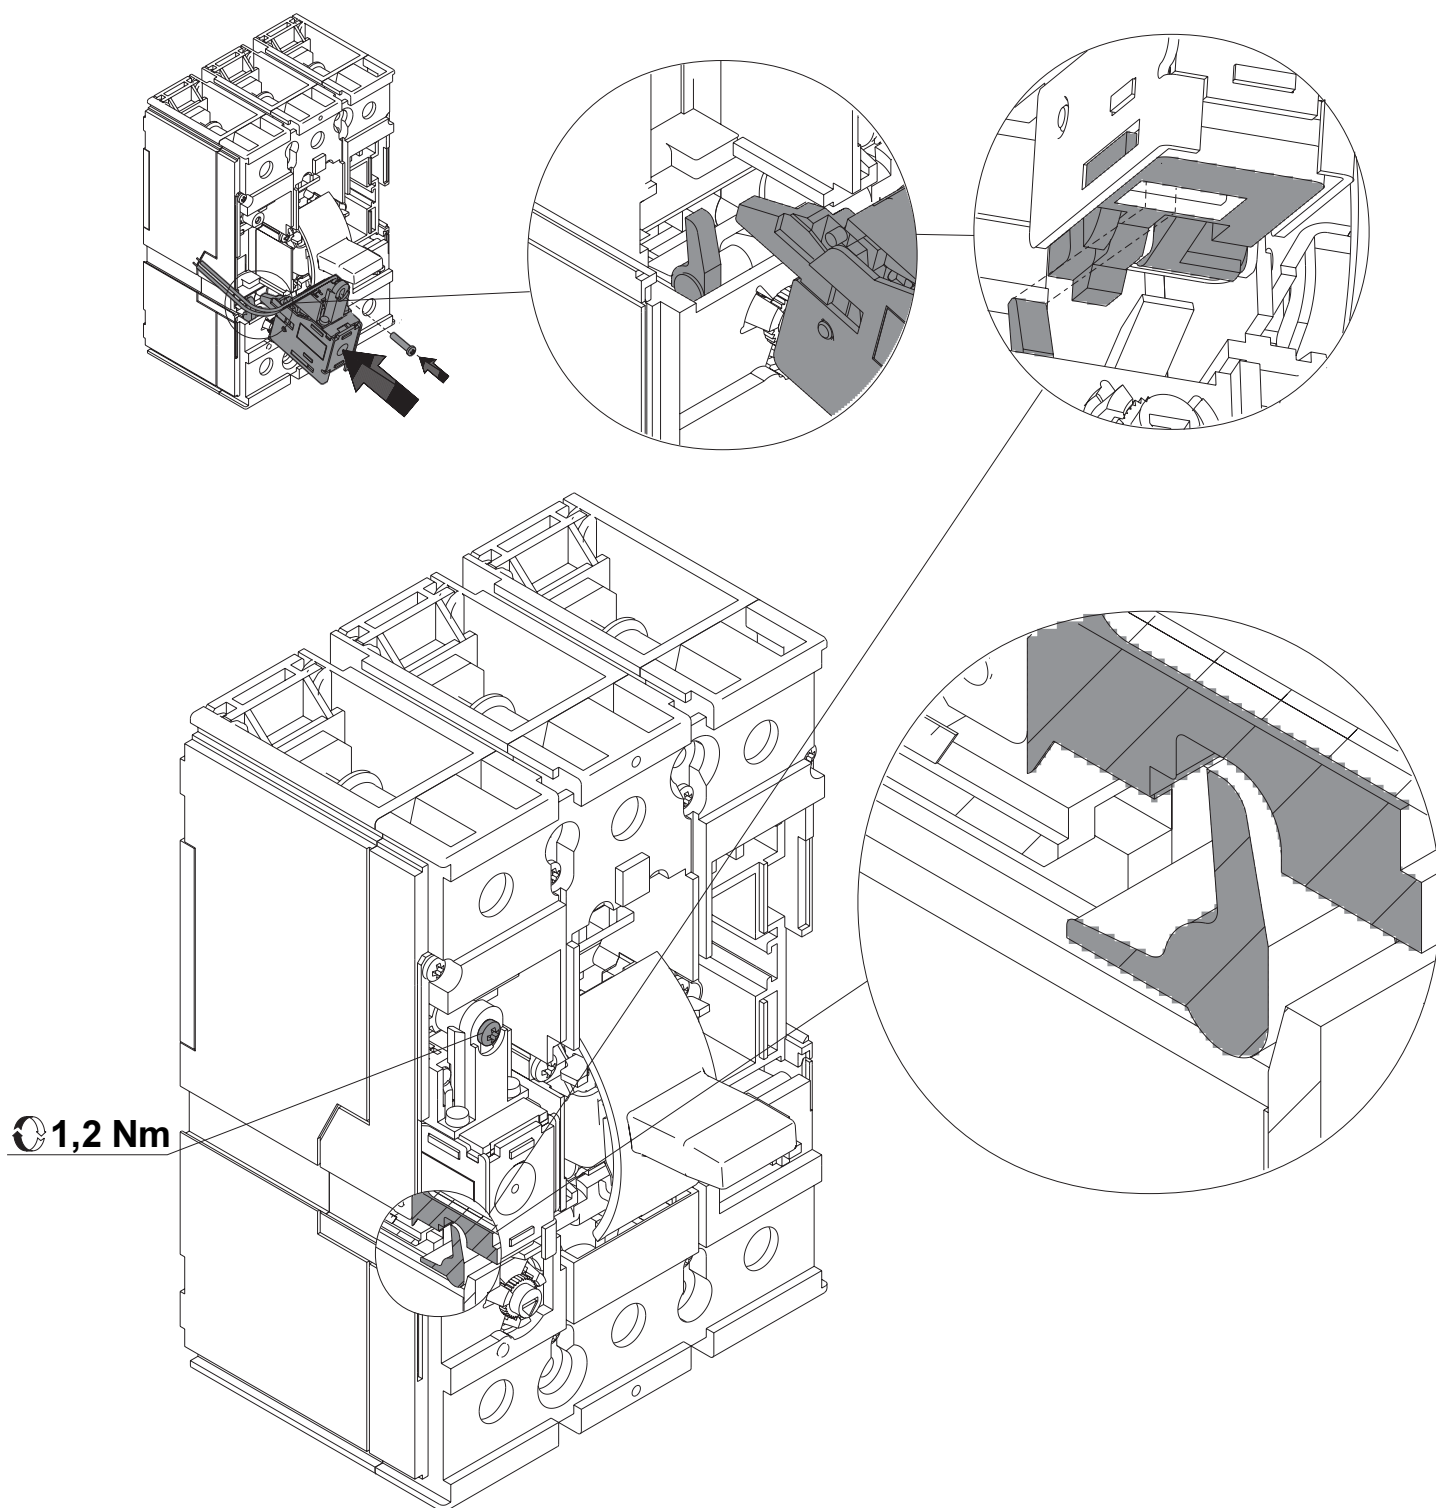


G

T2-PR221DS


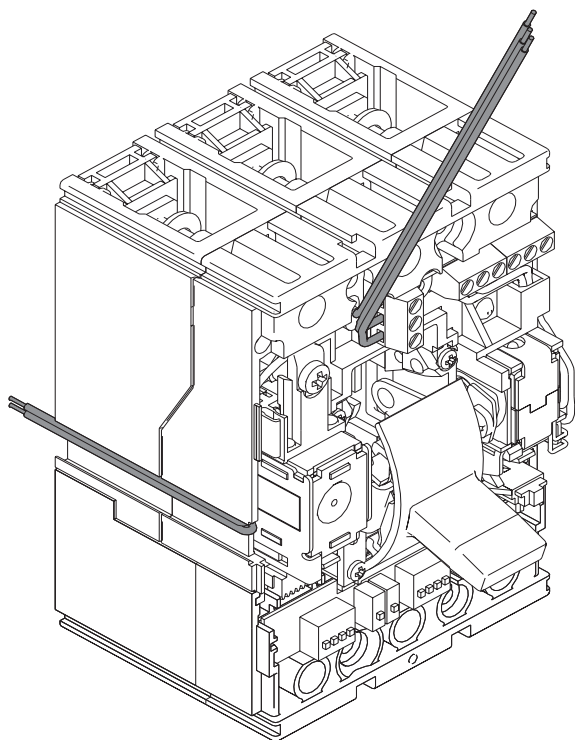


H

T2-PR221DS

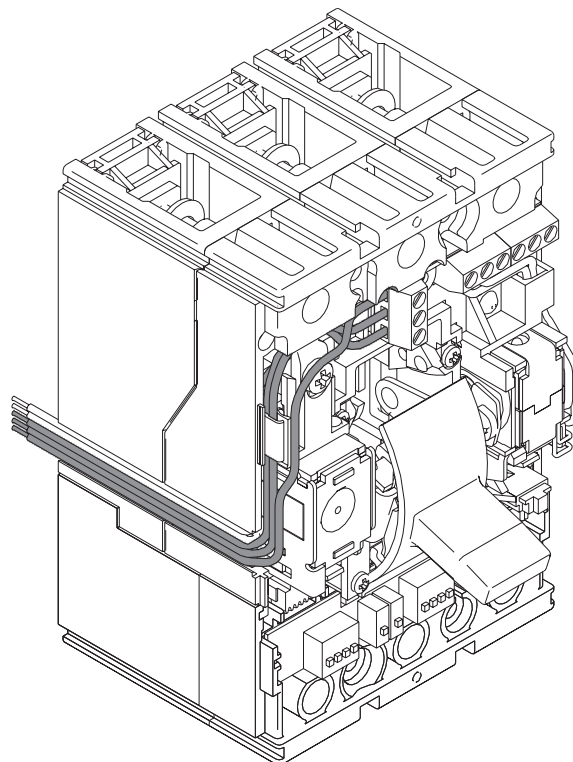


I

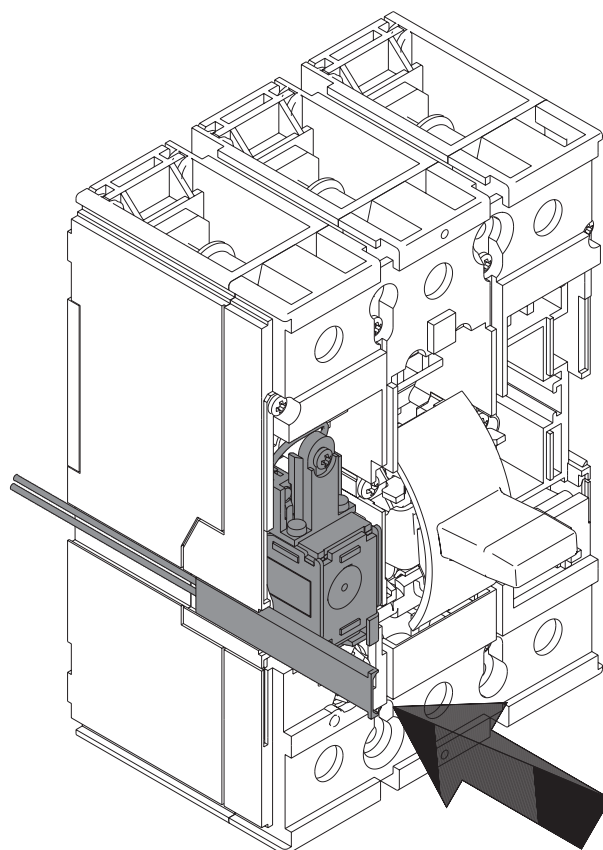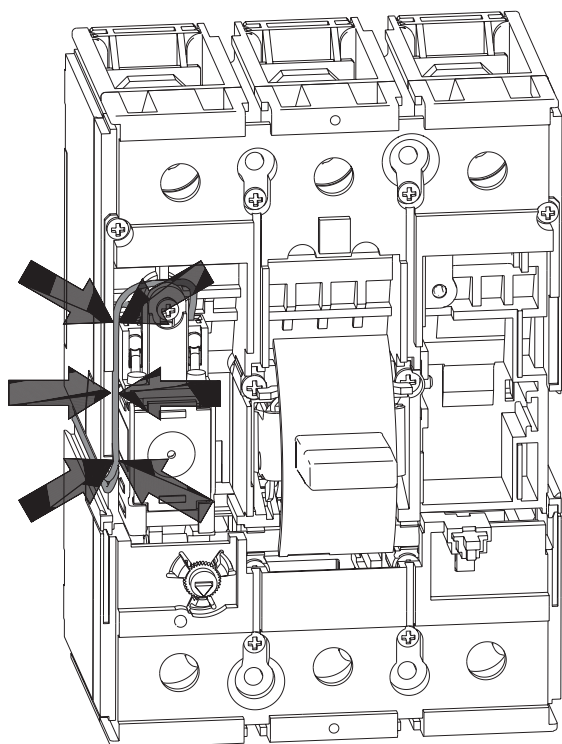



L

T3

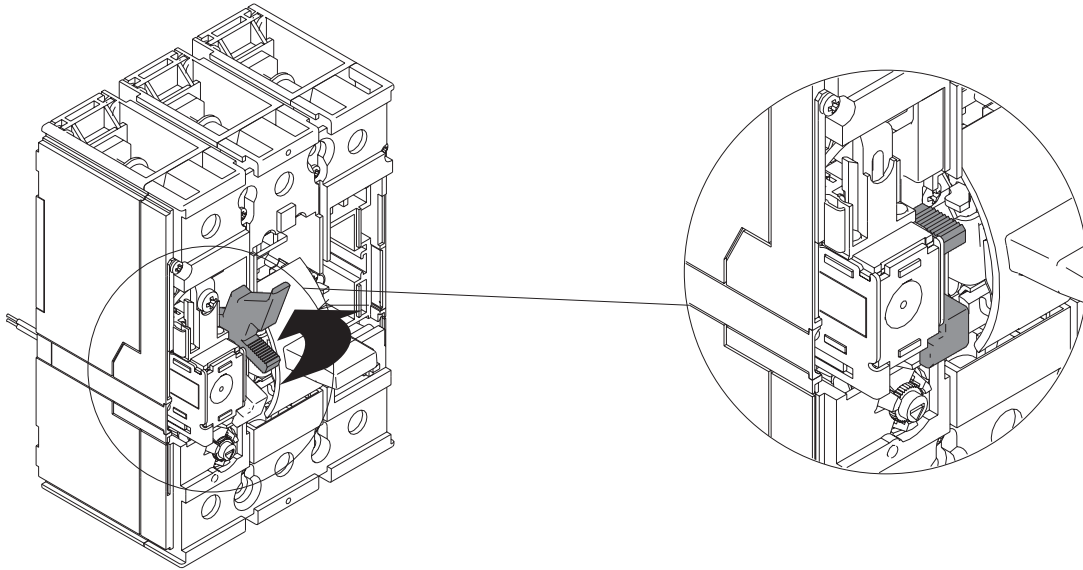

M

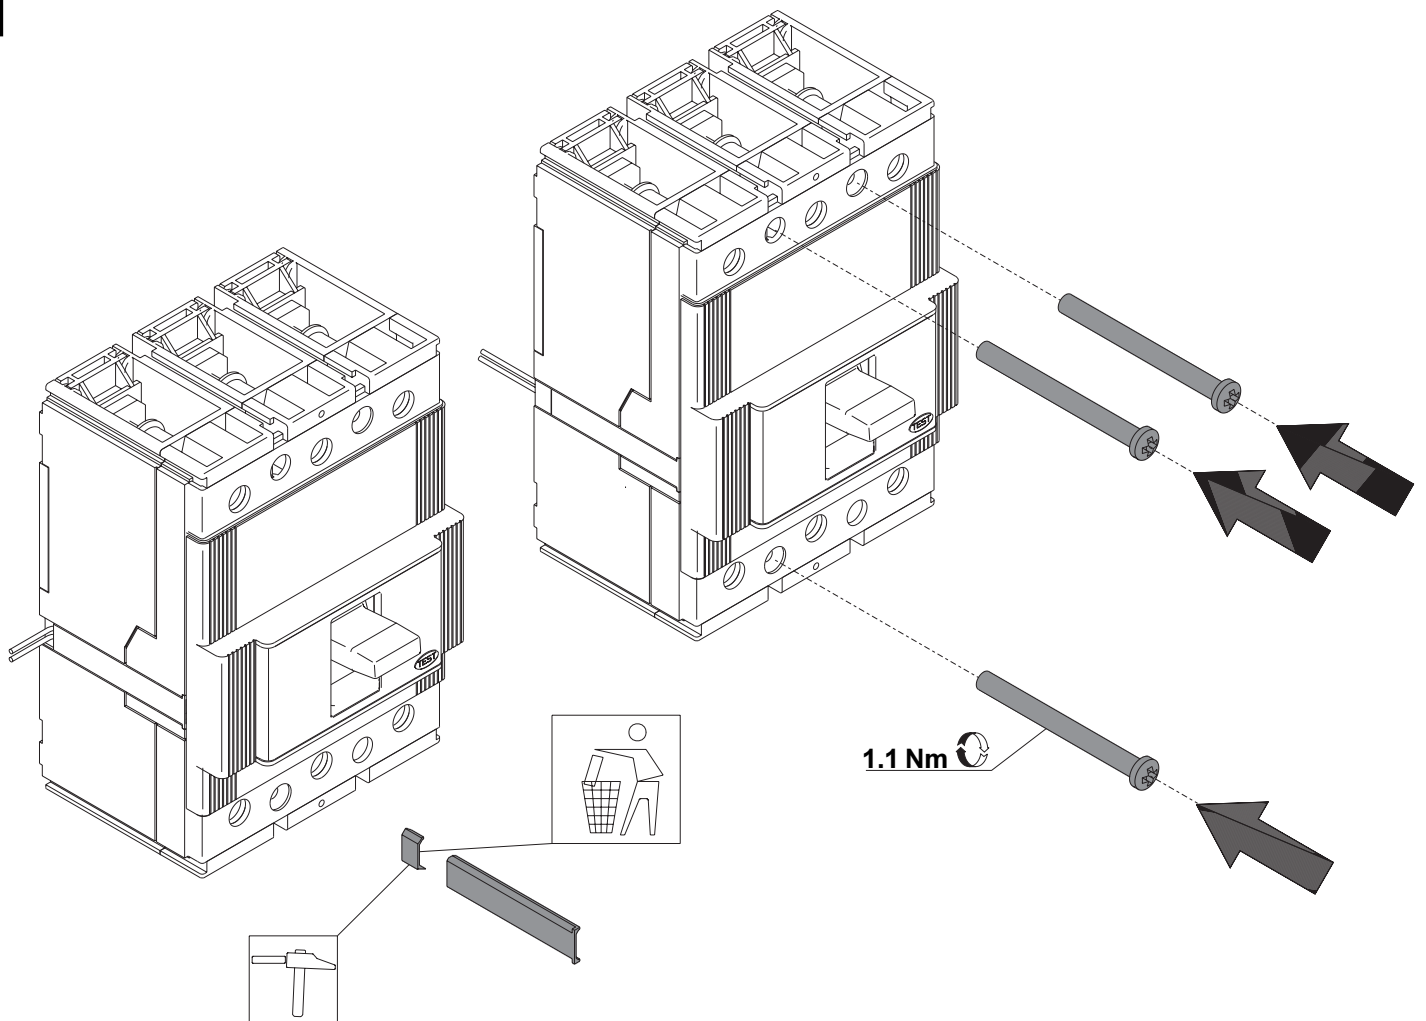

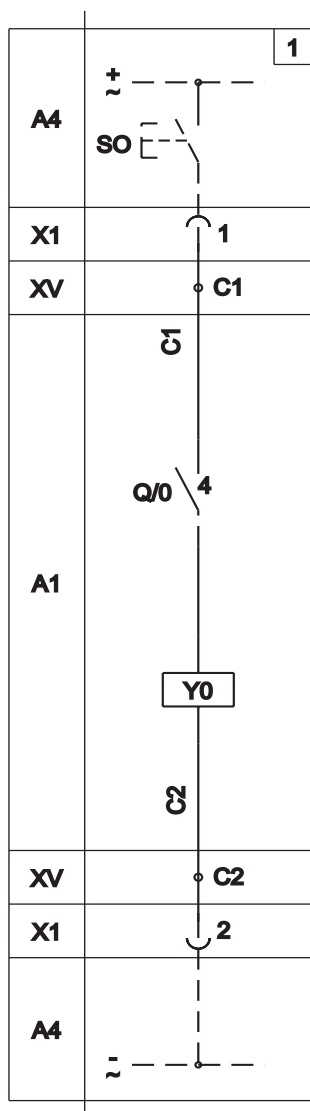**LEGENDA****KEY****ZEICHENERKLÄRUNG****LÉGENDE****LEYENDA**

YO = Sganciatore di apertura

YO = Opening release

YO = Arbeitsstromauslöser

YO = Déclencheur d'ouverture à émission

YO = Relé de apertura

Q/O = Contatti ausiliari dell'interruttore

Q/O = Auxiliary contacts of the circuit-breaker

Q/O = Hilfsschalter des Leistungsschalters

Q/O = Contactos auxiliares del interruptor

Q/O = Contacts auxiliaires du disjoncteur

SO = Pulsante o contatto per l'apertura dell'interruttore

SO = Pushbutton or contact for opening the circuit-breaker

SO = Taster oder Schalter zum Öffnen des Leistungsschalters

SO = Bouton-poussoir ou contact pour l'ouverture du disjoncteur

SO = Pulsador o contacto para la apertura del interruptor