


UVR - Sganciatore di minima tensione T1-T2-T3.

UVR - Undervoltage release T1-T2-T3.

UVR - Unterspannungsauslöser T1-T2-T3.


UVR - Déclencheur à minimum de tension T1-T2-T3

UVR - Relé de minima tensión T1-T2-T3

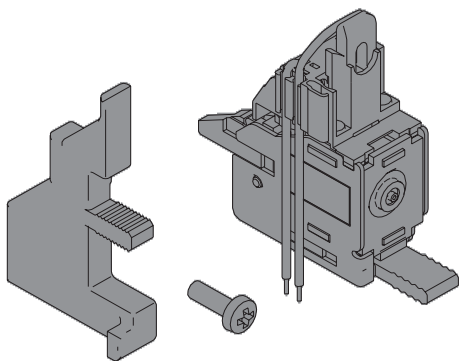


Yu 380 ÷ 440 V ~


Yu 480 ÷ 500 V ~

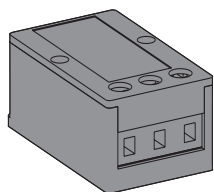


A

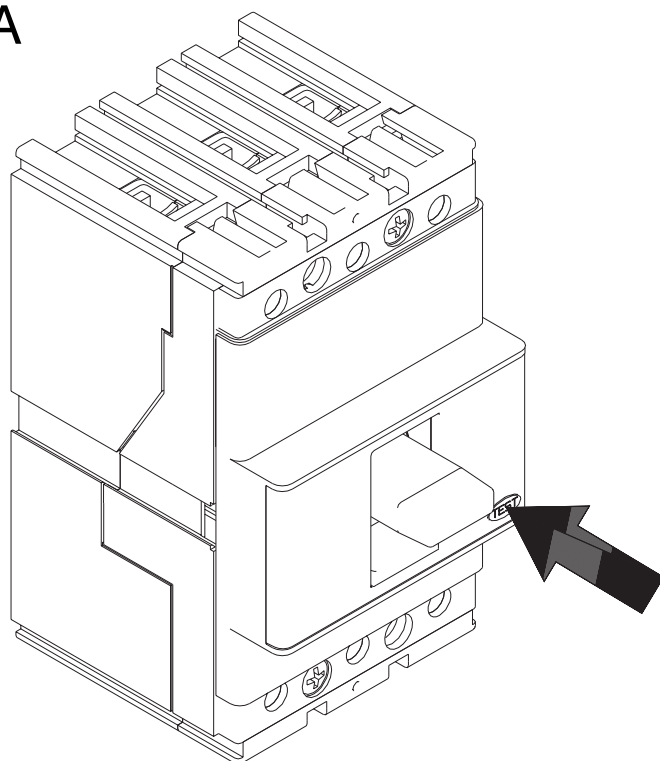

B

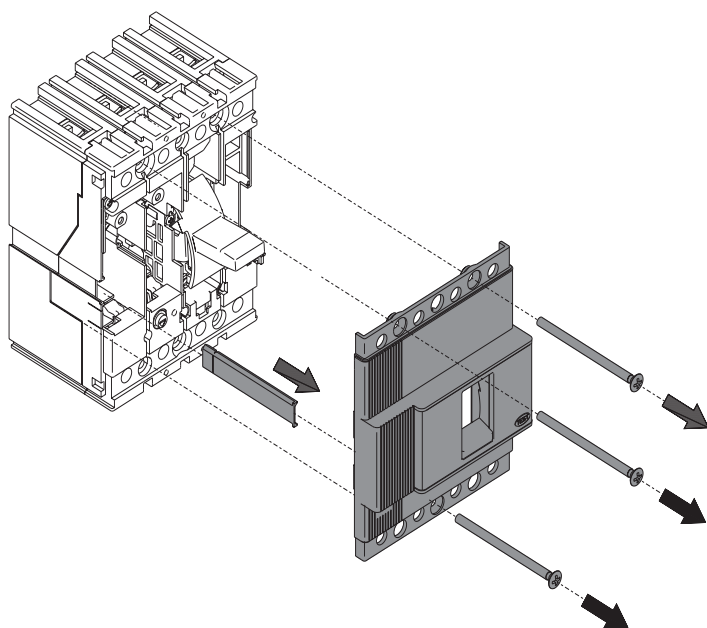


C

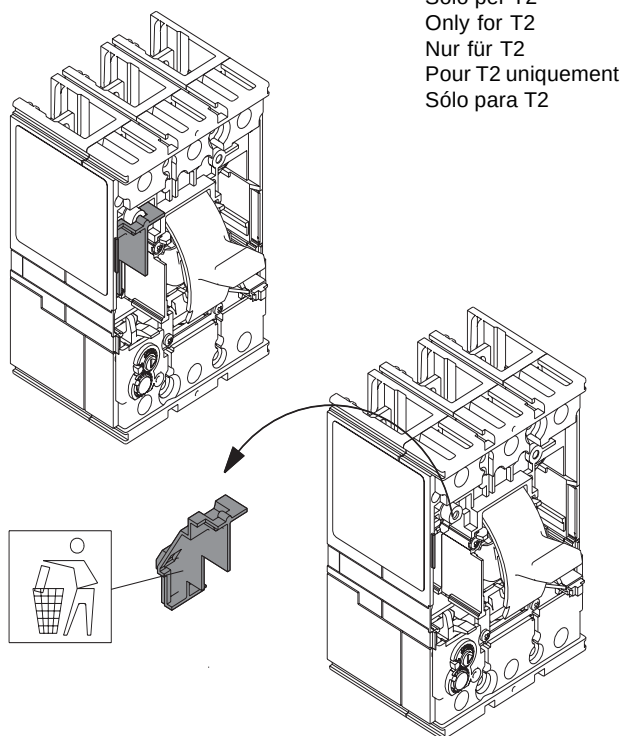


Solo per T2
Only for T2
Nur für T2
Pour T2 uniquement
Sólo para T2


D

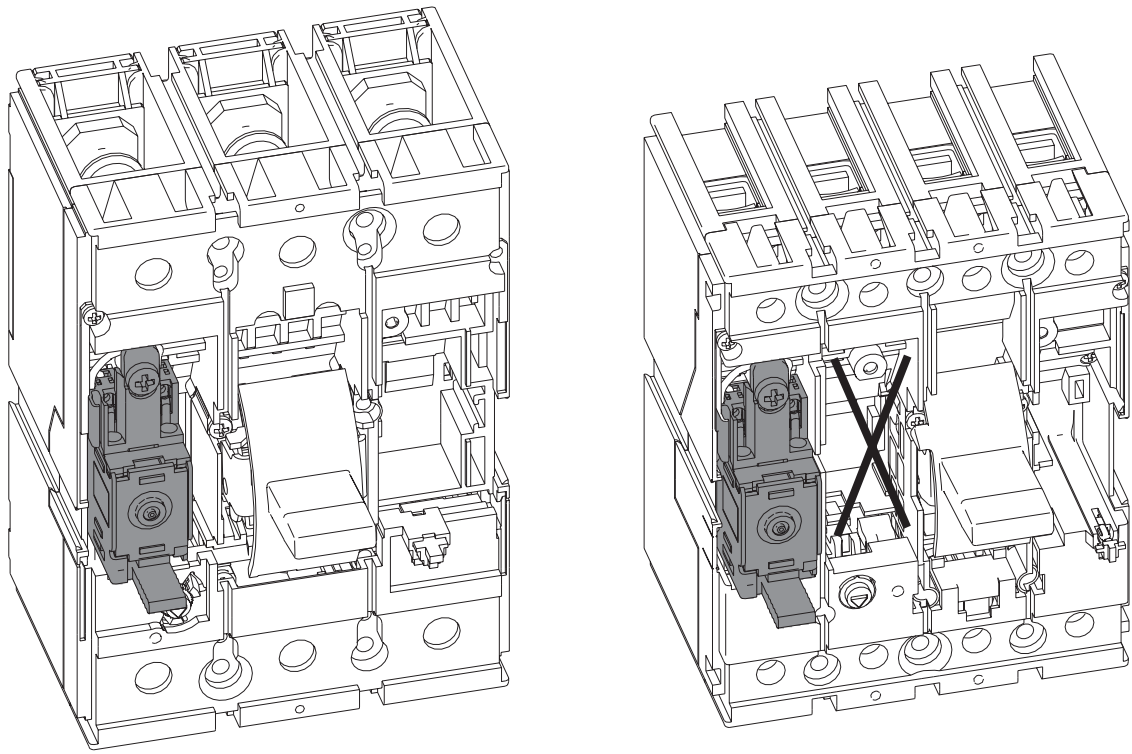

E

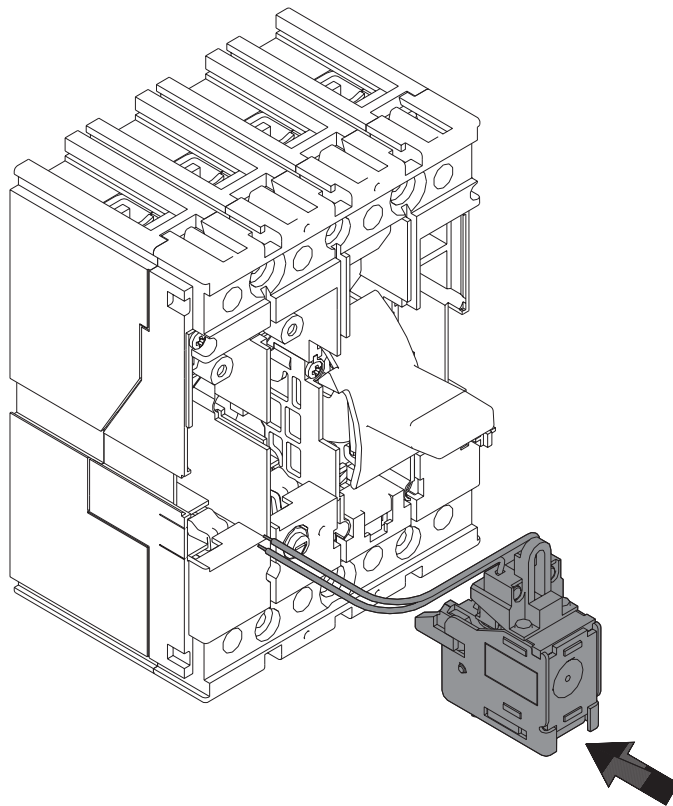


F

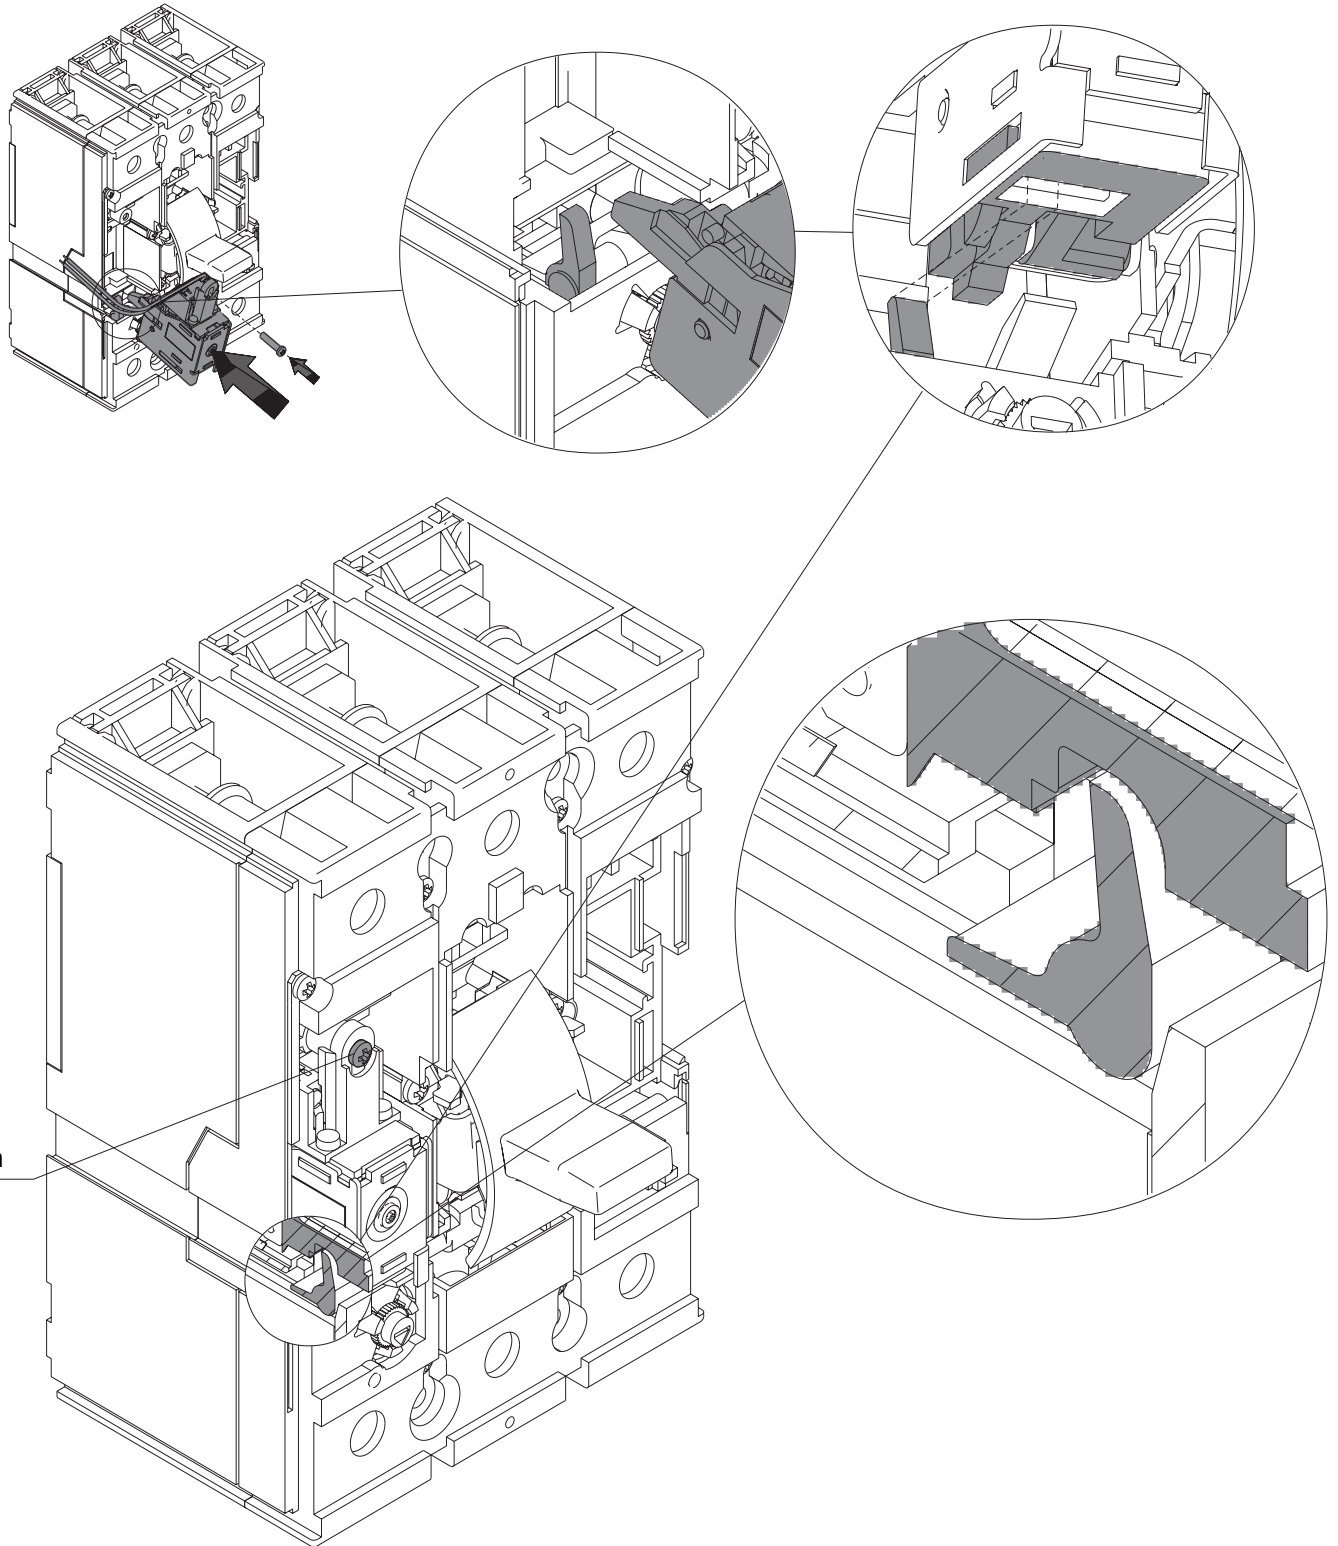


G

T2-PR221DS


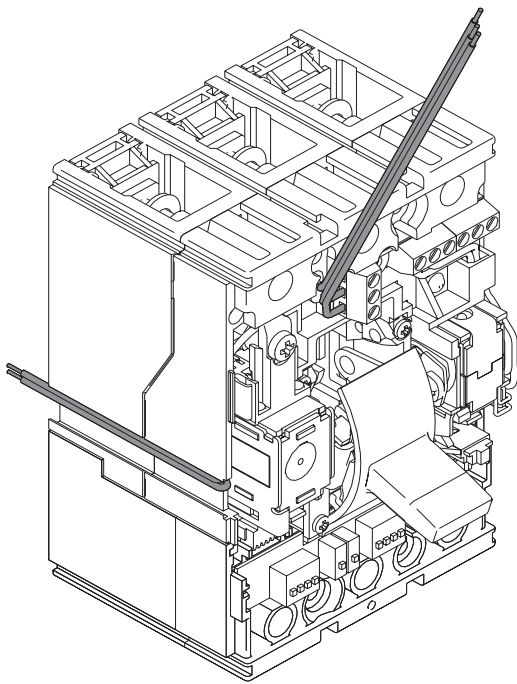


H


T2-PR221DS

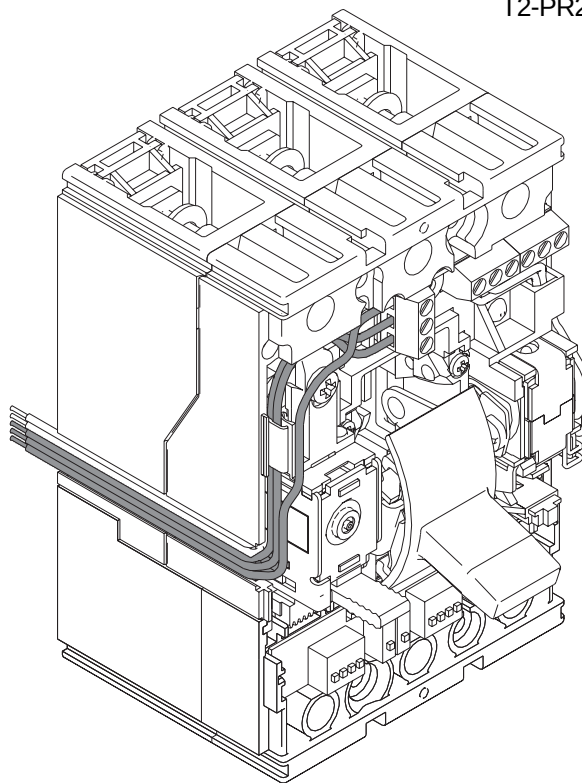


I

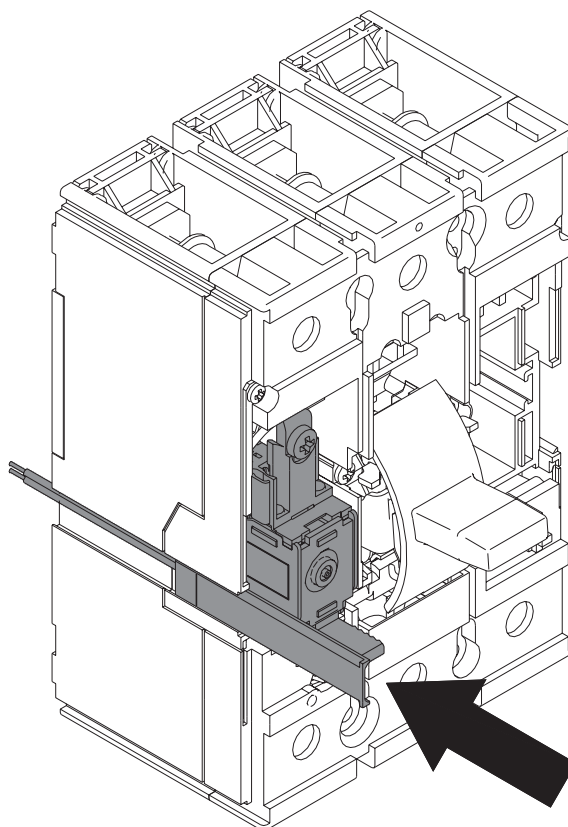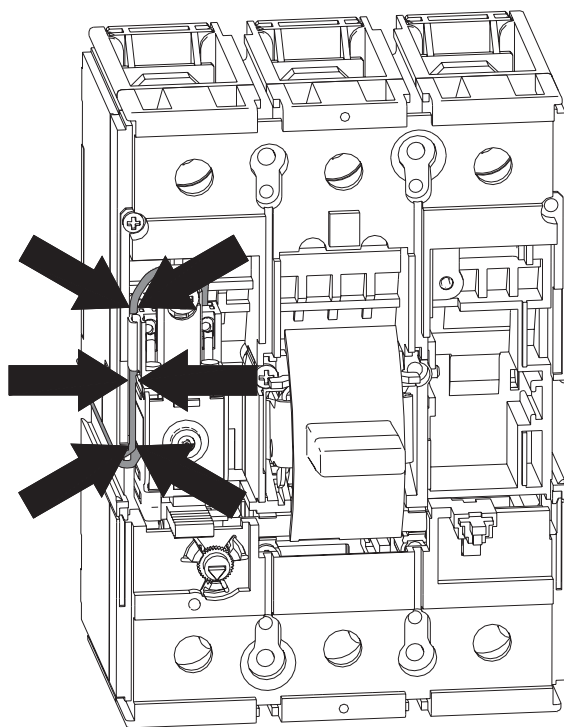


L

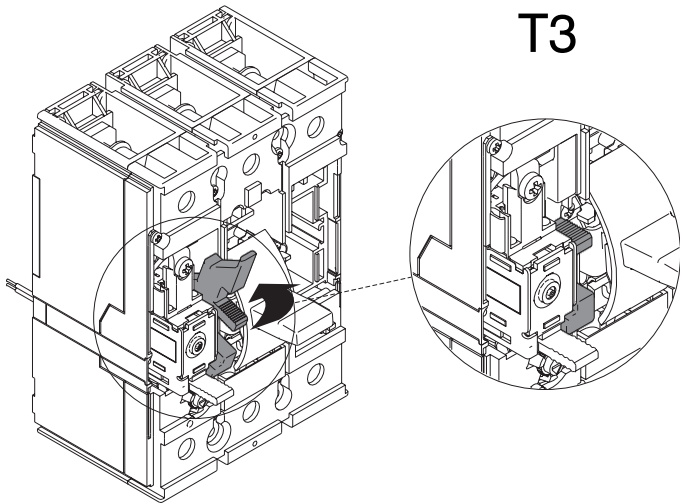

M

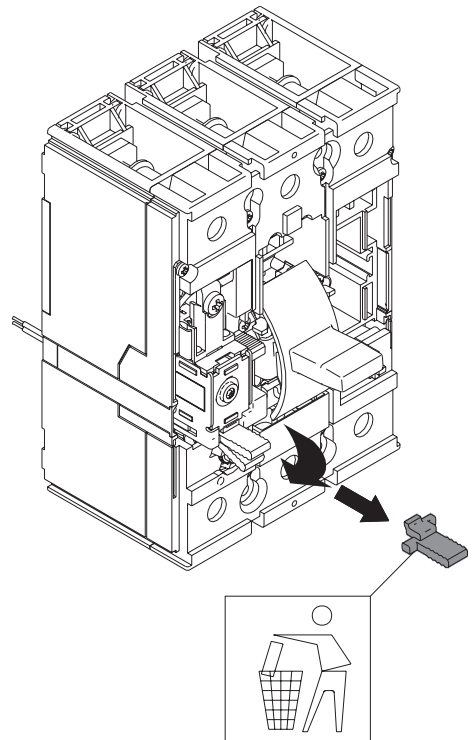


N

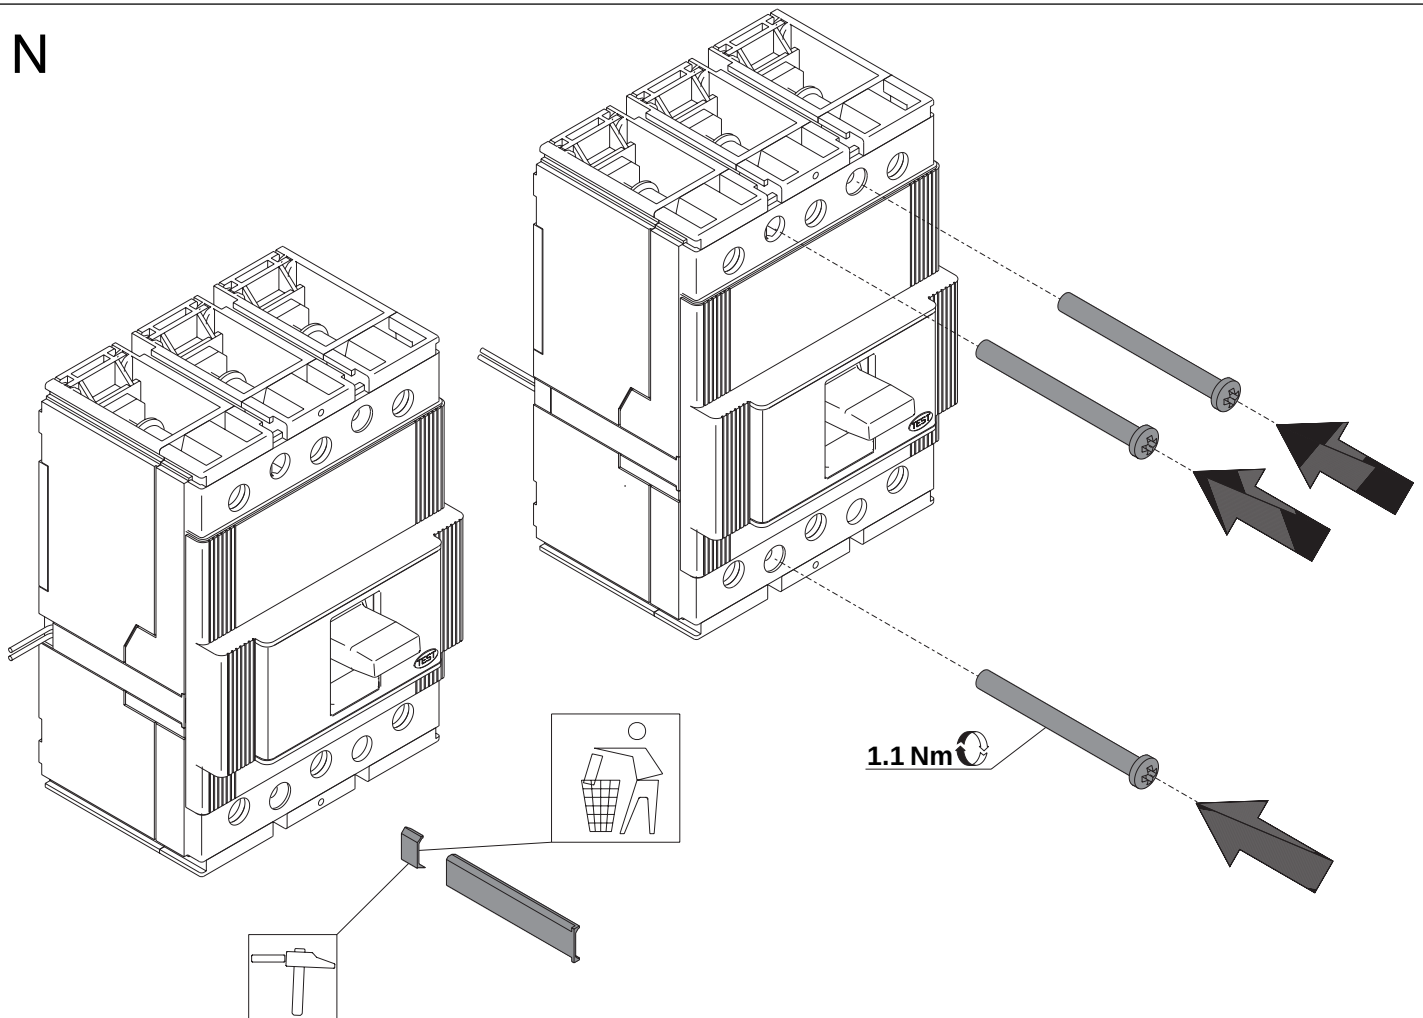


O

Yu 380 ÷ 440 V ~

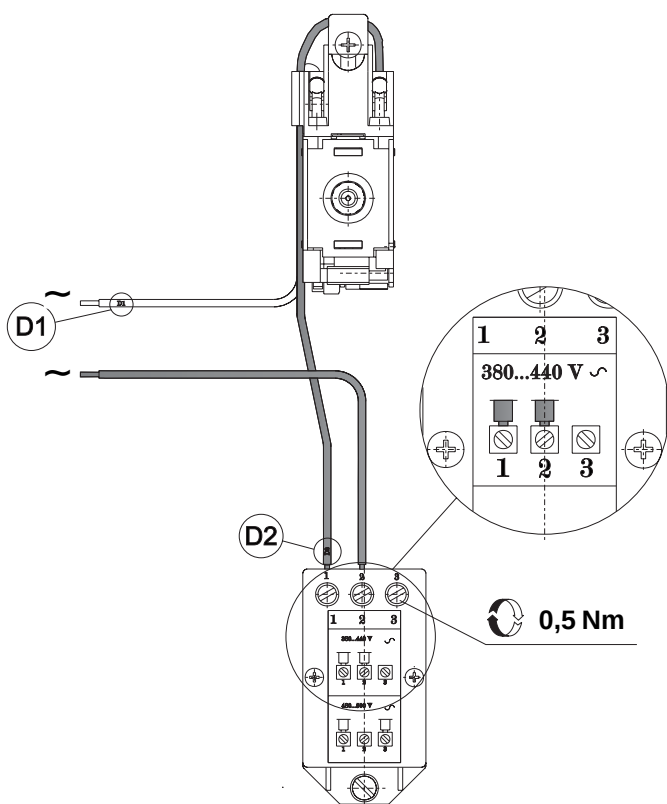


P


Yu 480 ÷ 500 V ~

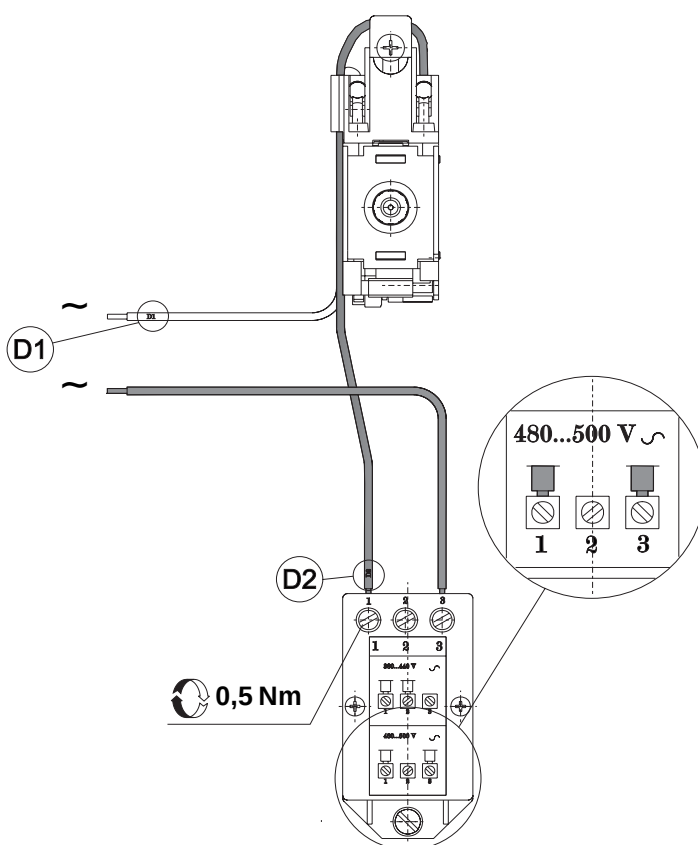

Q

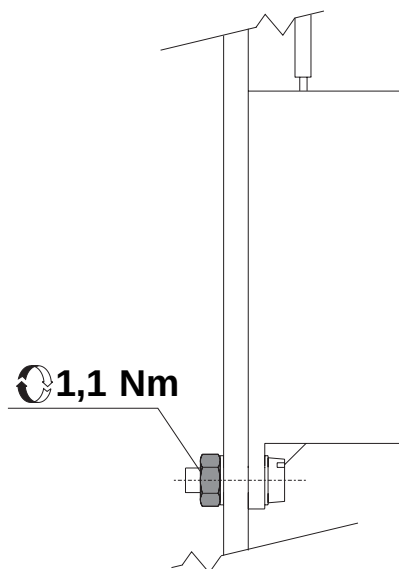

R

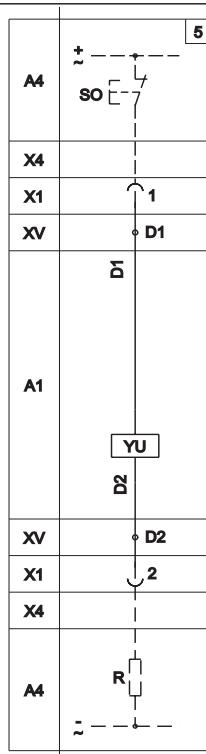

LEGENDA KEY ZEICHENERKLÄRUNG LÉGENDE LEYENDA

SO = Pulsante o contatto per l'apertura dell'interruttore
 SO = Pushbutton or contact for opening the circuit-breaker
 SO = Taster oder Schalter zum Öffnen des Leistungsschalters

SO = Bouton-poussoir ou contact pour l'ouverture du disjoncteur

SO = Pulsador o contacto para la apertura del interruptor

YU = Sganciatore di minima tensione

YU = Undervoltage release

YU = Unterspannungsauslöser

YU = Déclencheur à minimum de tension

YU = Relé de mínima tensión

R = Resistore esterno addizionale per minima tensione alimentato a 380V/440Vca e 480/500Vca.

R = Extra external minimum-voltage resistor powered on 380/440 Vac and 480/500 Vac.

R = Zusätzlicher externer Widerstand für Unterspannungsauslöser; Versorgungsspannung 380/440 V WS und 480/500 V WS.

R = Résistance extérieure supplémentaire pour tension minimum alimentée en 380/440 Vca et 480/500 Vca.

R = Resistencia externa suplementaria para mínima tensión alimentada a 380/440 Vac y 480/500 Vac.

ABB

ABB SACE S.p.A.

Via Baioni, 35

24123 Bergamo Italy

Tel.: +39 035 395.111 -Telefax: +39 035 395.306-433

<http://www.abb.com>